

Assembling instructions for uprights
Mode d'emploi pour montants
Multi-Wand / Multi-board / Tableau variable
2000mm Workline

Mode d'emploi pour montants

Multi-Wand / Multi-board / Tableau variable

2000mm Workline



Free holes are required for thicker worktops.

bedrunka+hirth
Workplace up to date – mehr Raum zum Arbeiten

MONTAGEANLEITUNG

für Tragsäulen

Assembling instructions for uprights

Mode d'emploi pour montants

Multi-Wand / Multi-board / *Tableau variable*


2000mm Workline

Zubehör:


Accessories:

Accessoires:


2x




1x




3x

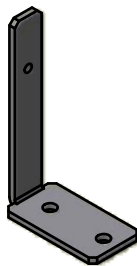

2x

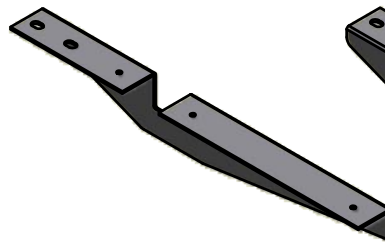

1x

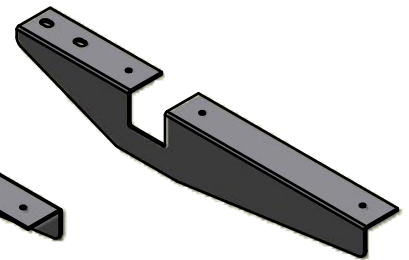

6x M8x45



3x M8x12



9x Ø8



6x M8



9x Ø5x20



6x 30x20

