

MONTAGEANLEITUNG



Unterbau-Hängeschrank T736

Assembling instructions for hanging drawer block T736

Mode d'emploi pour bloc tiroir suspendu T736

555mm x 736mm x 215mm / 365mm / 465mm

WorkErgo

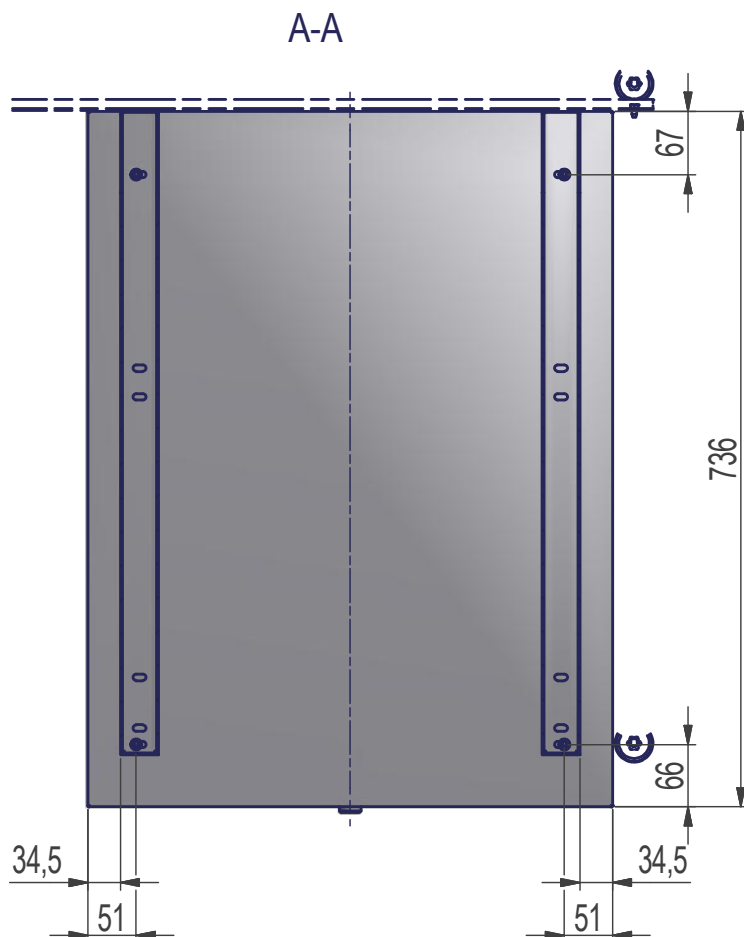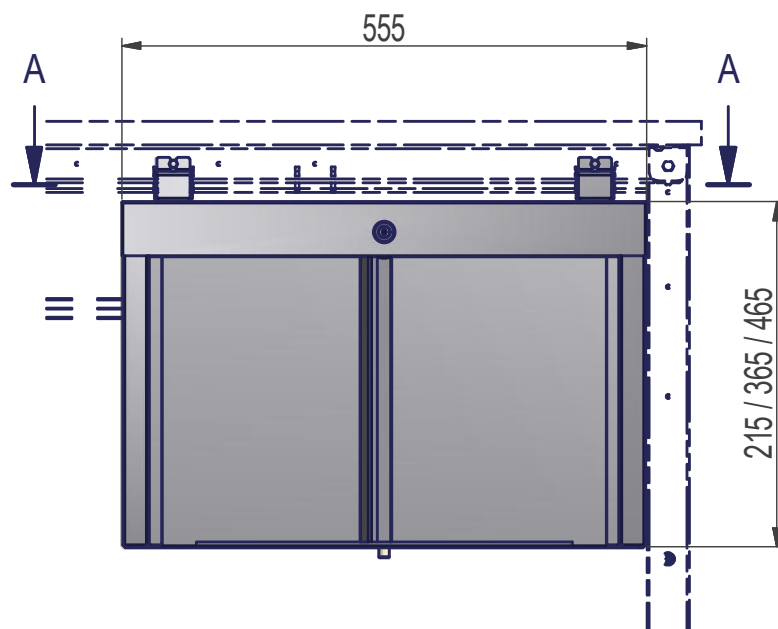

MONTAGEANLEITUNG

Unterbau-Hängeschränk T736

Assembling instructions for hanging drawer block T736

Mode d'emploi pour bloc tiroir suspendu T736

555mm x 736mm x 215mm / 365mm / 465mm

WorkErgo

