



Montageanleitung


Workergo C-Fuß, Klemm

Assembling instructions for


Workergo C-foot, clamp

Instruction de montage


Workergo C pieds, serrage

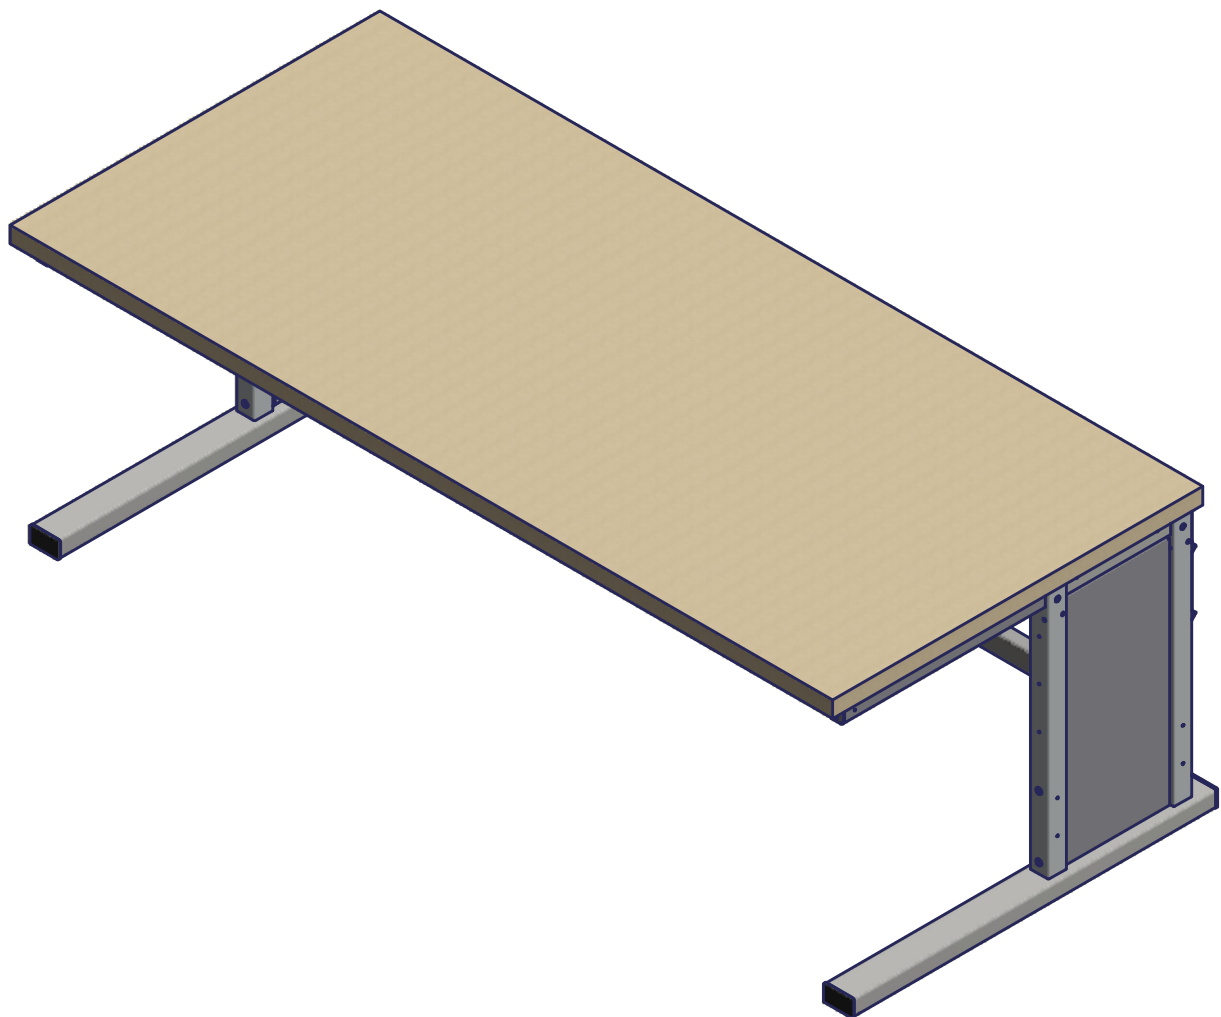

1x (A1)

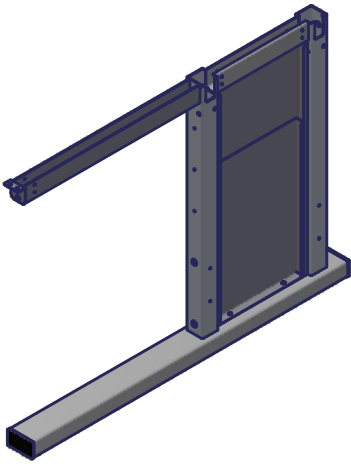


1x (A2)

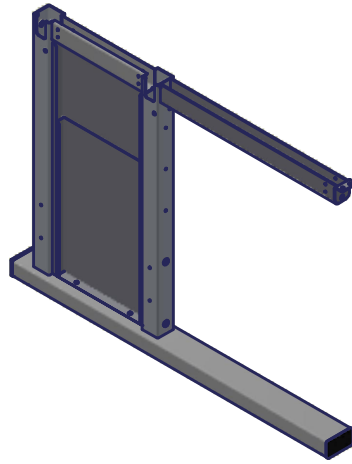


2x (A3)




1x (A4)

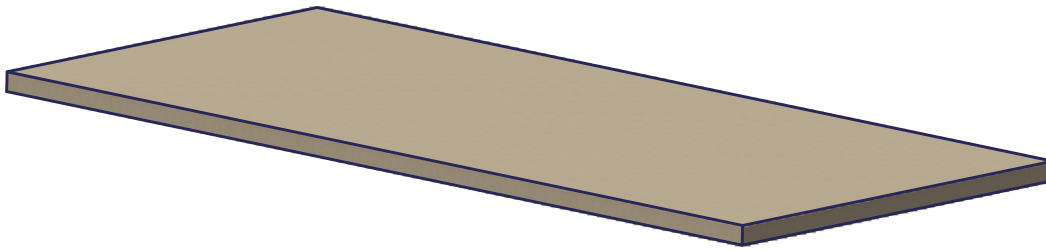


1x (A5)

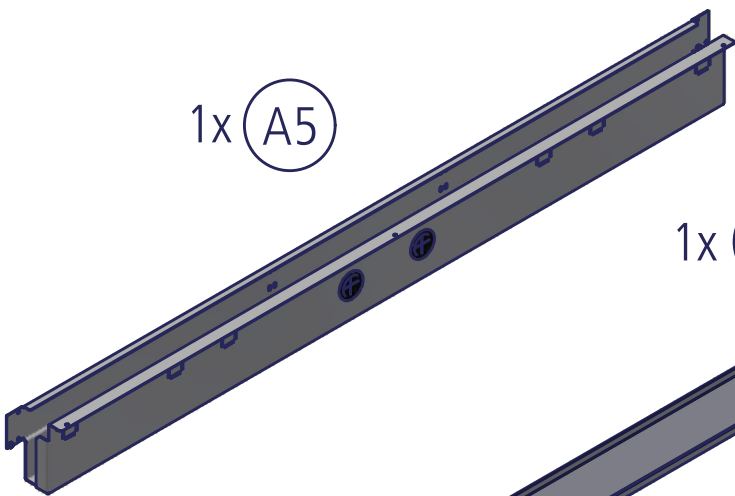


1x (A6)

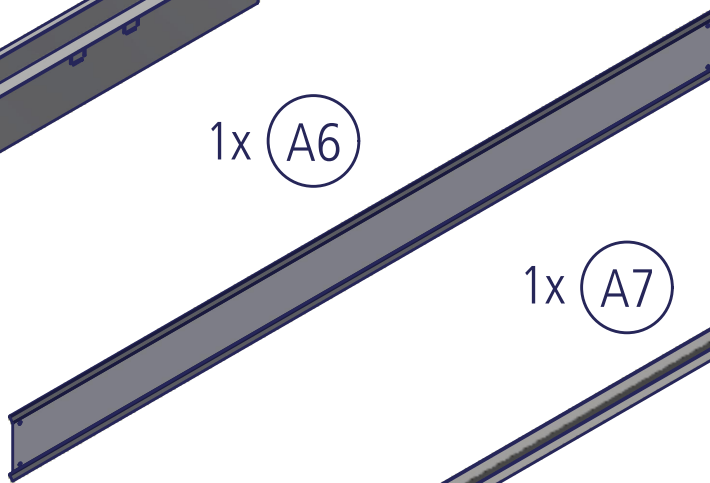


1x (A7)

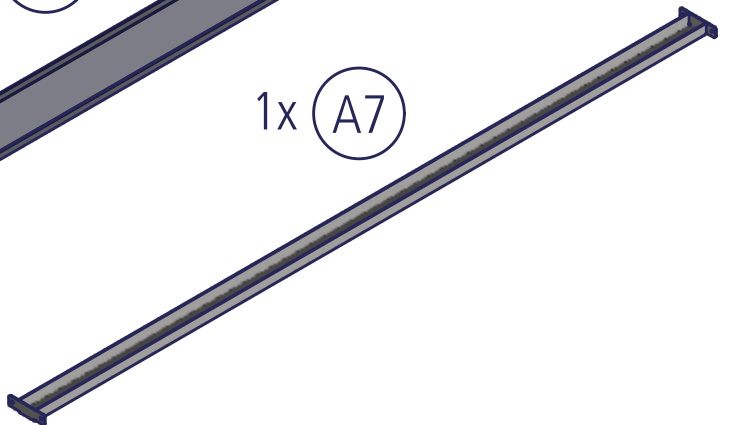


6x (A8)

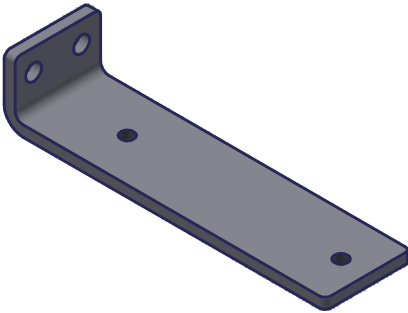


20x (A9)
4,8 x 9,5

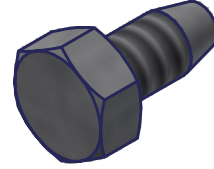


2x (A10)
M6

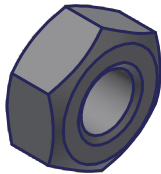


16x (A11)
M6 x 10

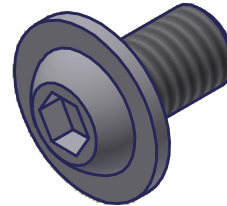


9x (A12)
5 x 16

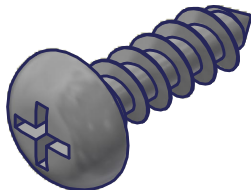


1.

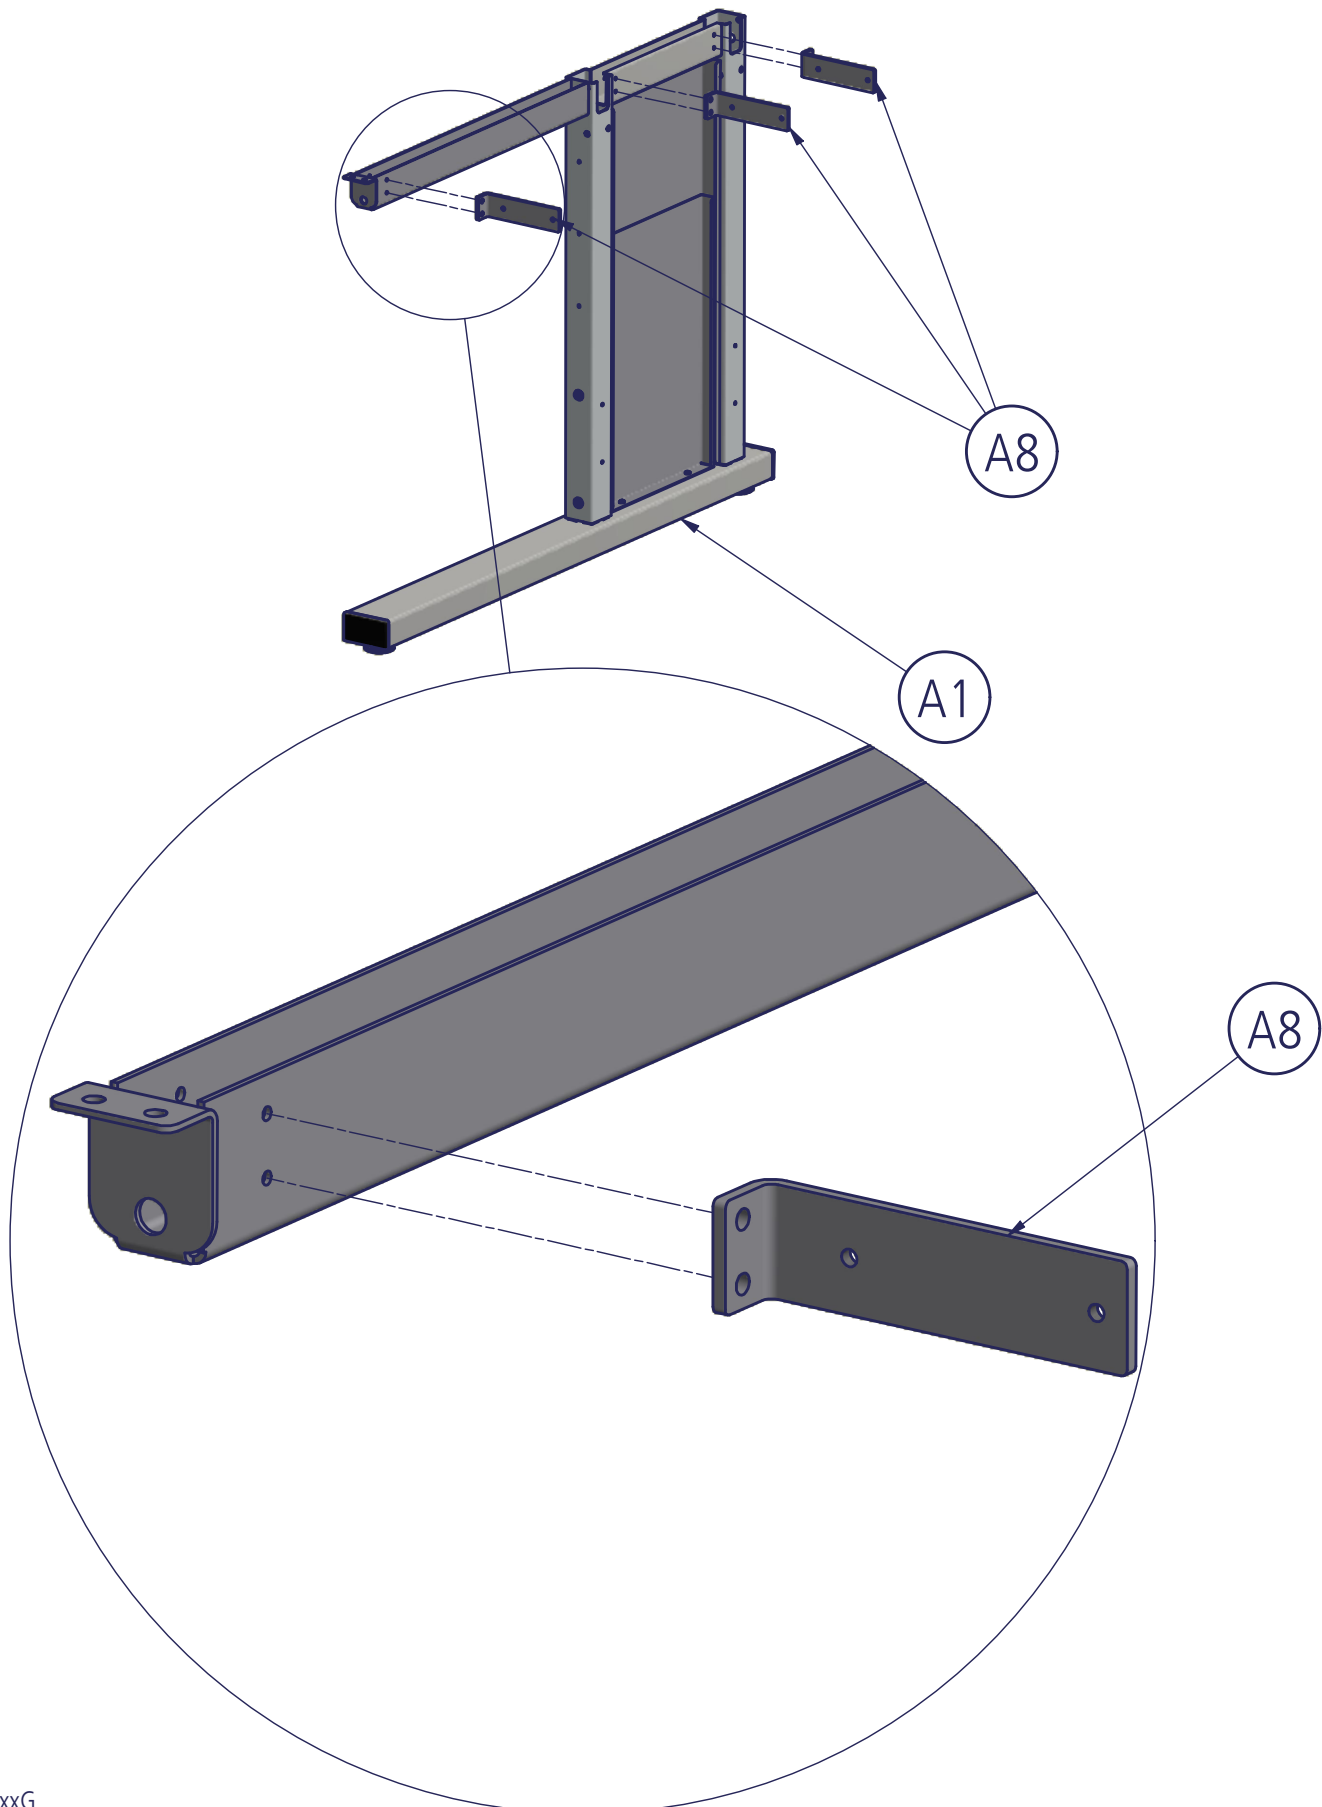


2.

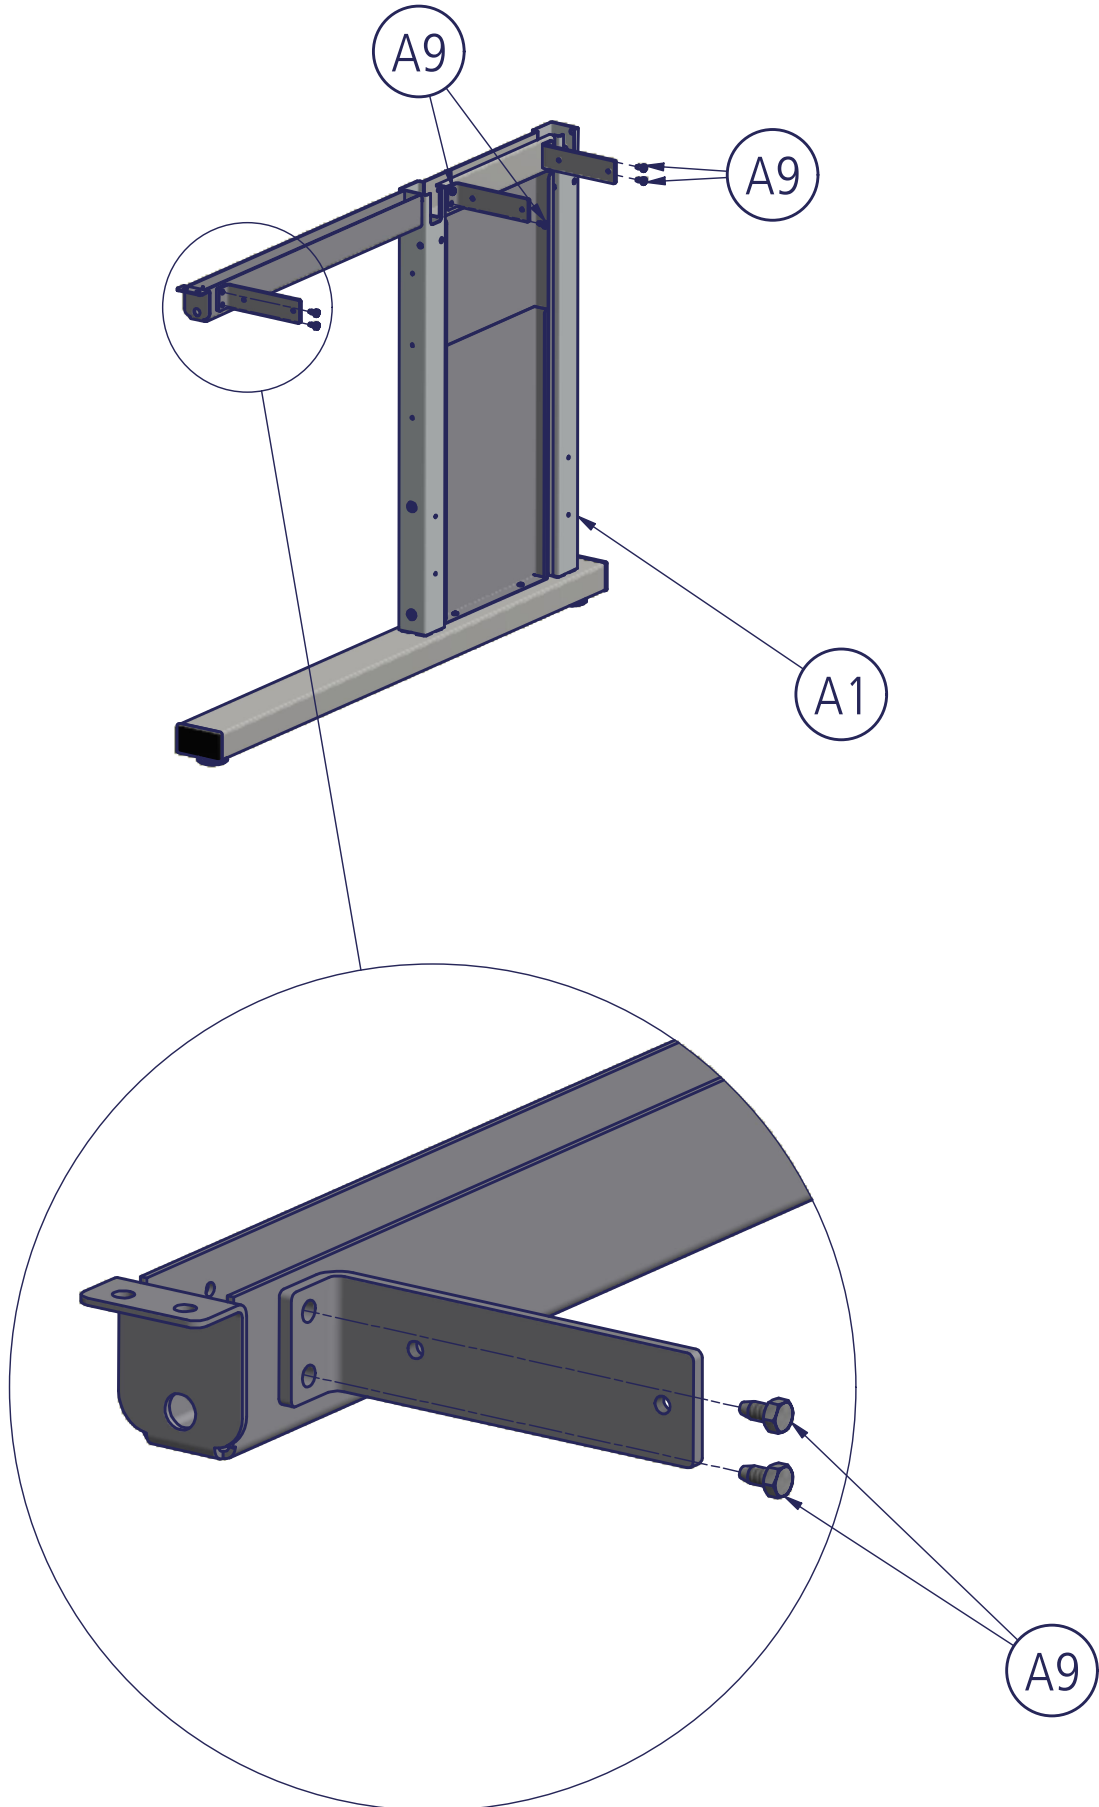


3.

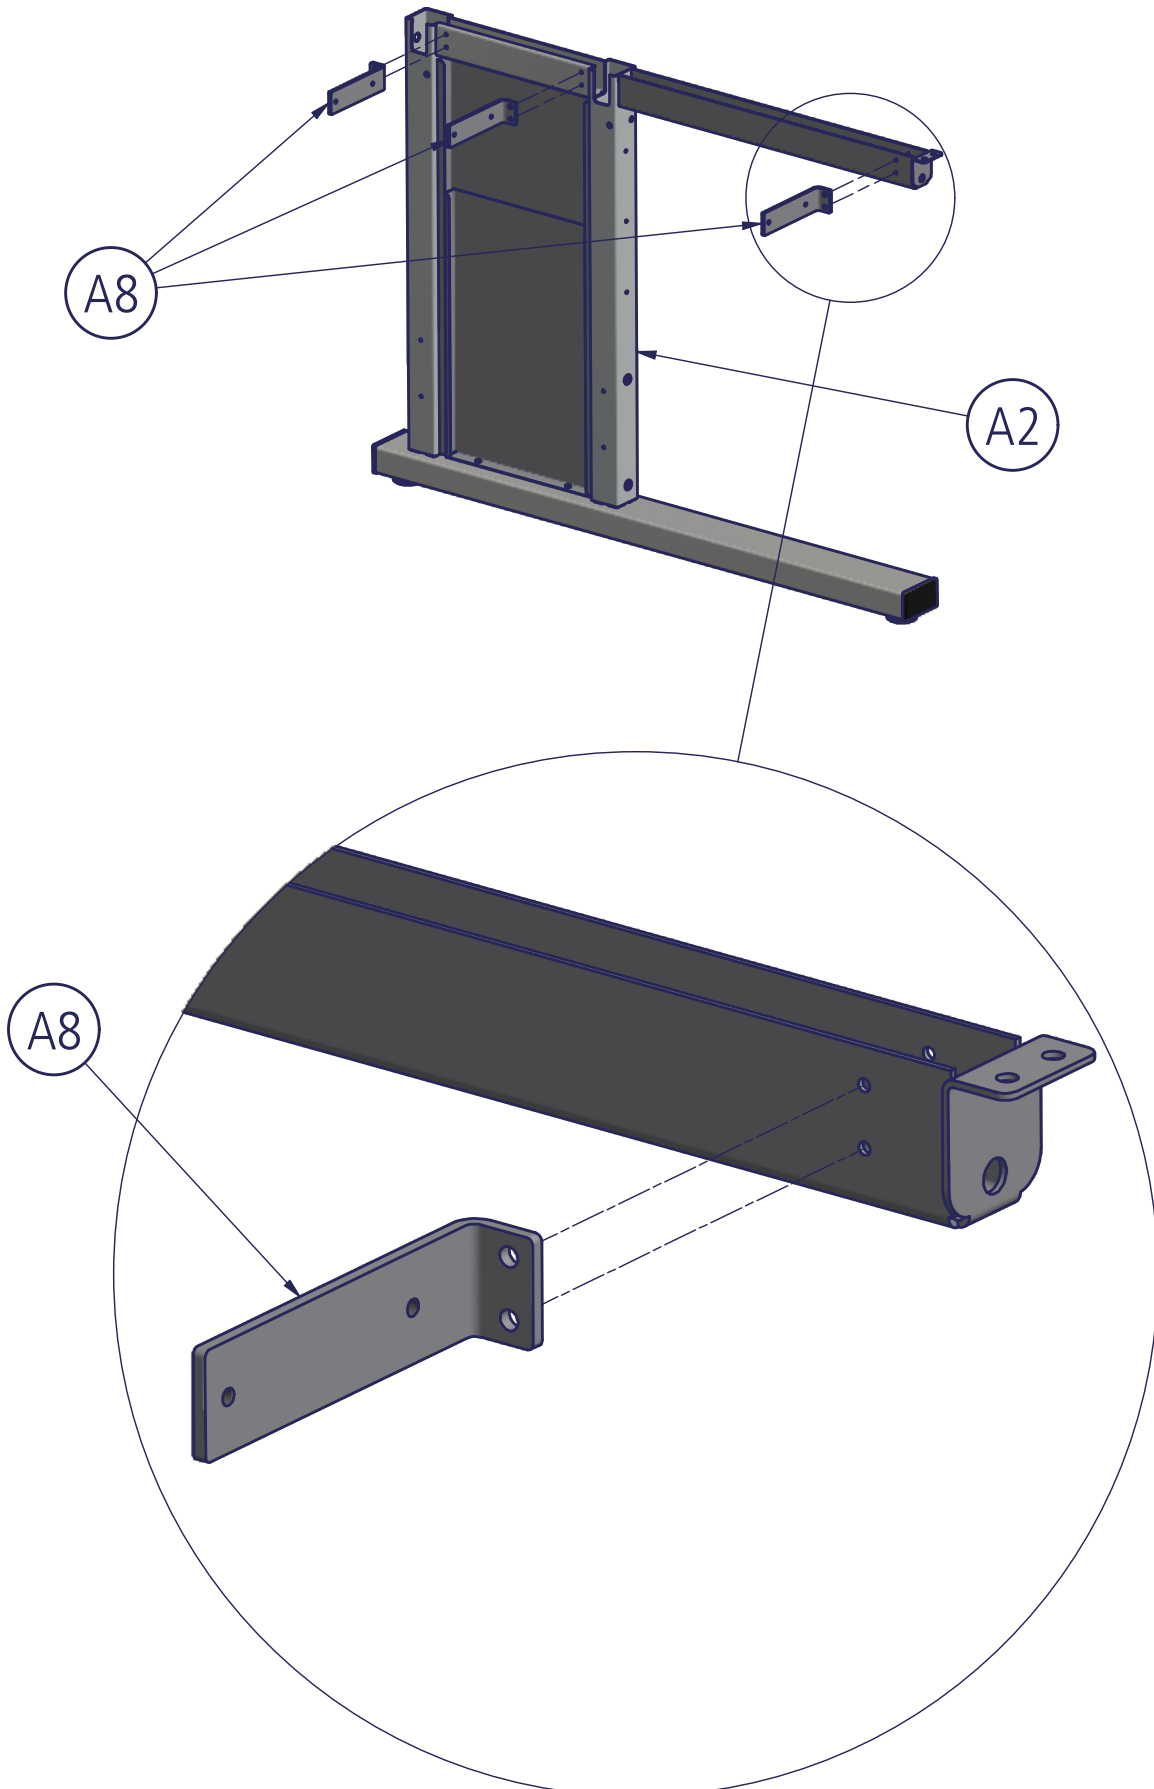


4.

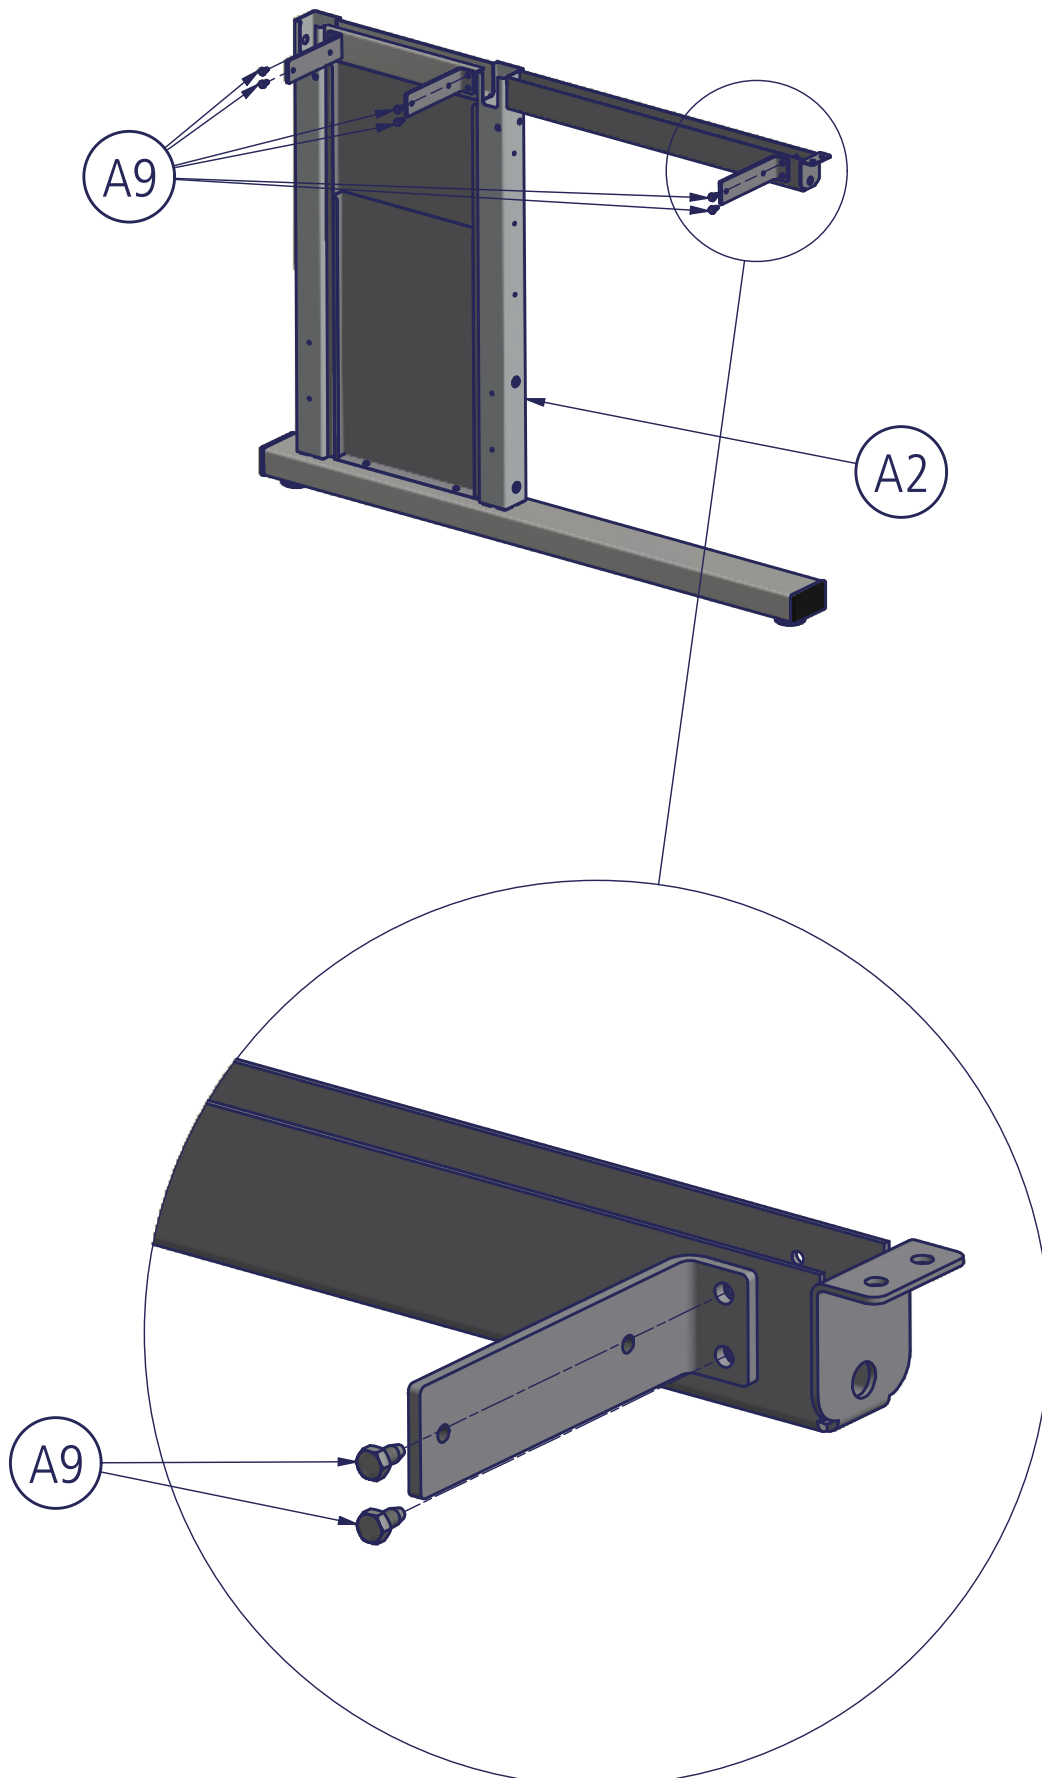


5.

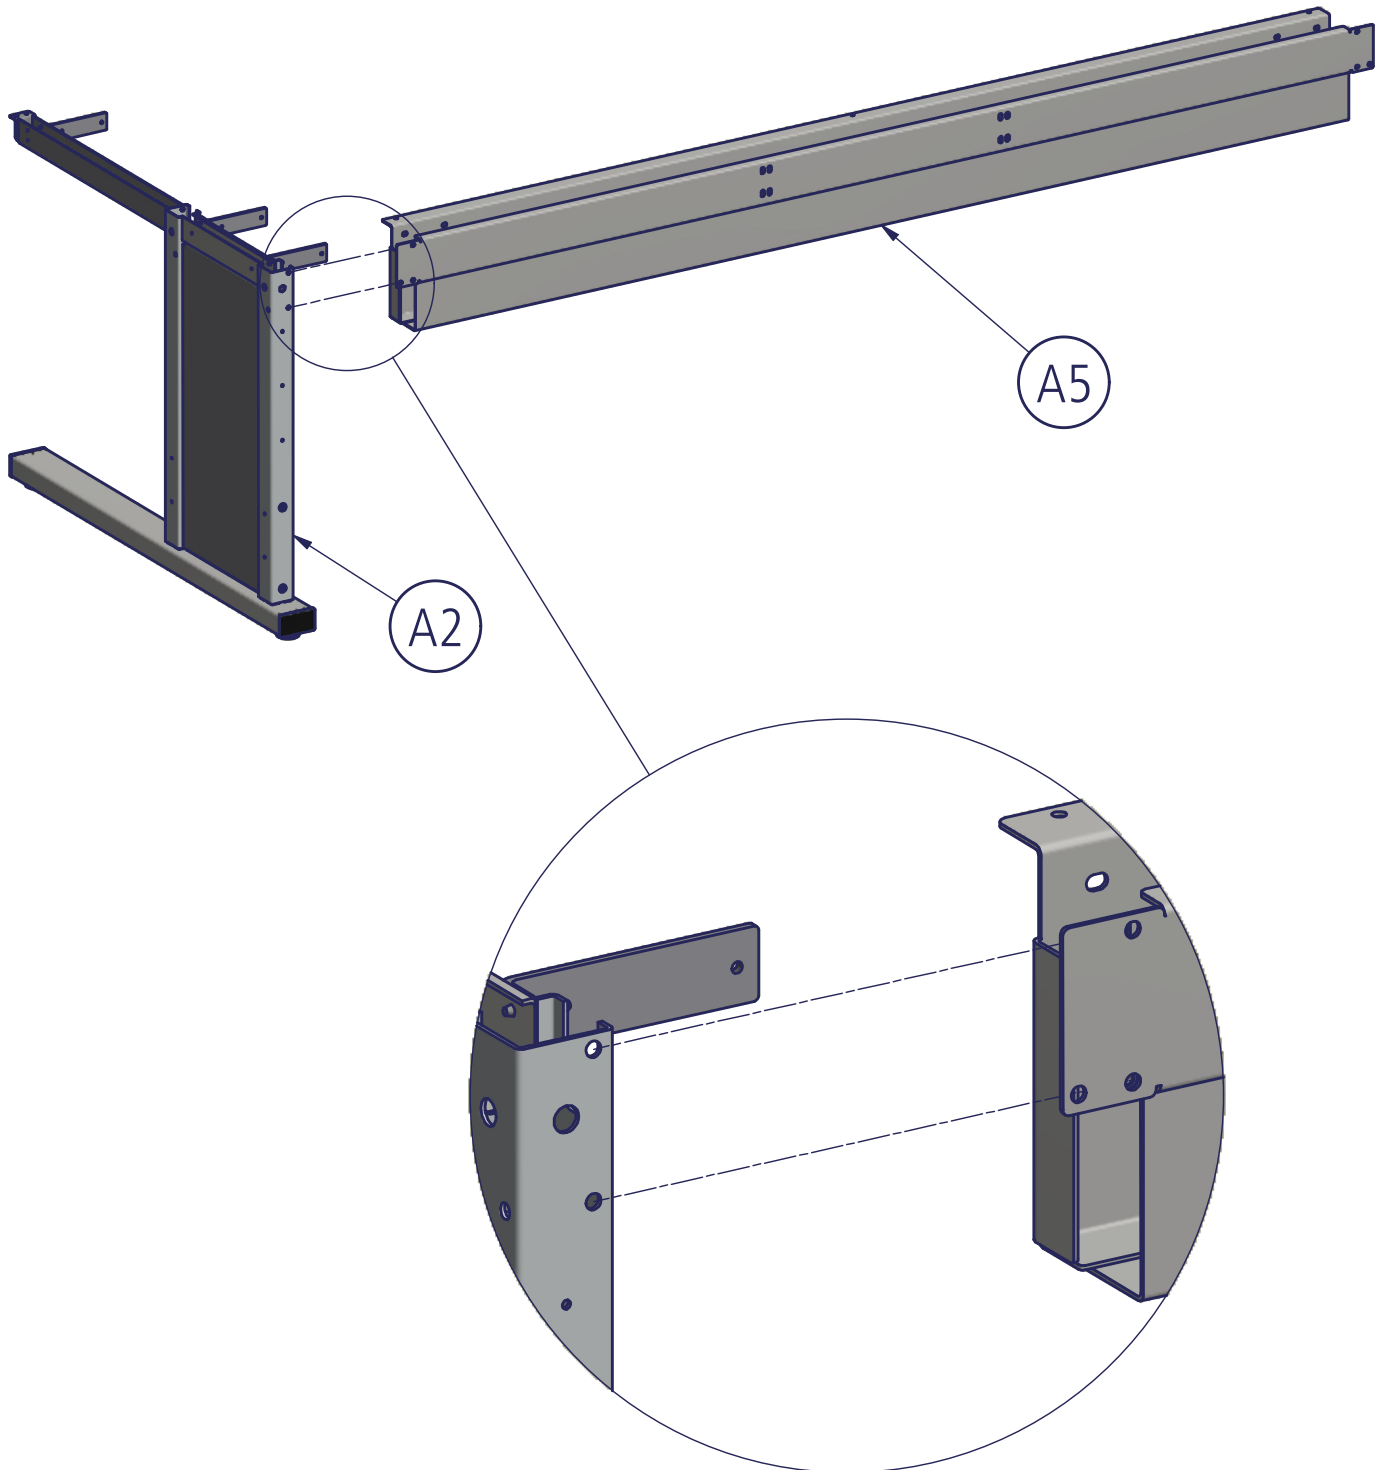


6.

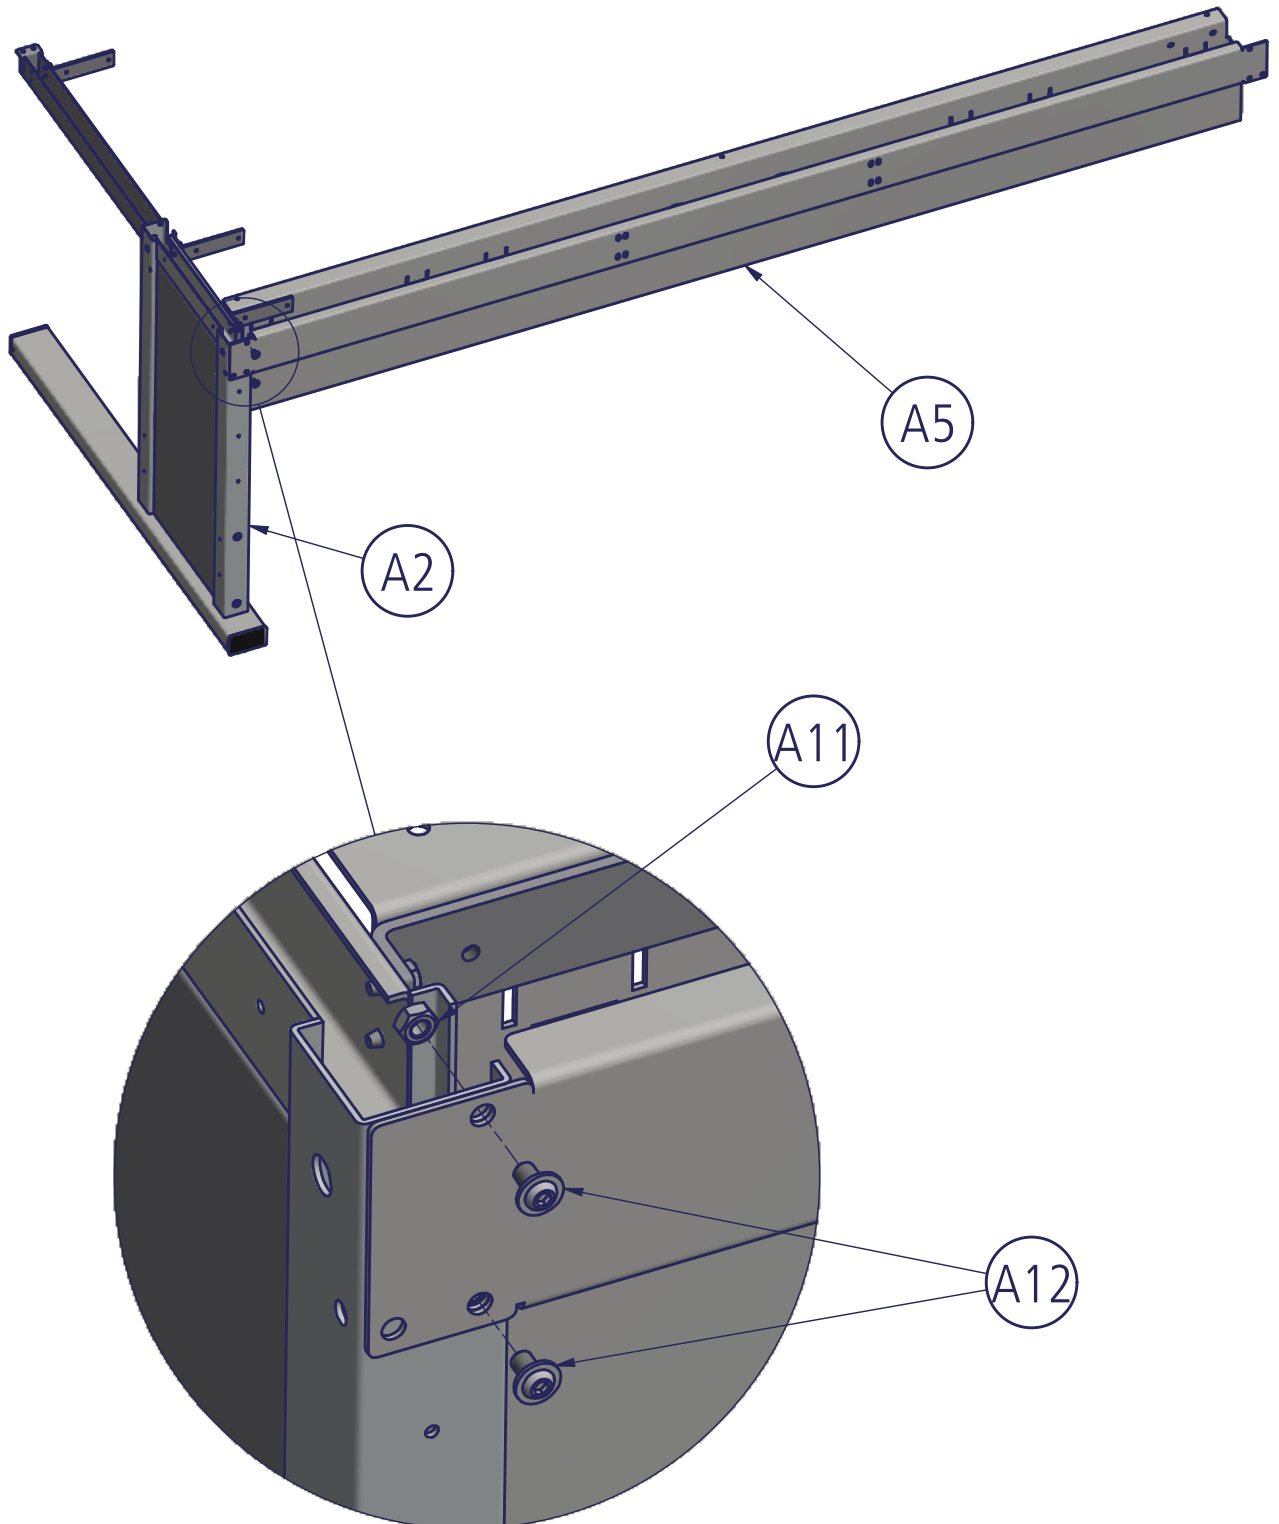


7.

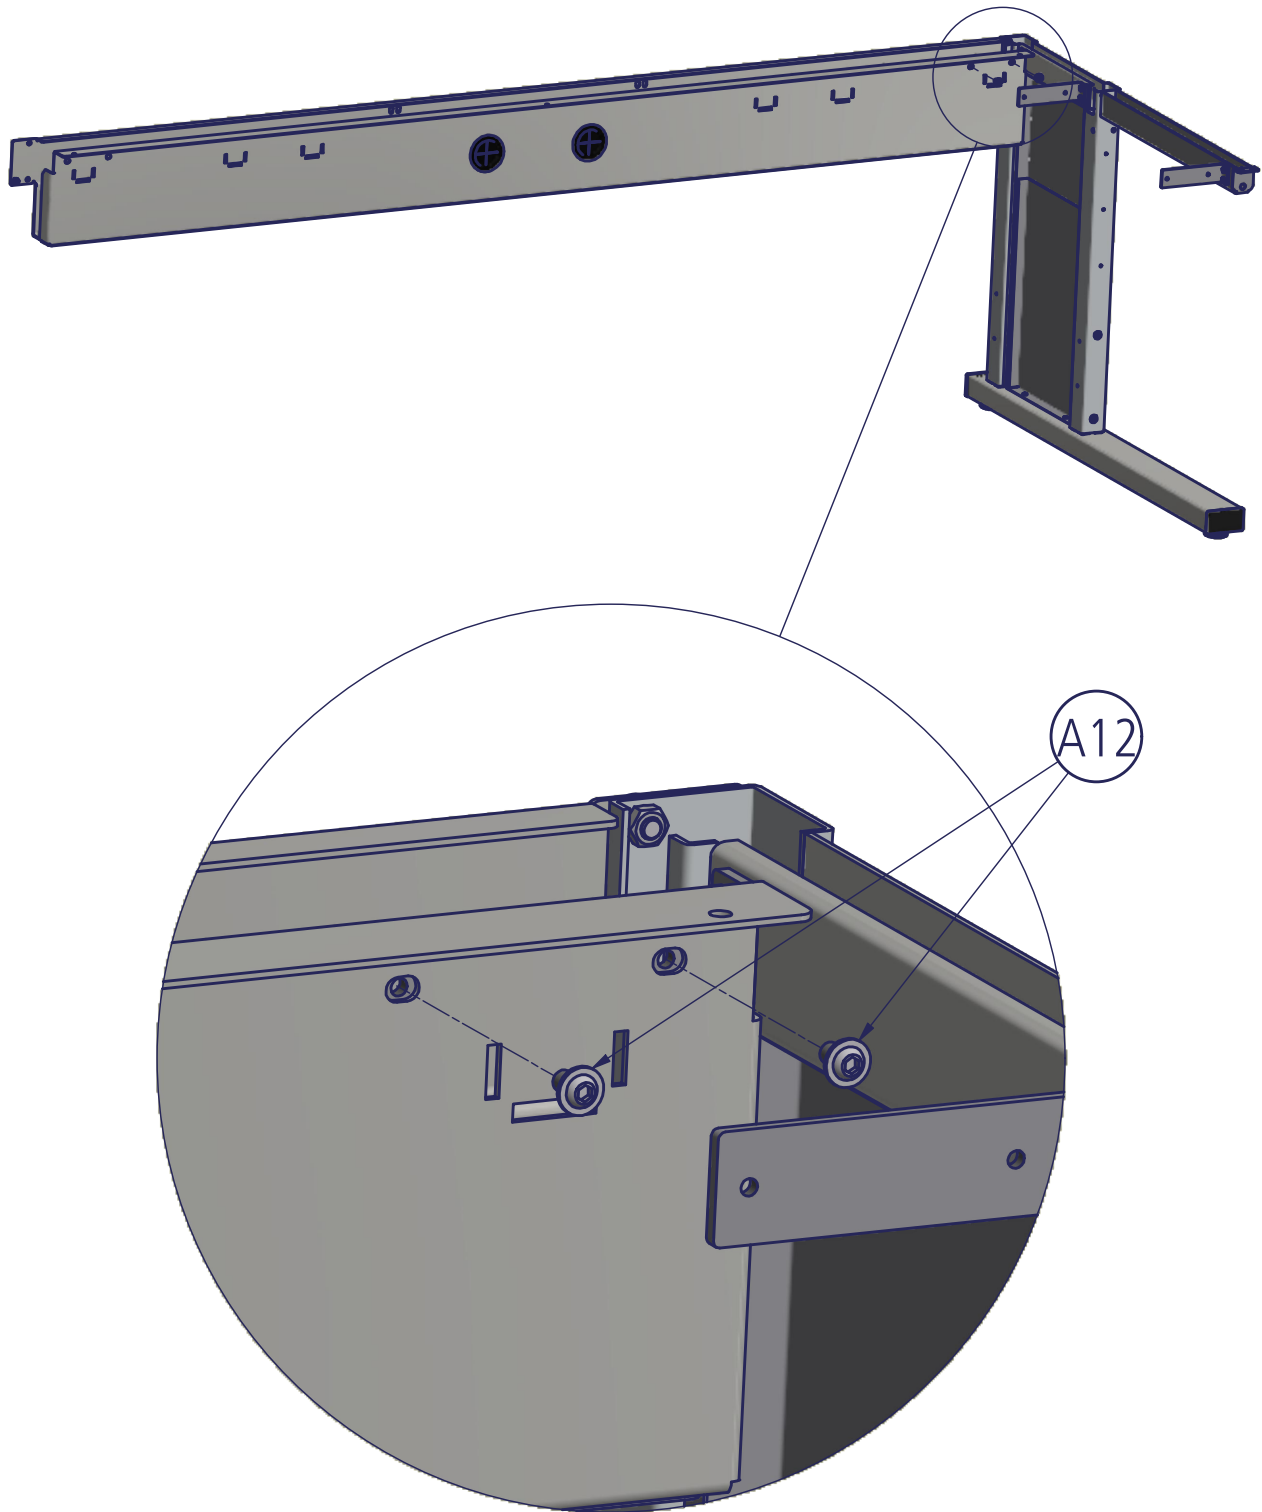


8.

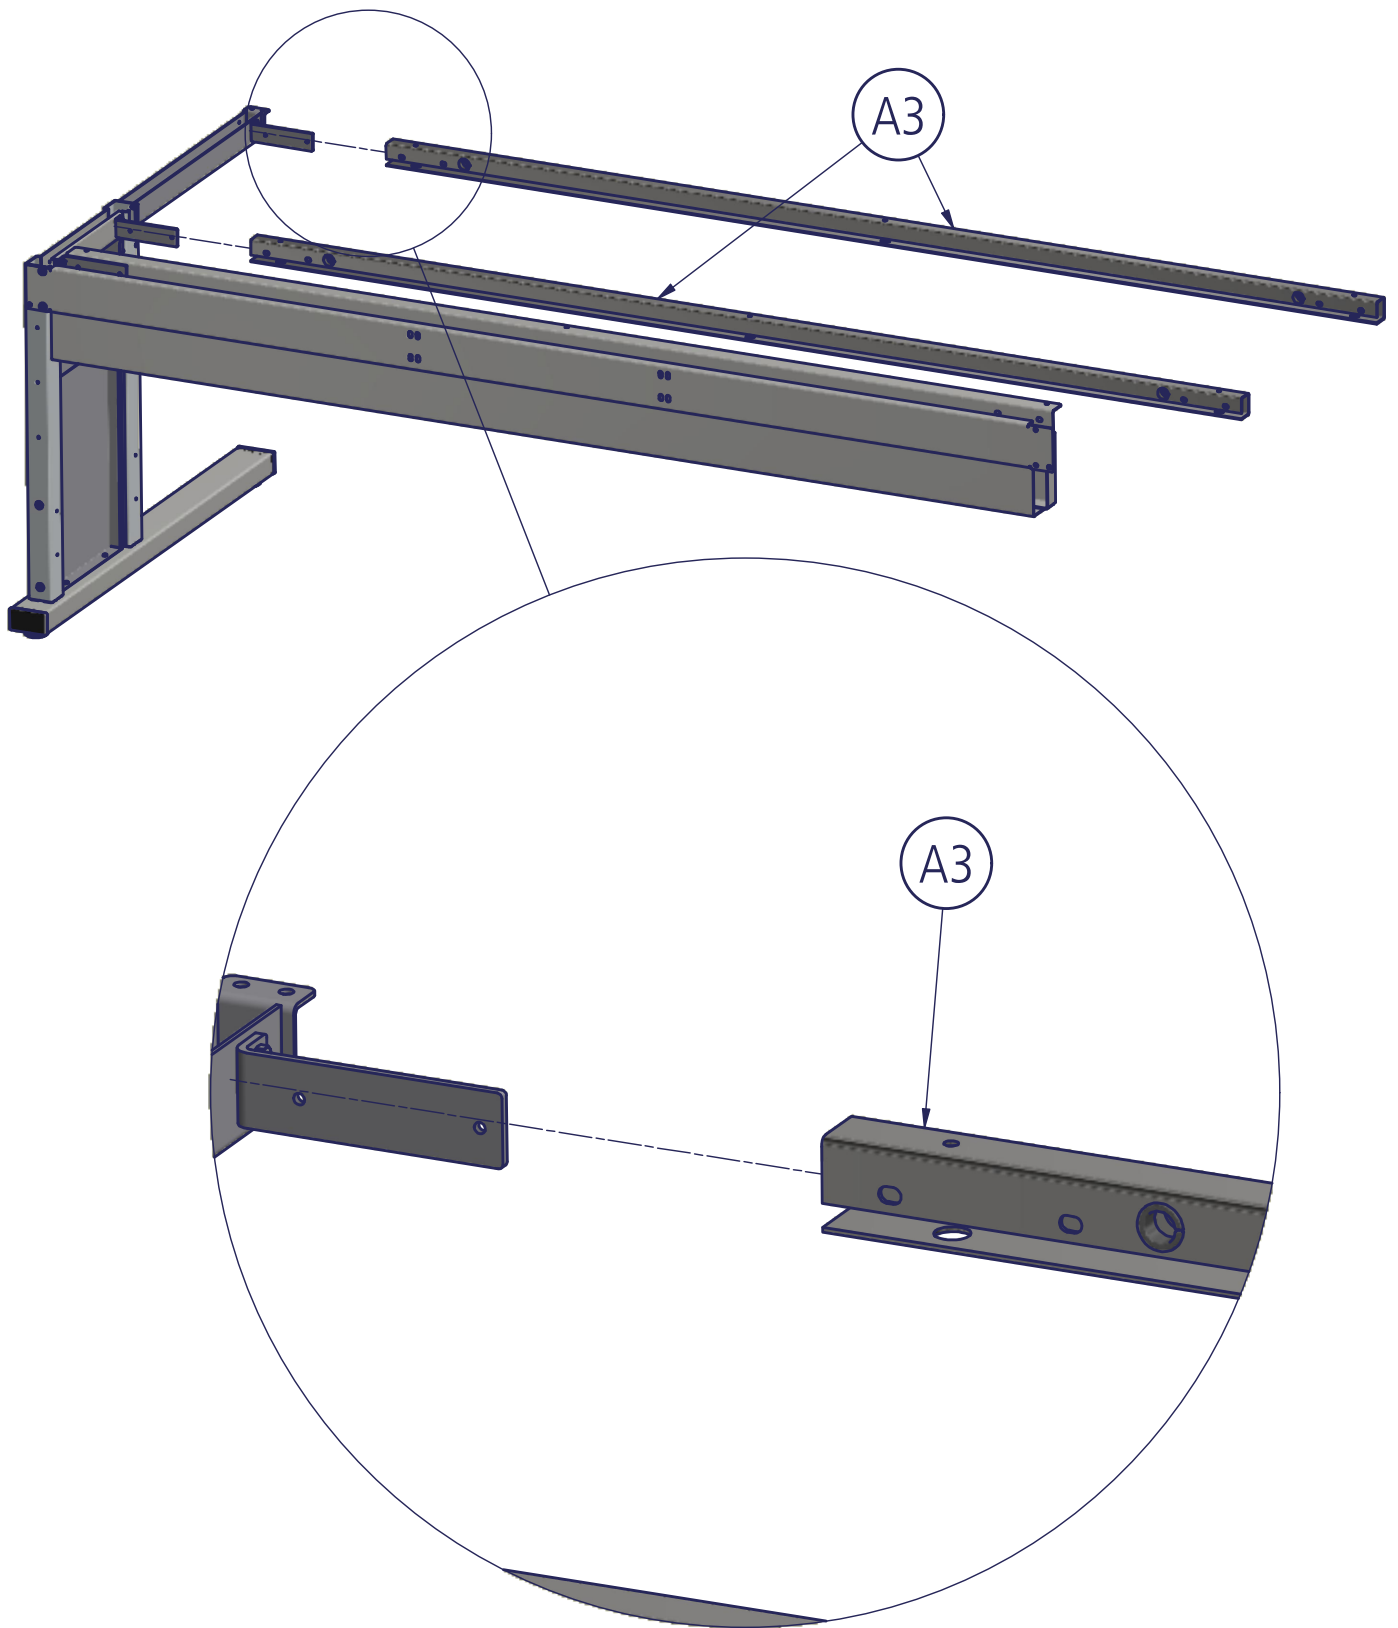


9.

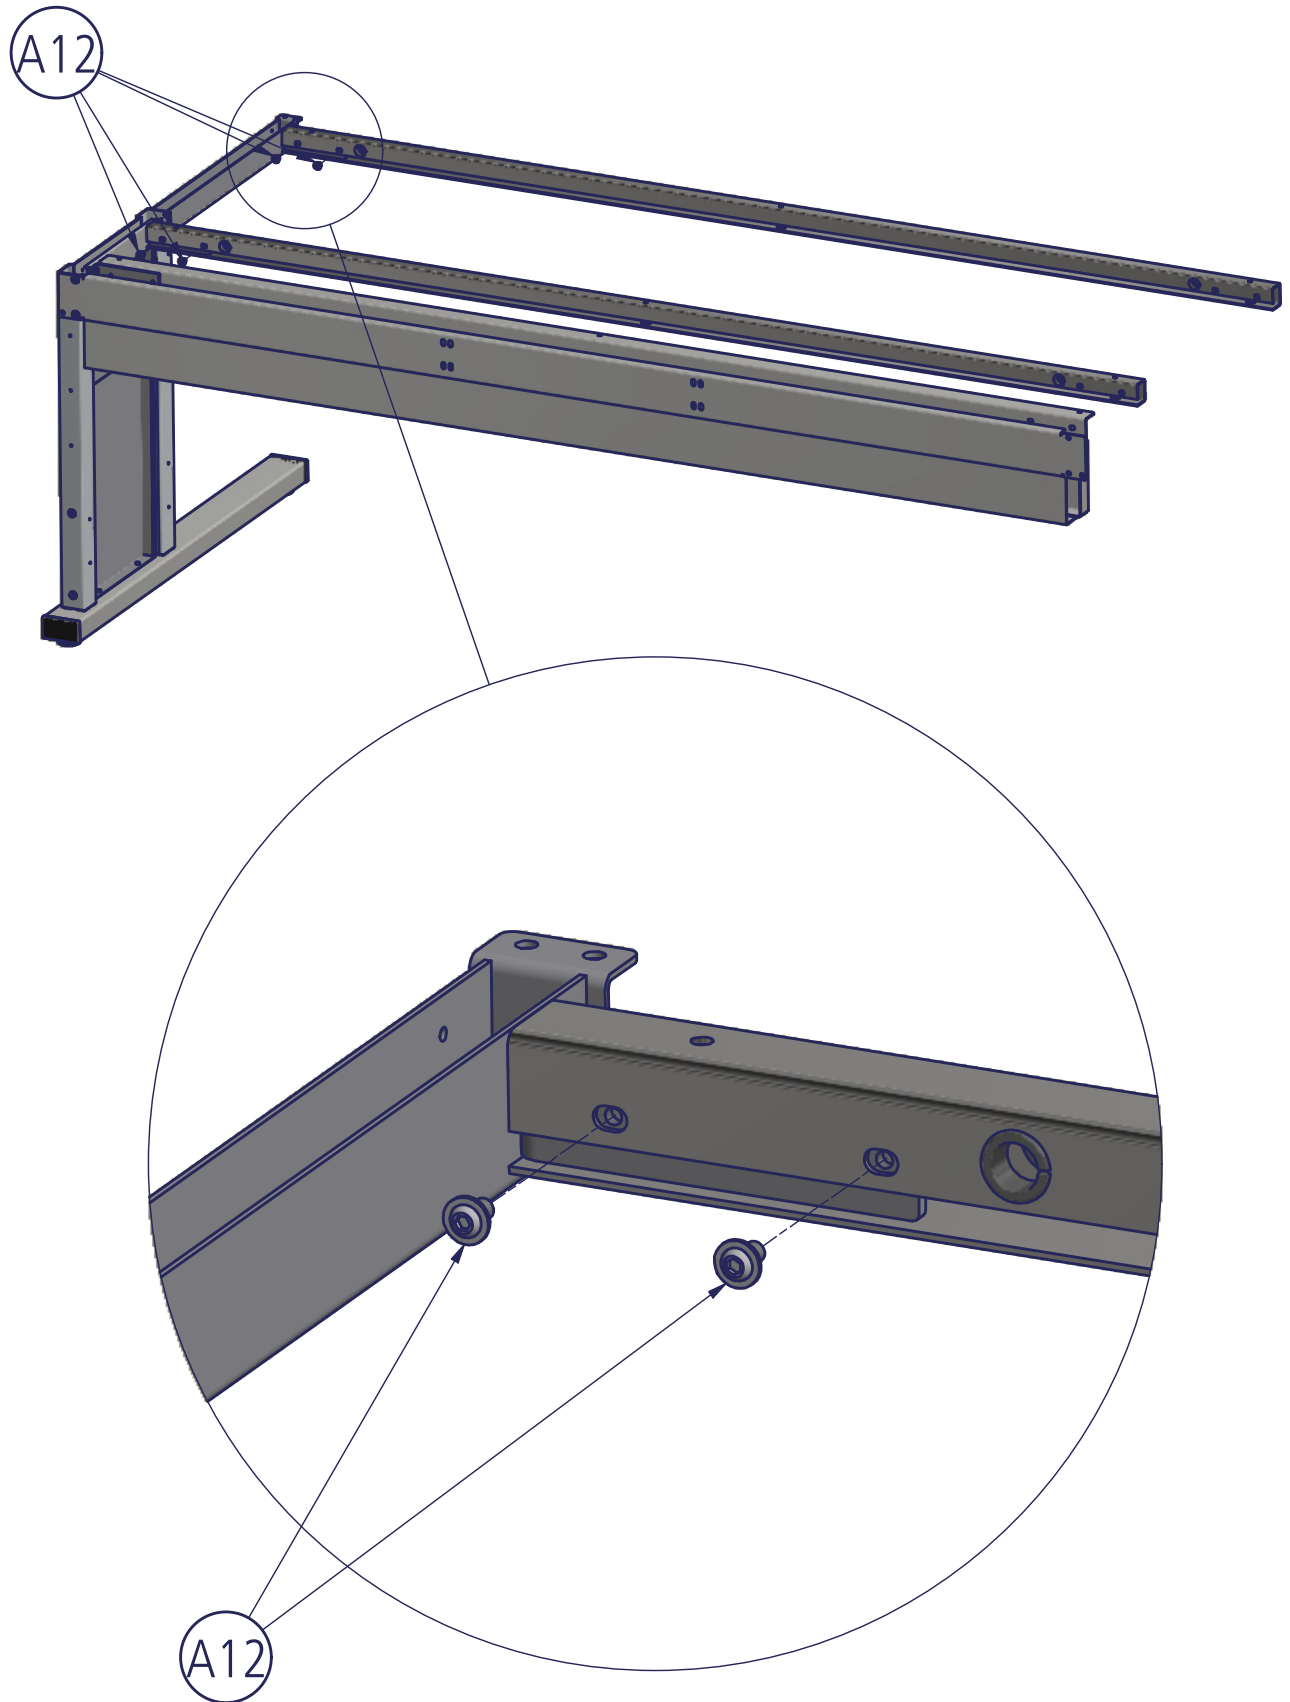


10.

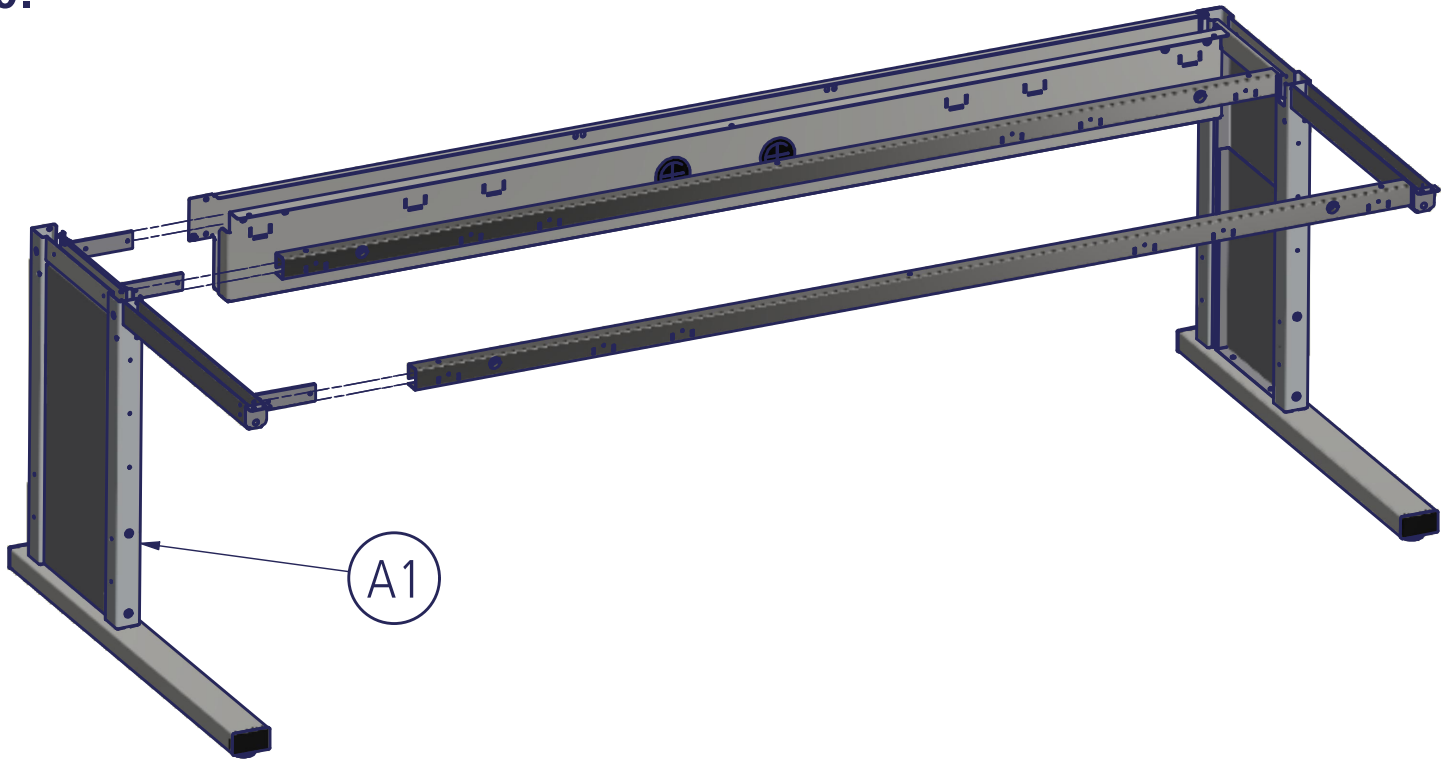


11.

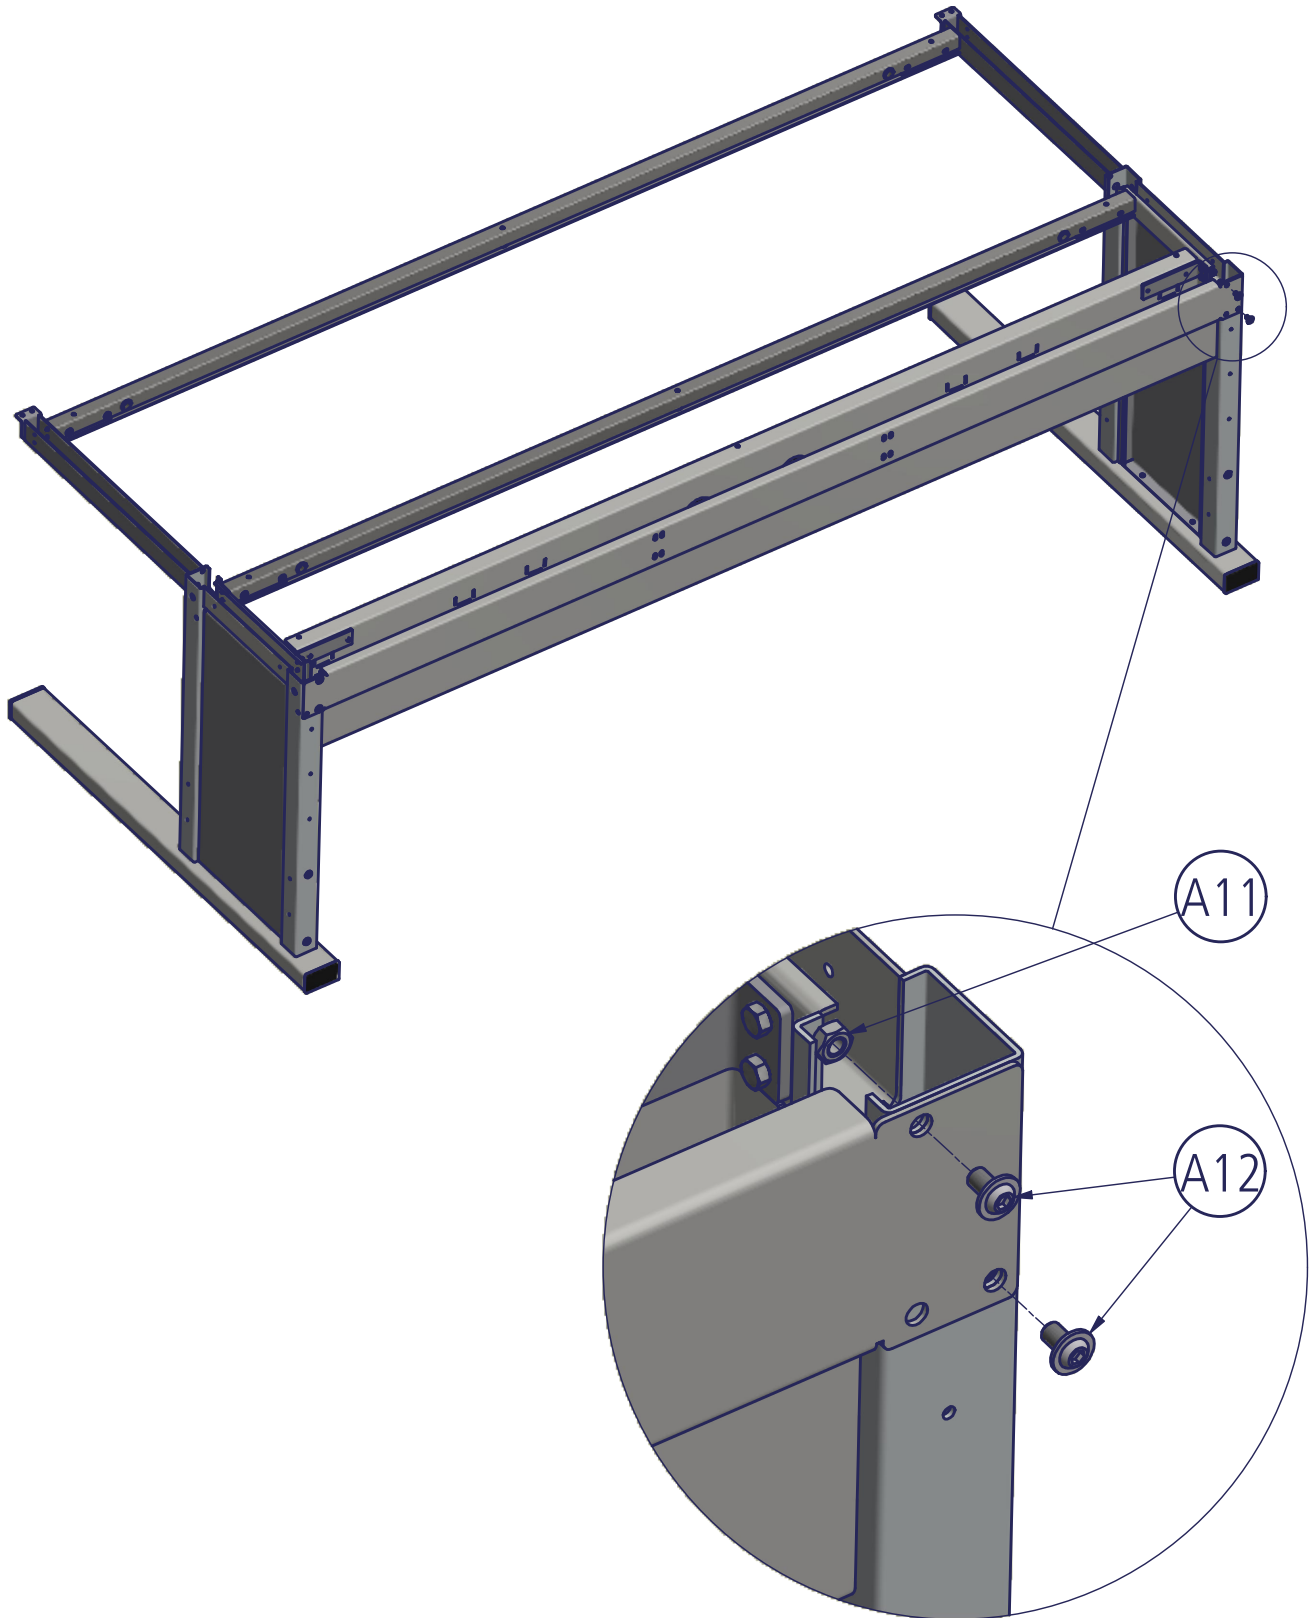


12.

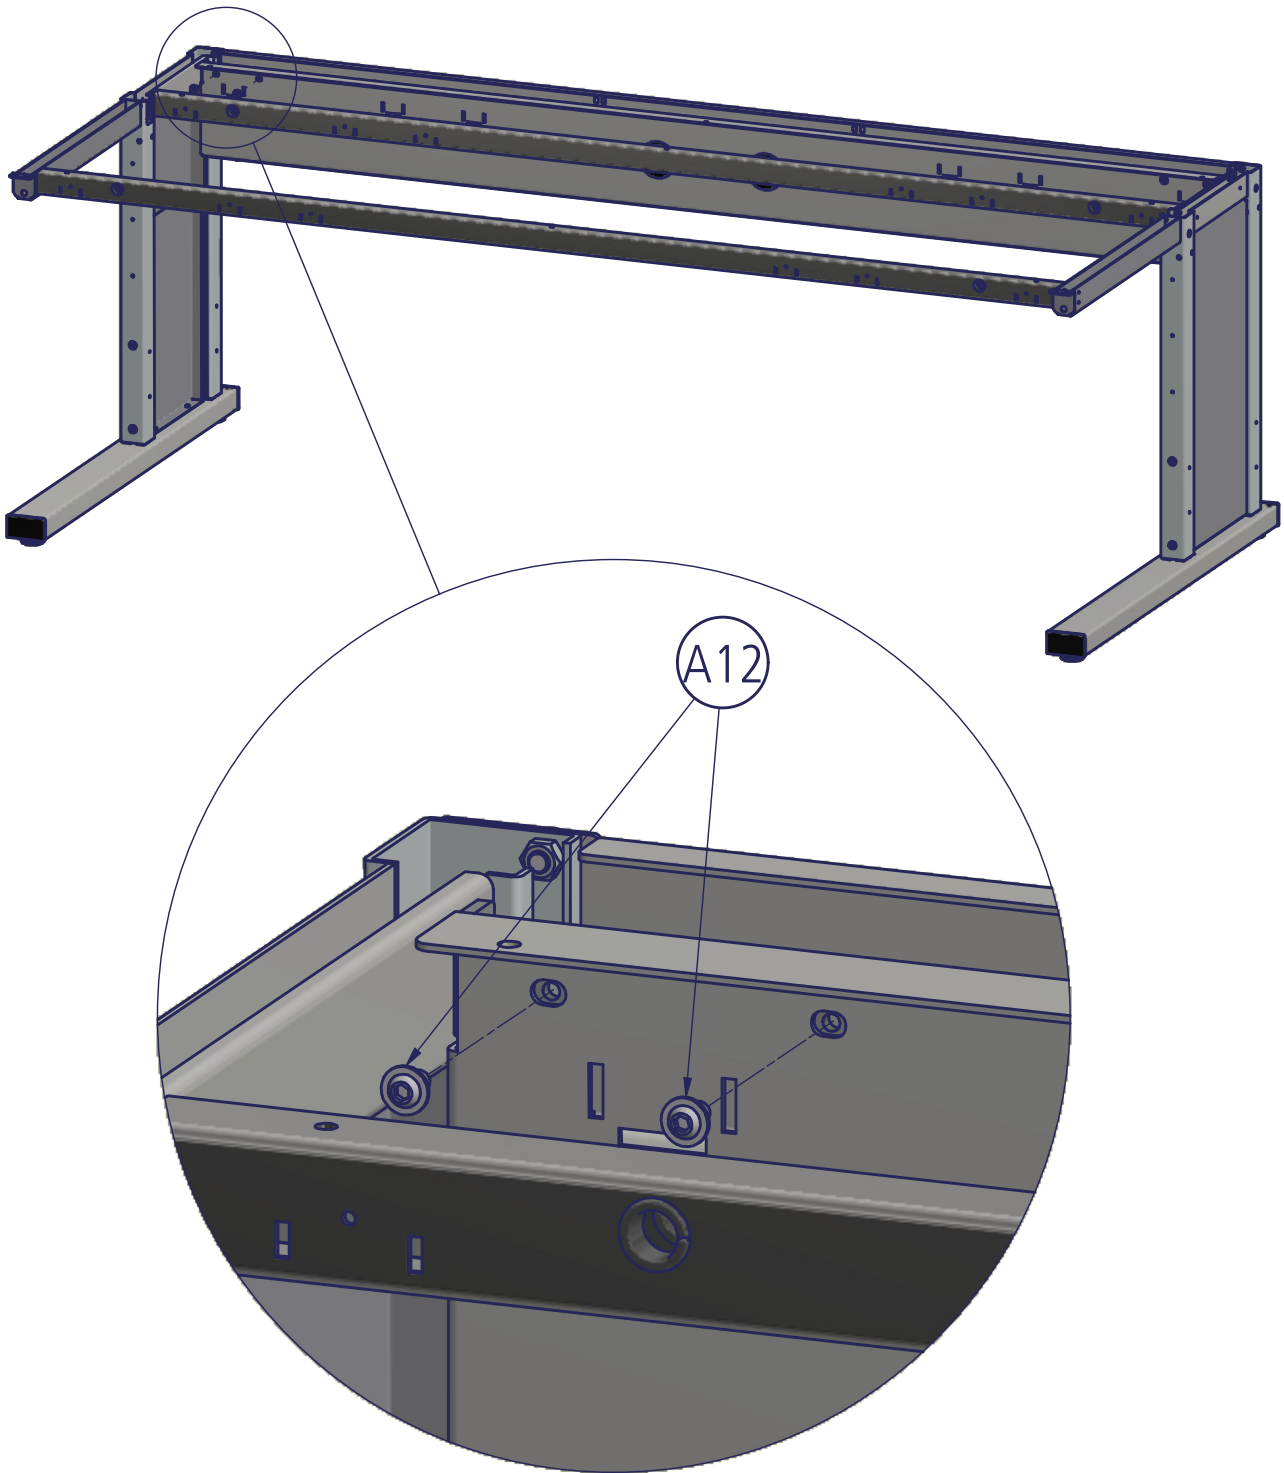


13.

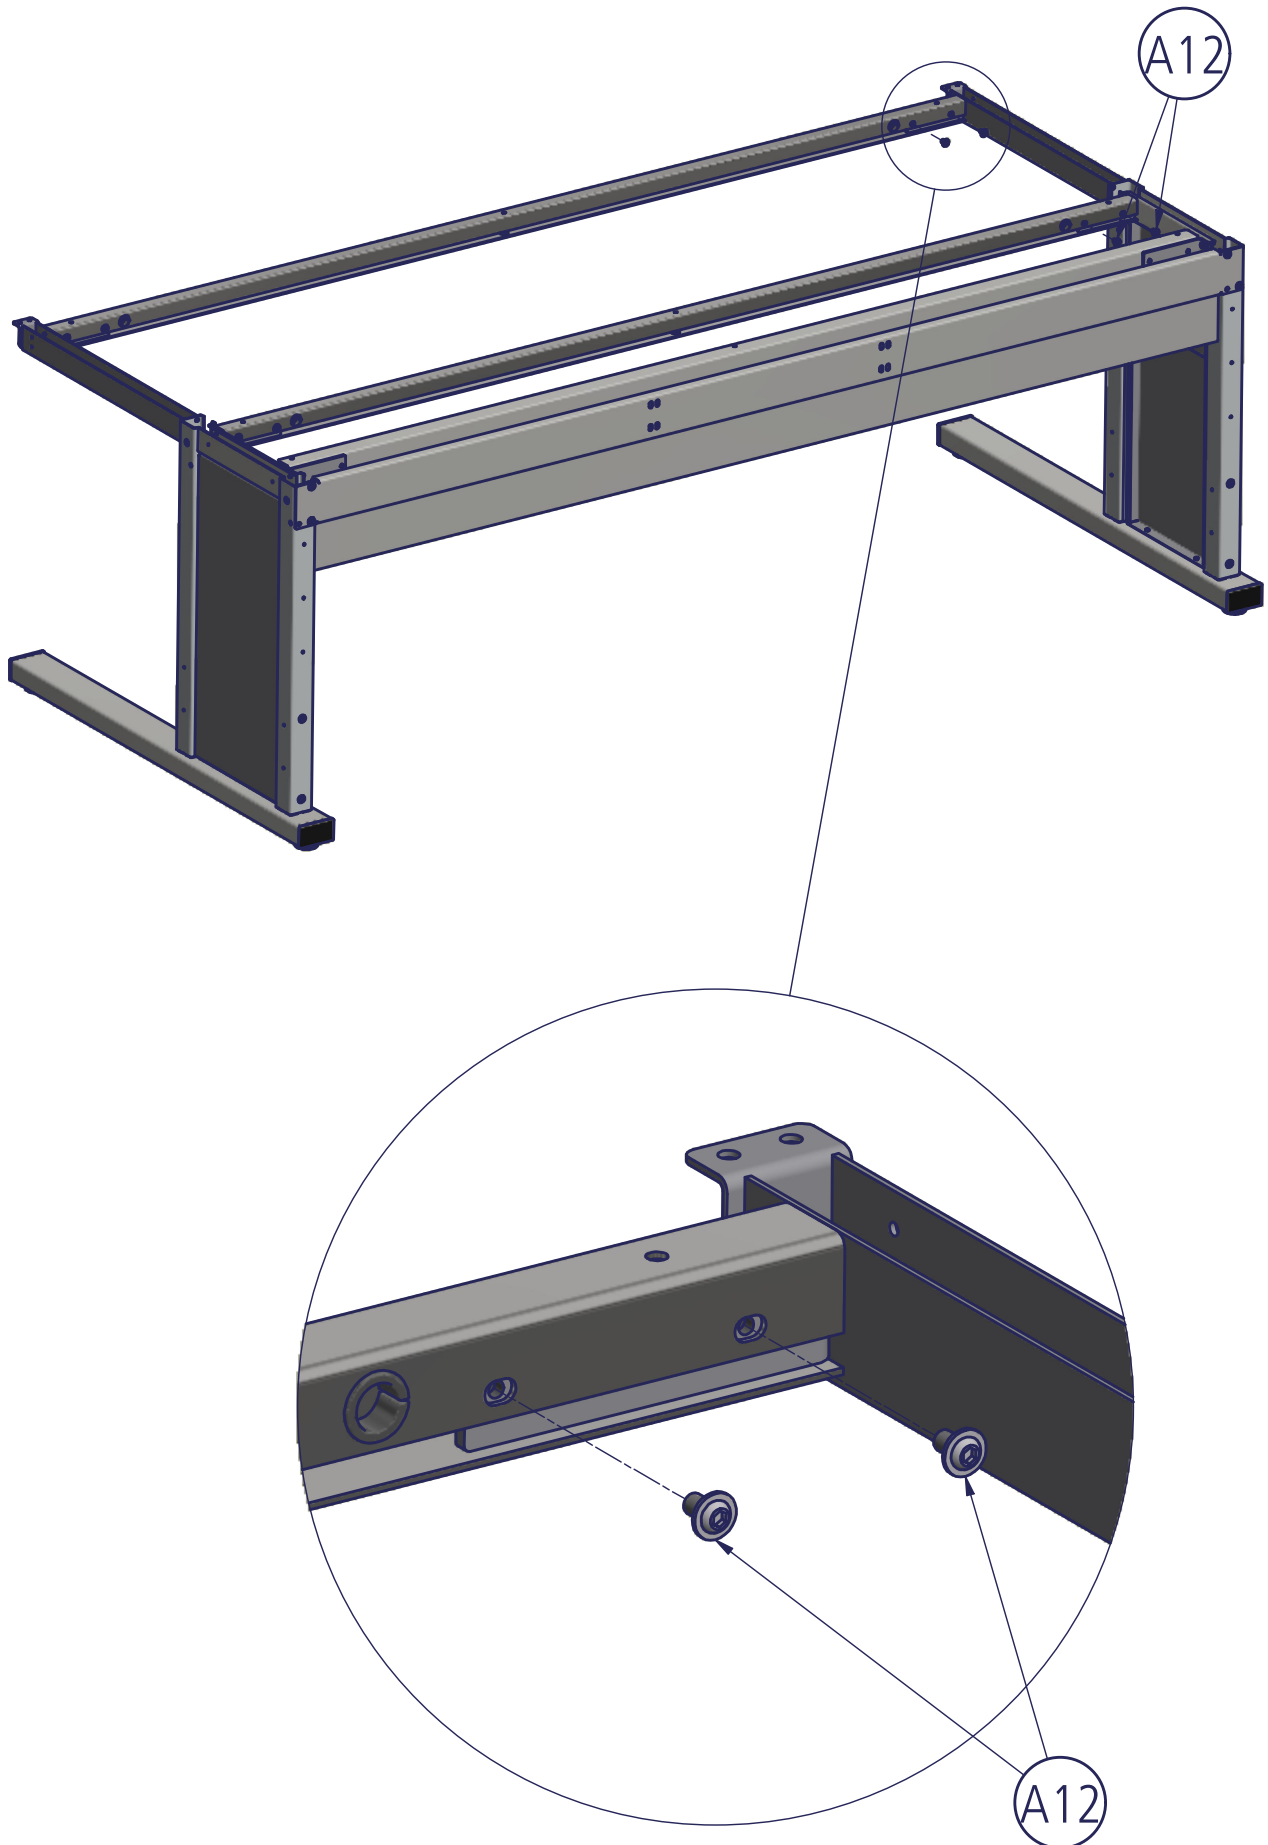



14.

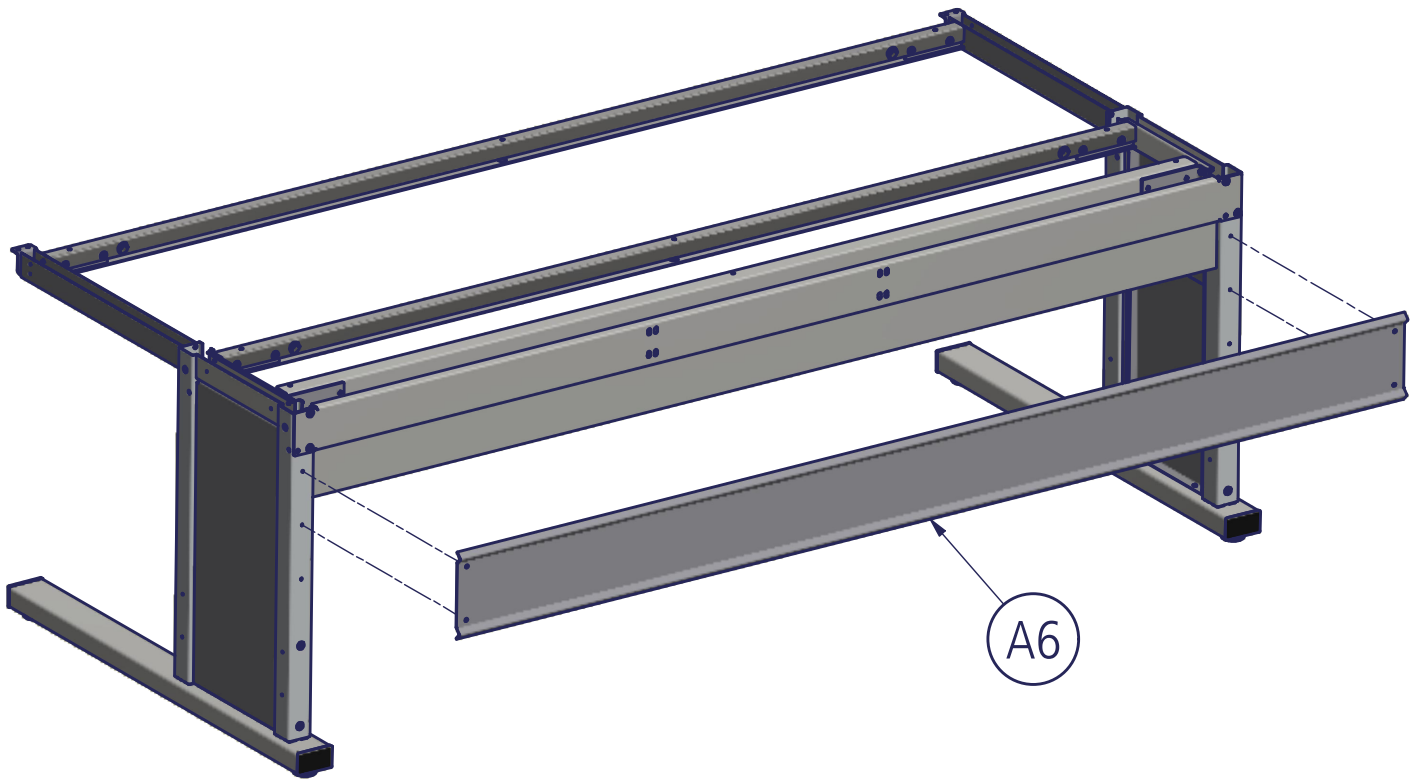



15.

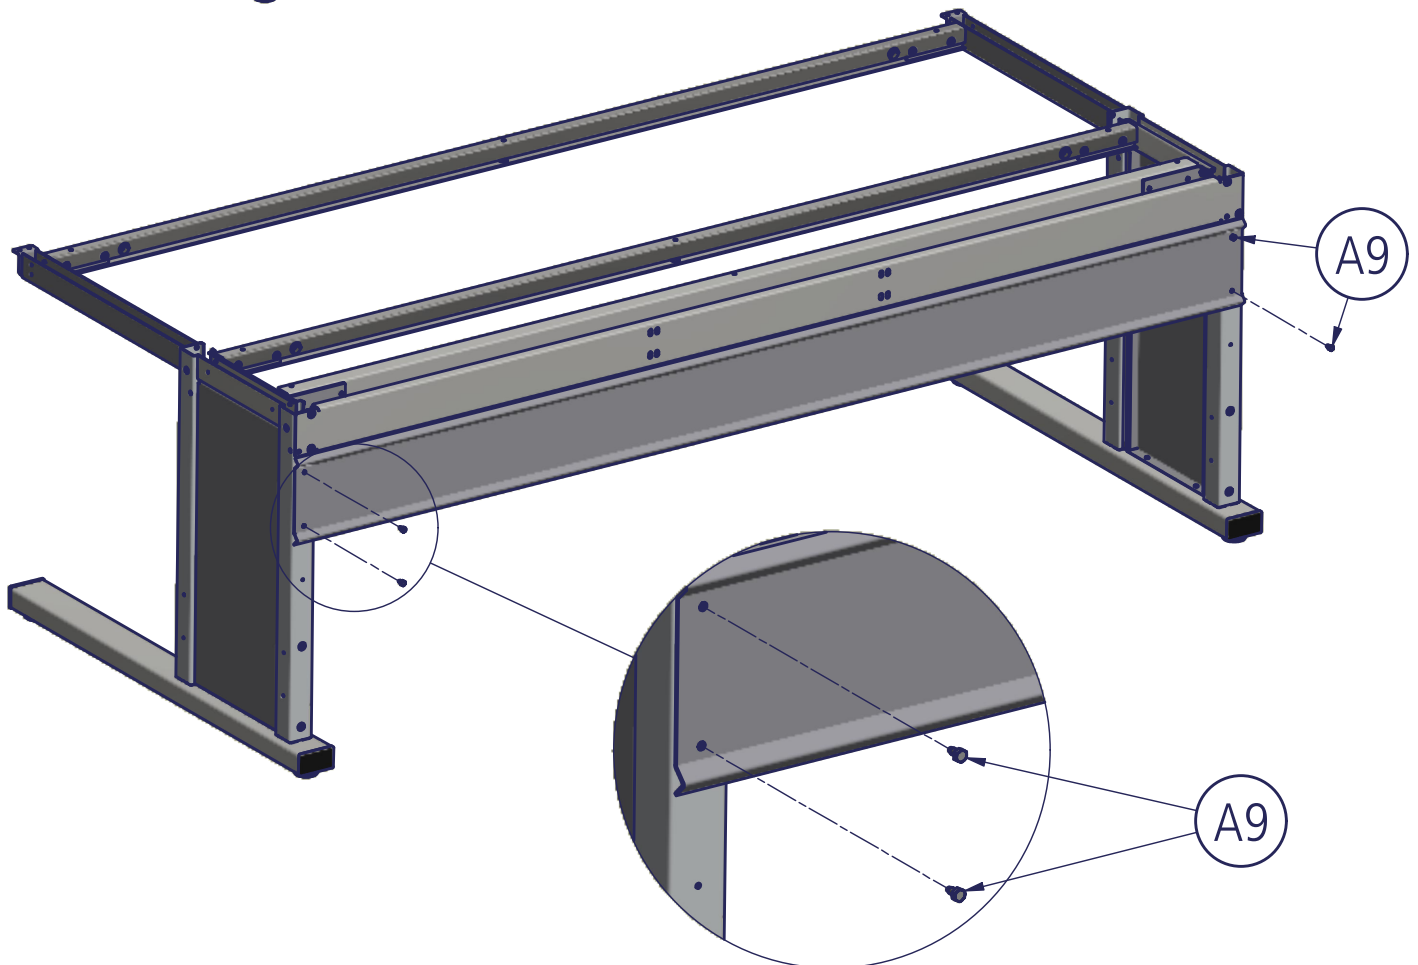



15.

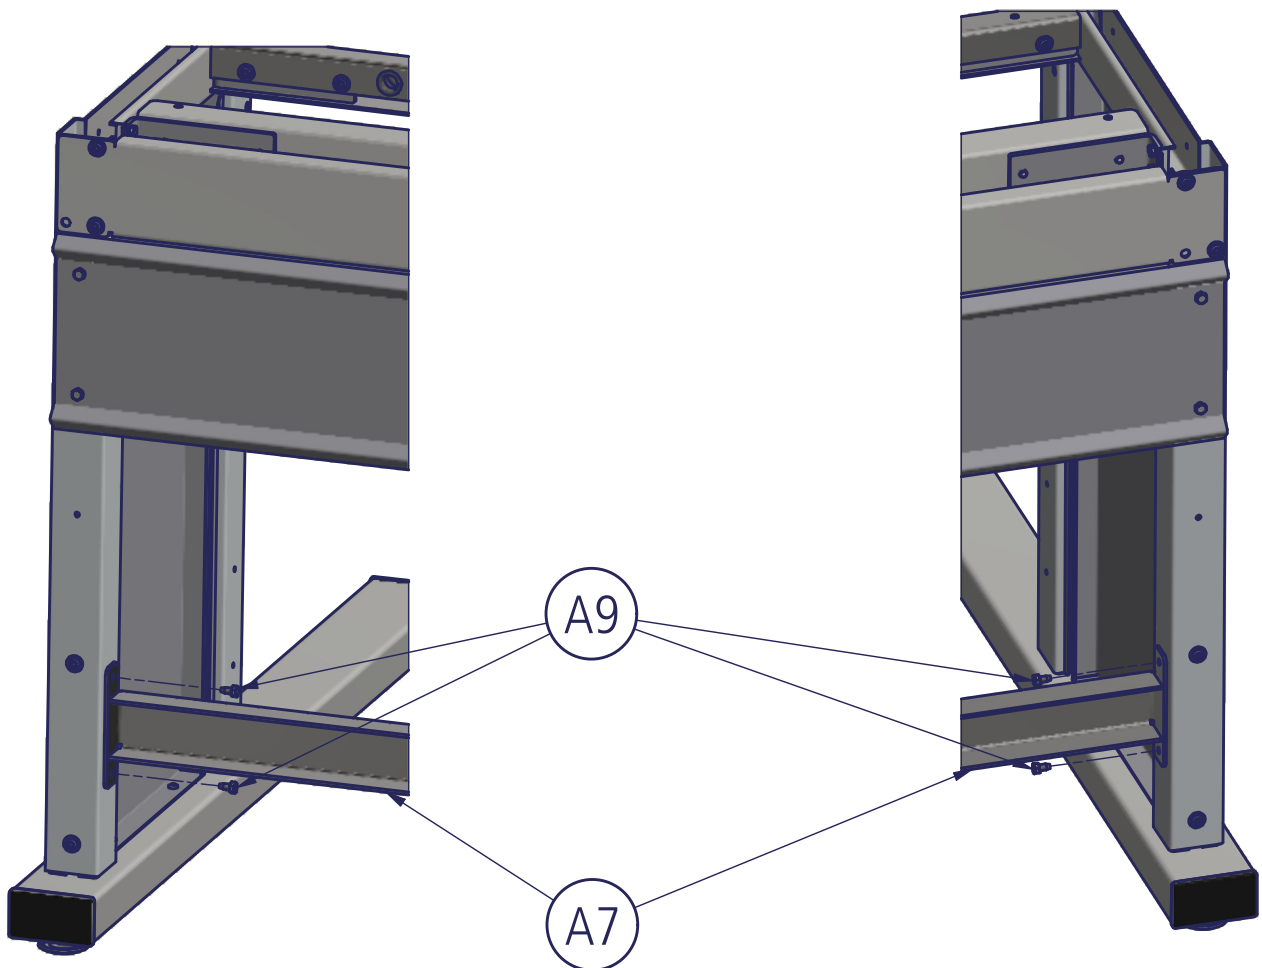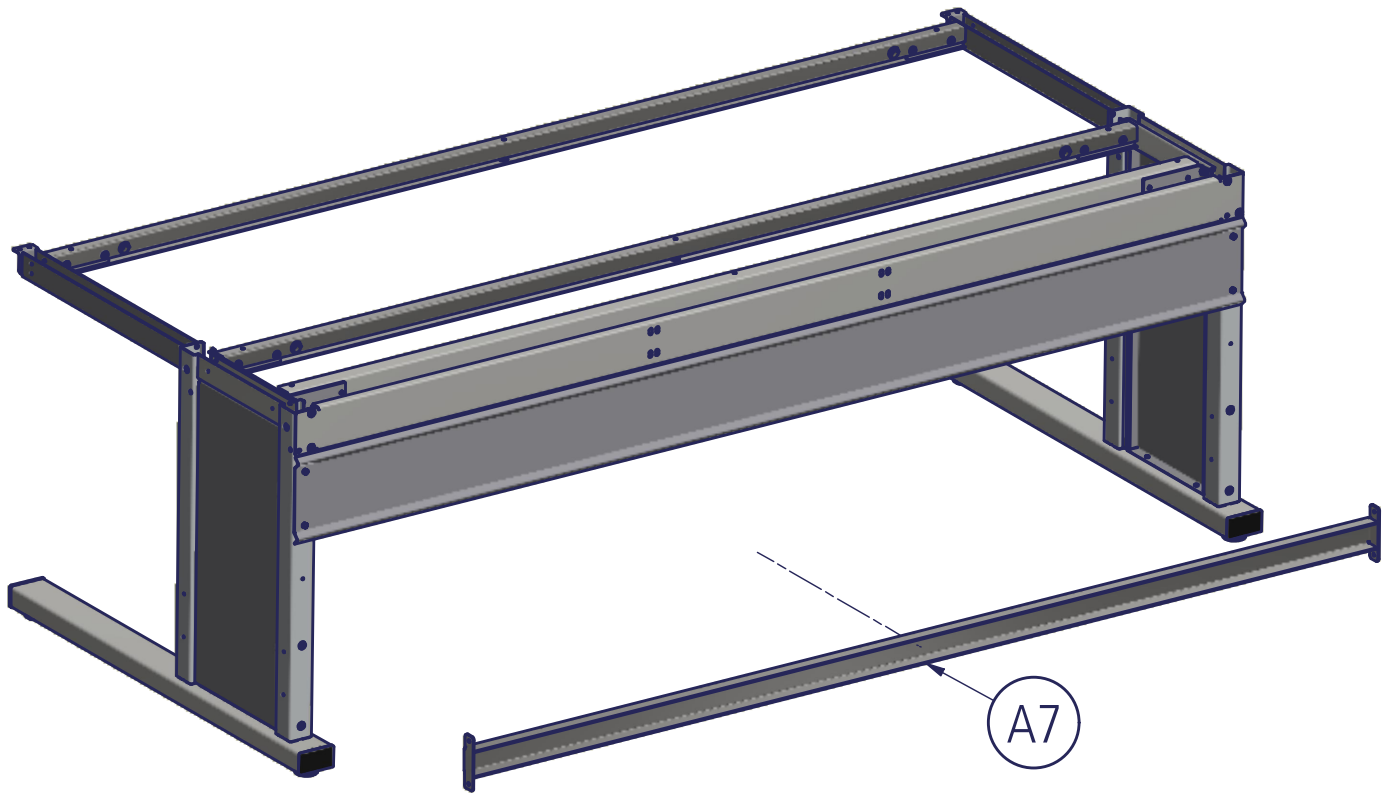

16.

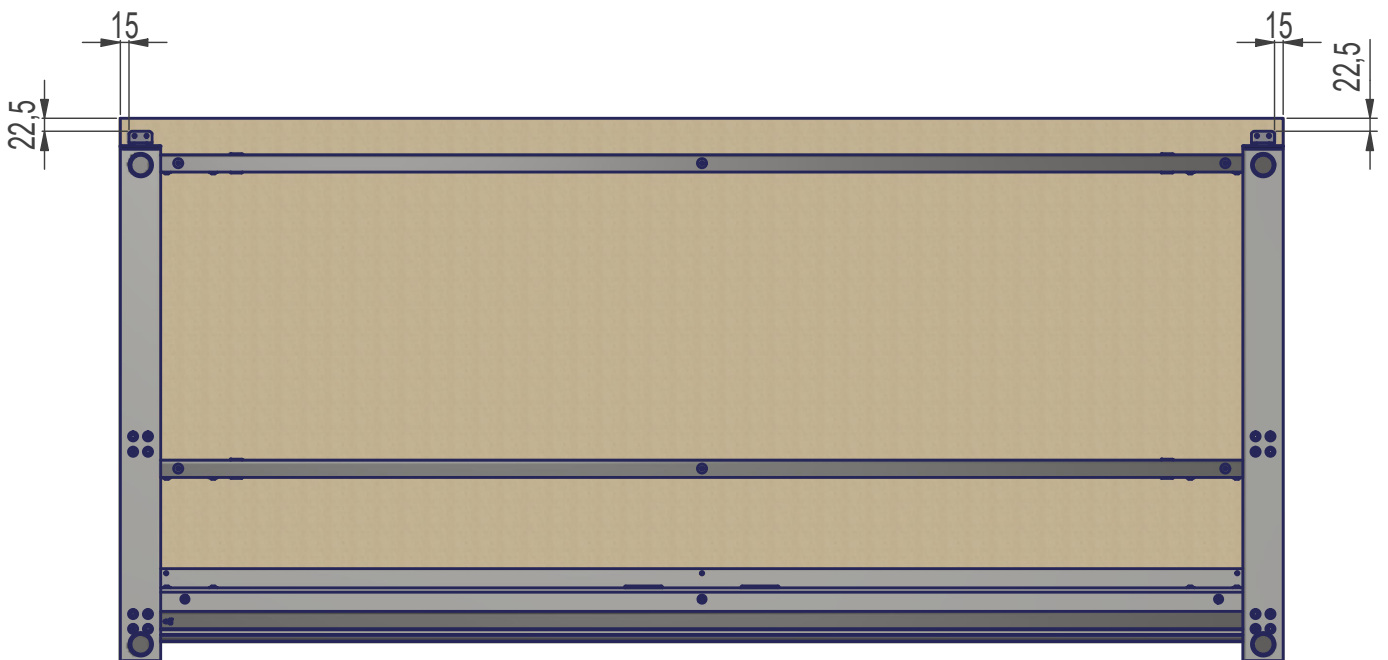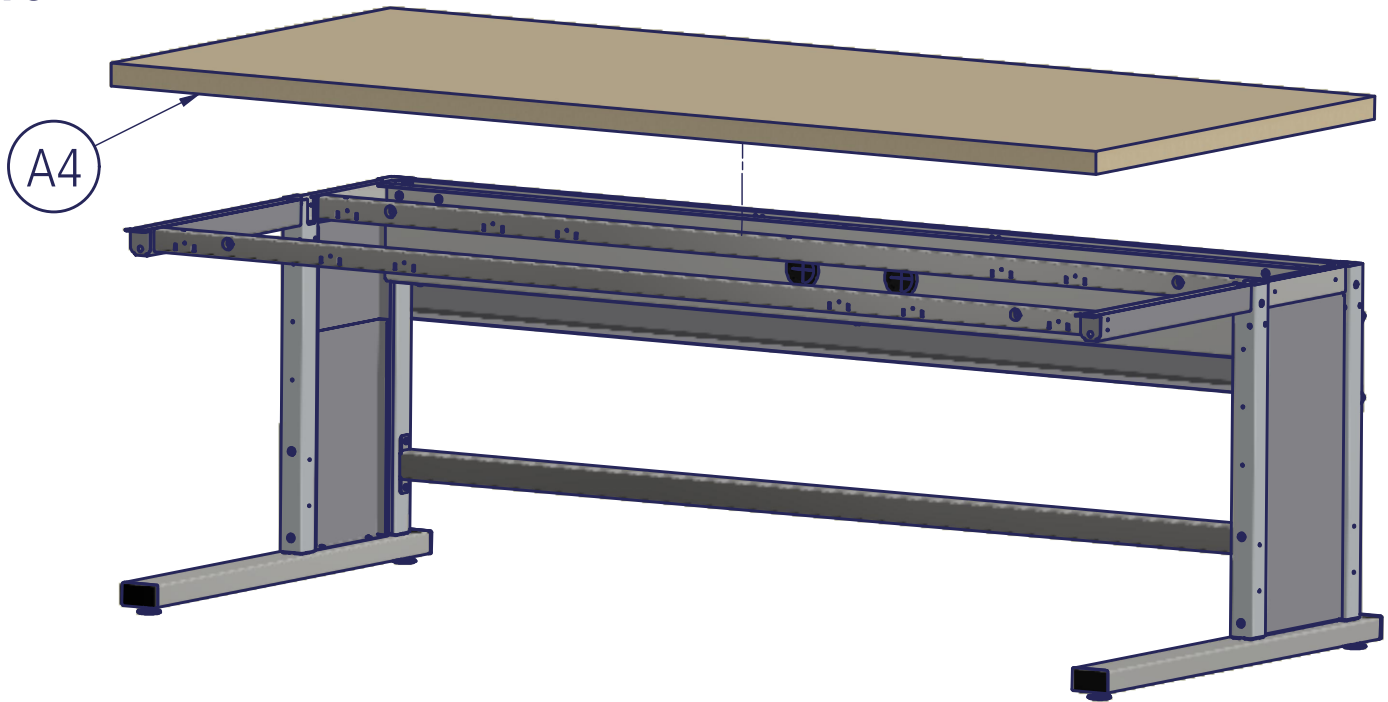

17.

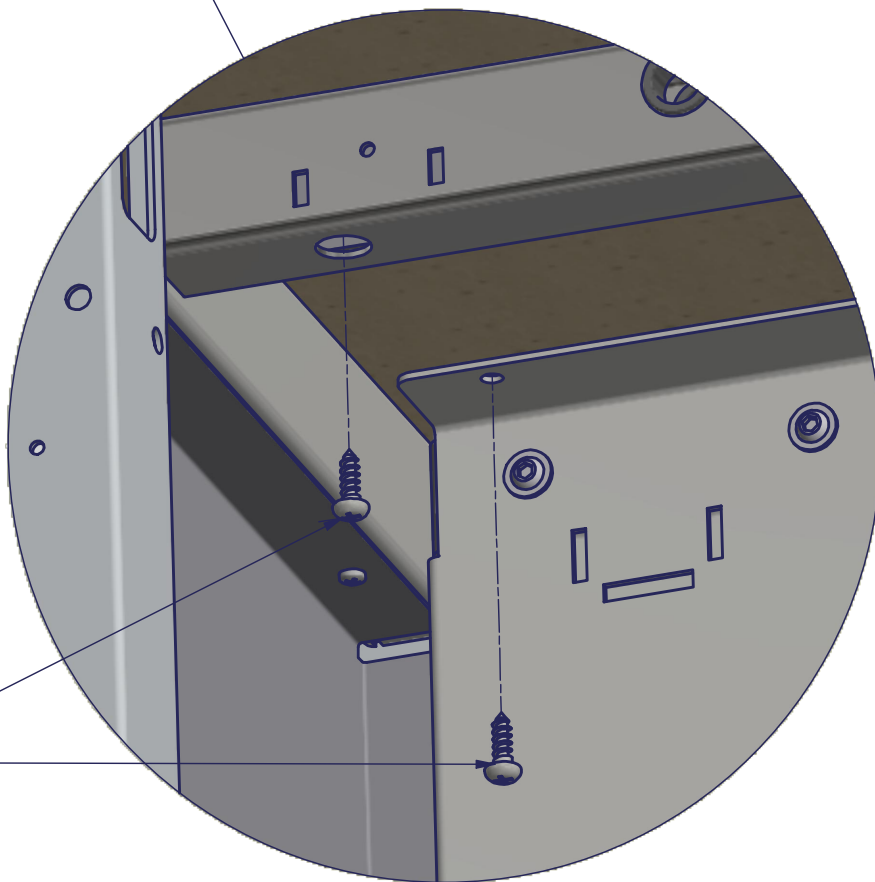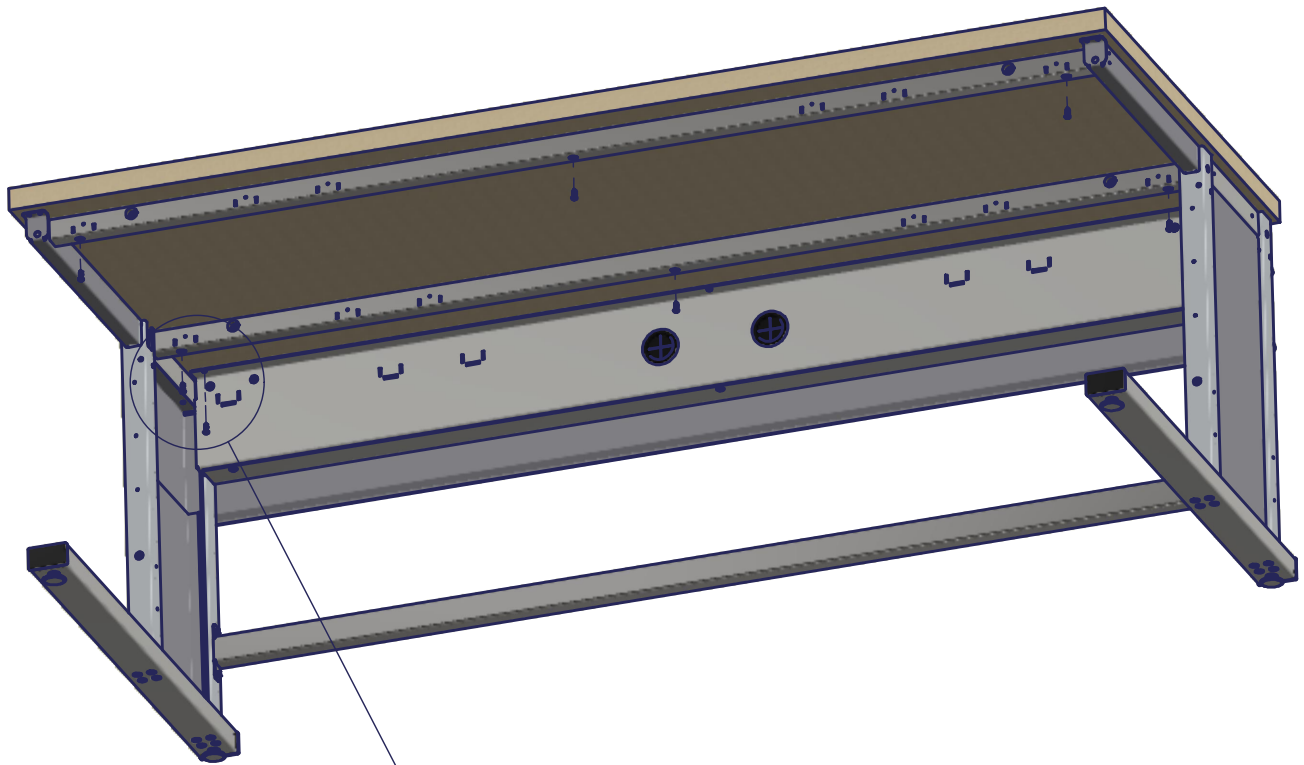

9x(A13)