



Montageanleitung


Workergo C-Fuß, Kurbel

Assembling instructions for


Workergo C-foot, crank

Instruction de montage


Workergo C pied, manivelle

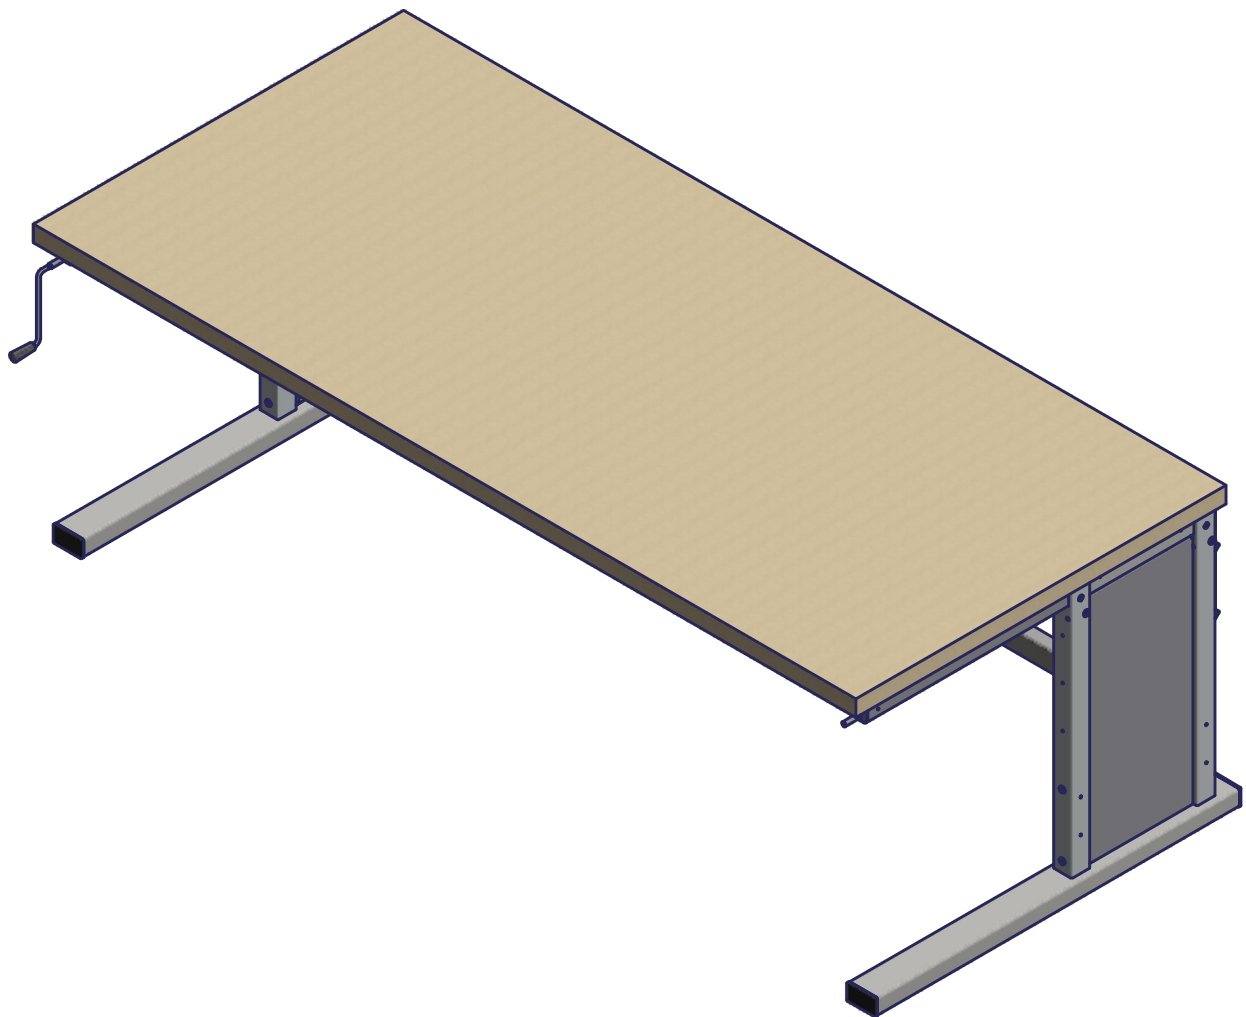

1x (A1)

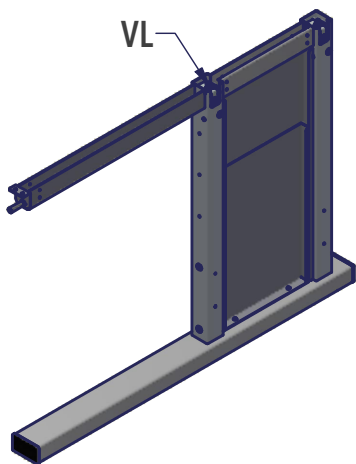


1x (A2)

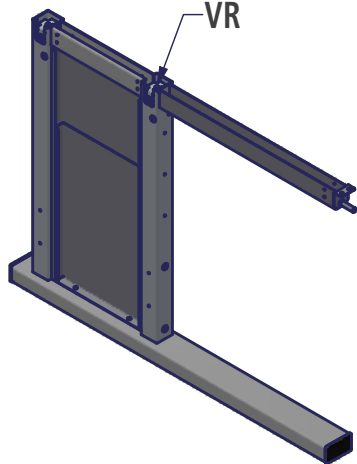


2x (A3)




1x (A4)

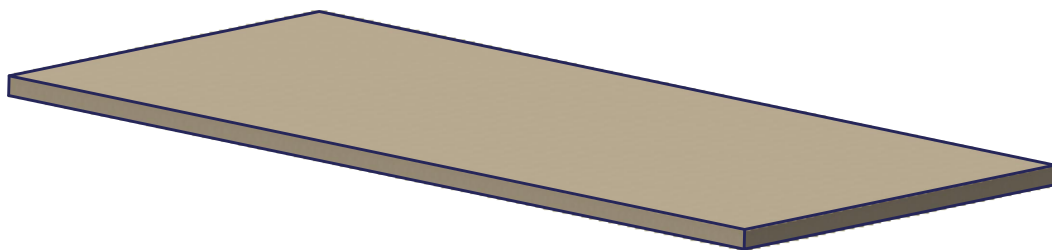


1x (A5)

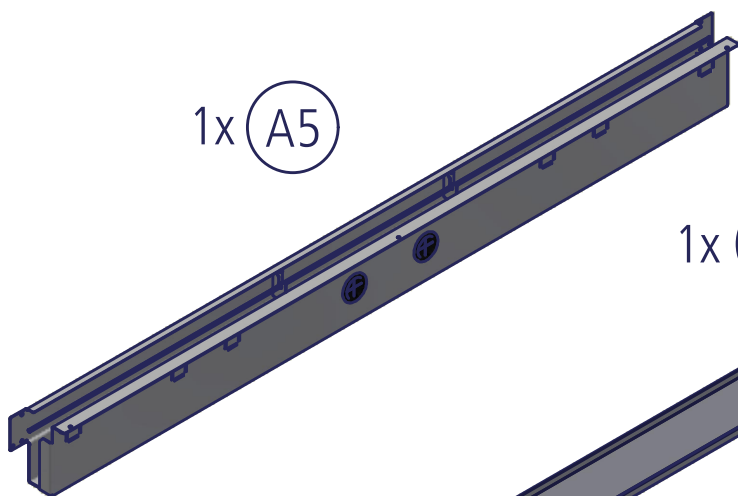


1x (A6)

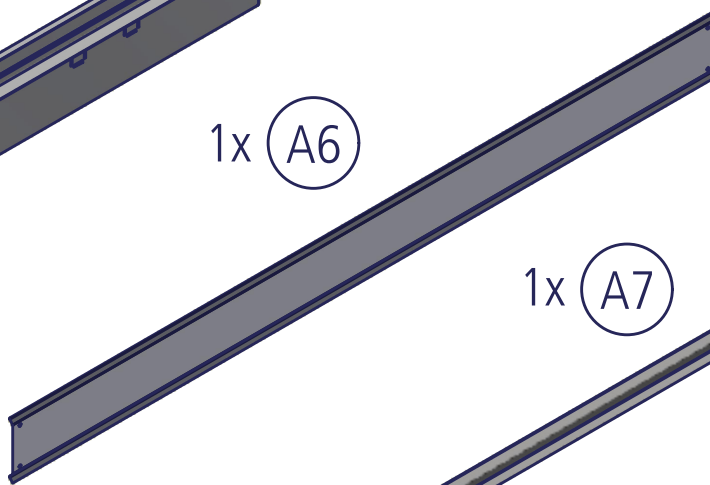


1x (A7)

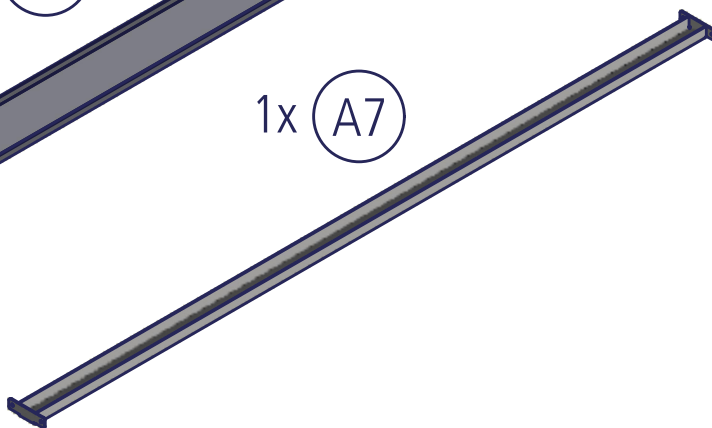


6x (A8)

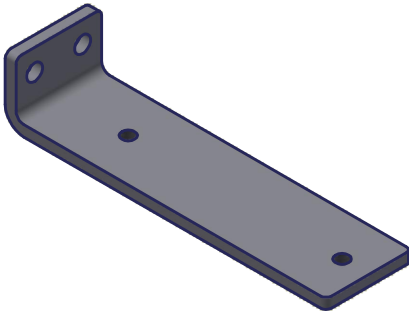


1x (A9)

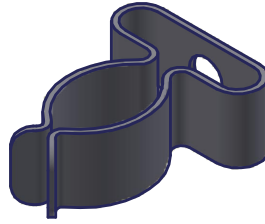

1x (A10)

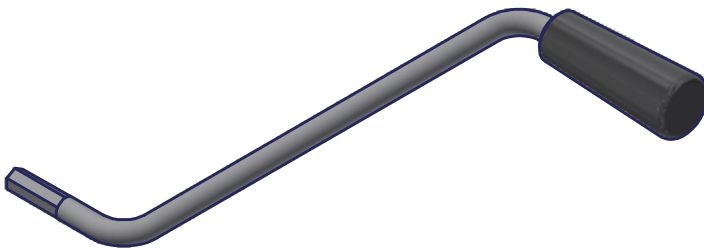


20x (A11)
4,8 x 9,5

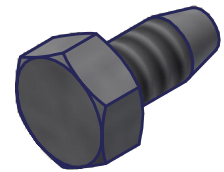


16x (A12)

M6 x 10

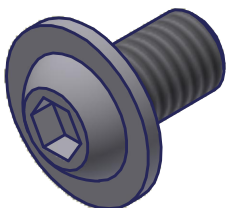


9x (A13)

5 x 16

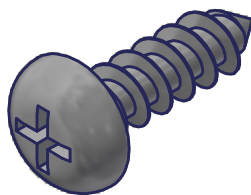


1x (A14)

3 x 20

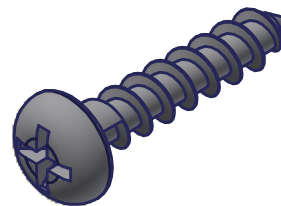


2x (A16)


M6

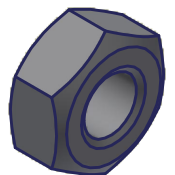


1.

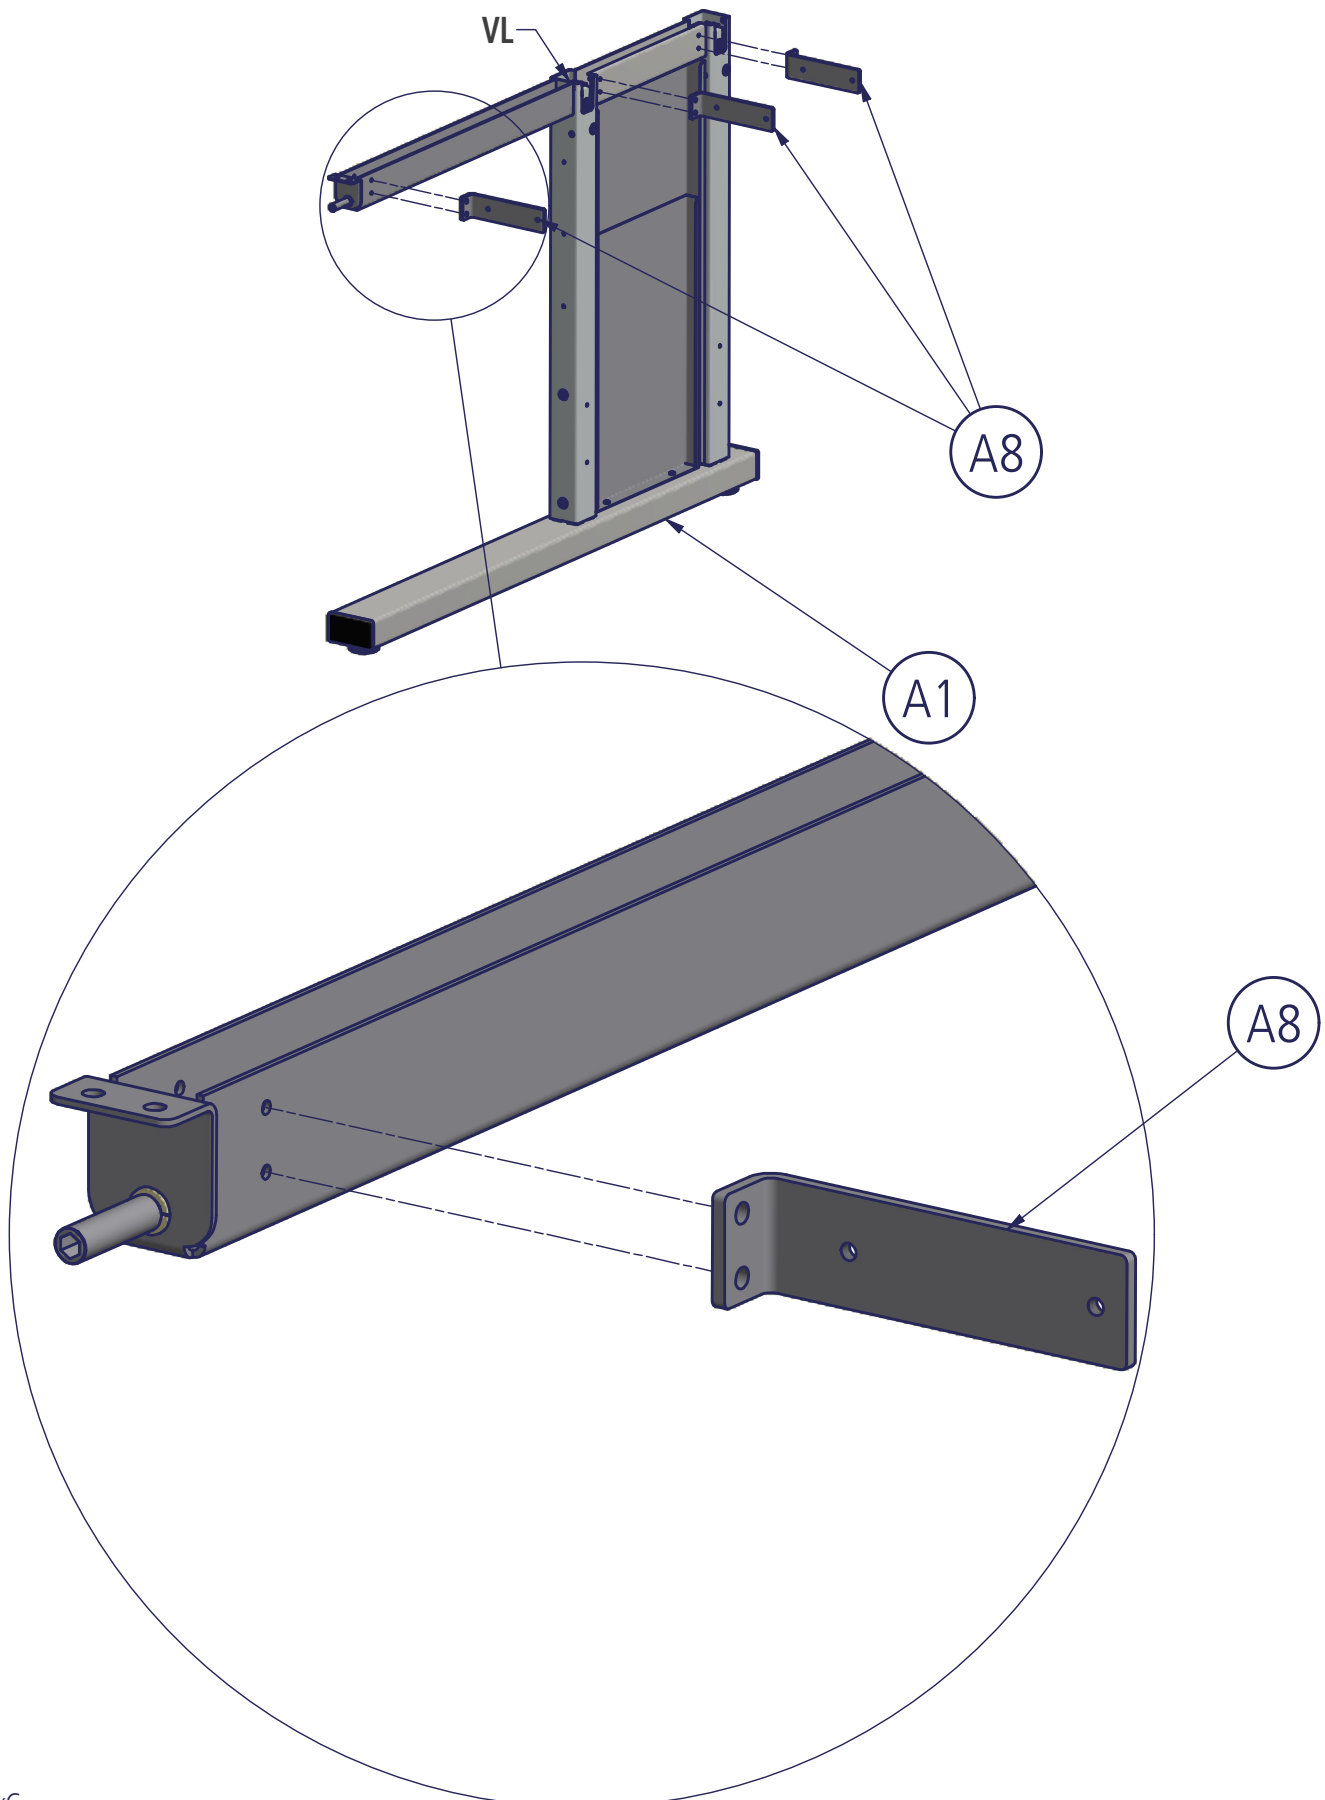


2.

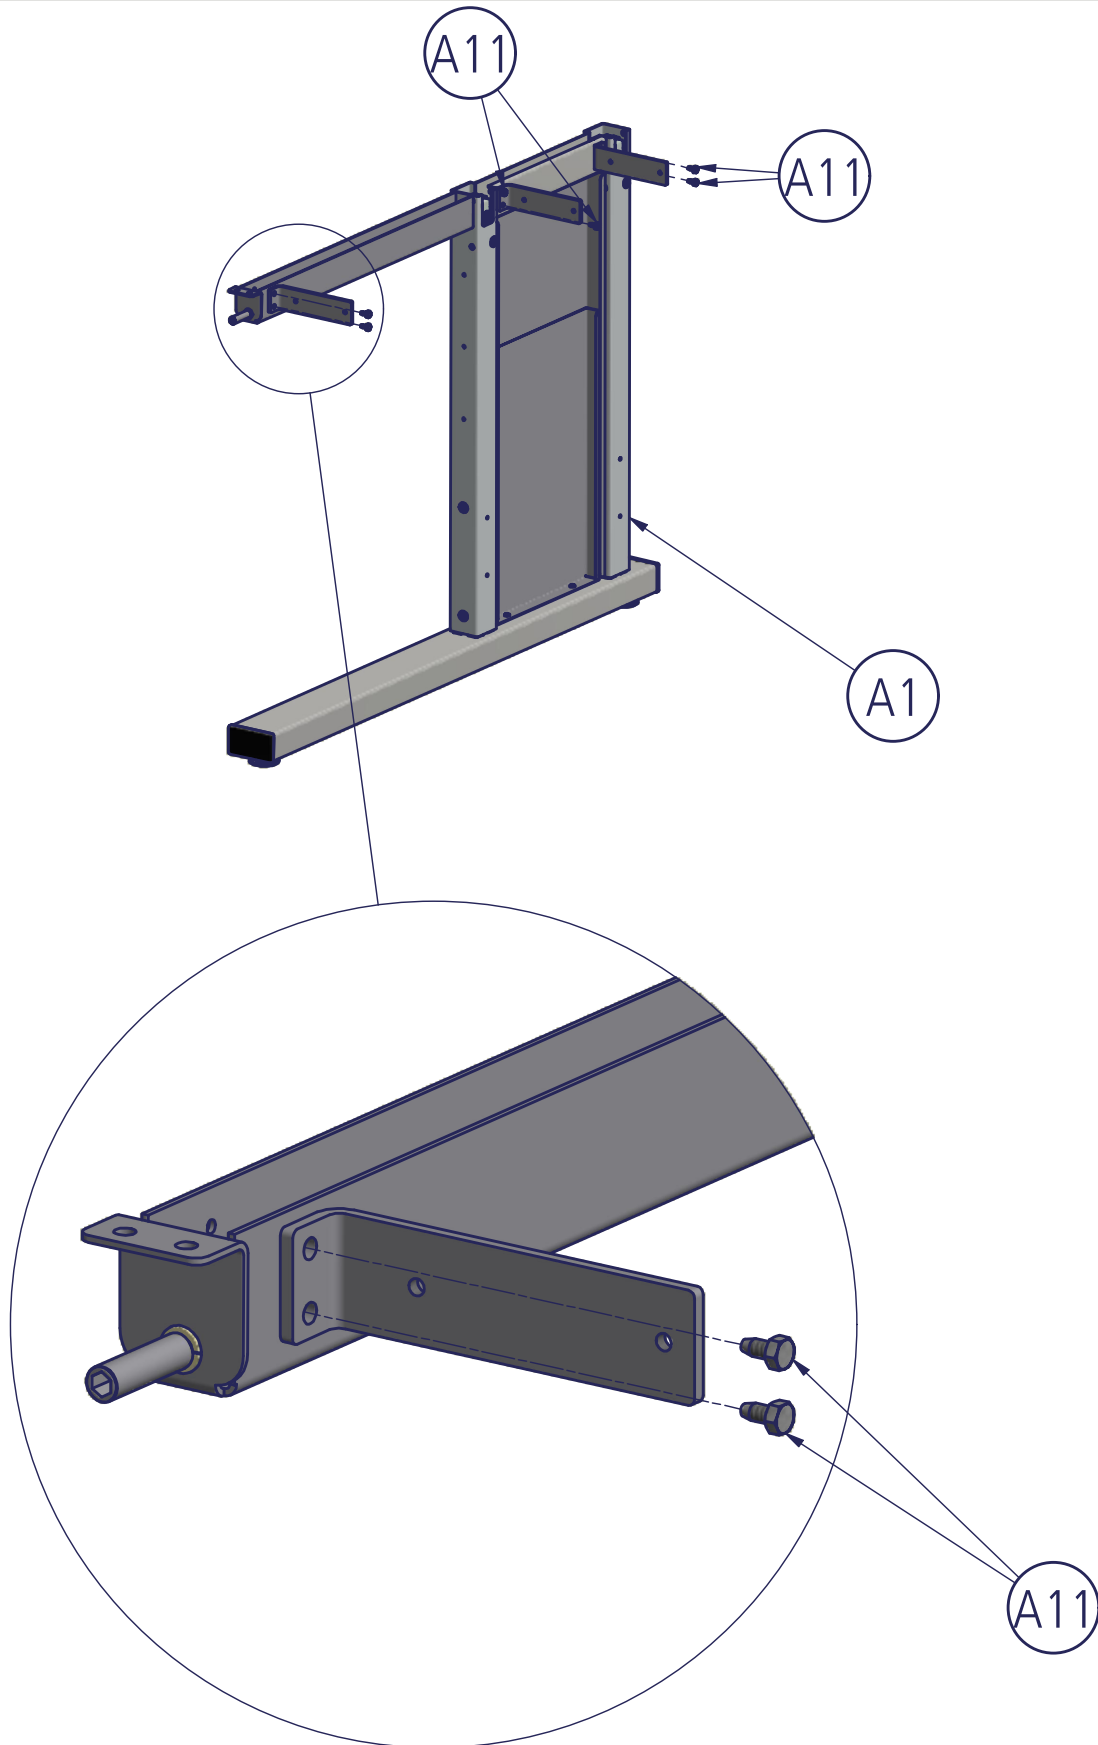


3.

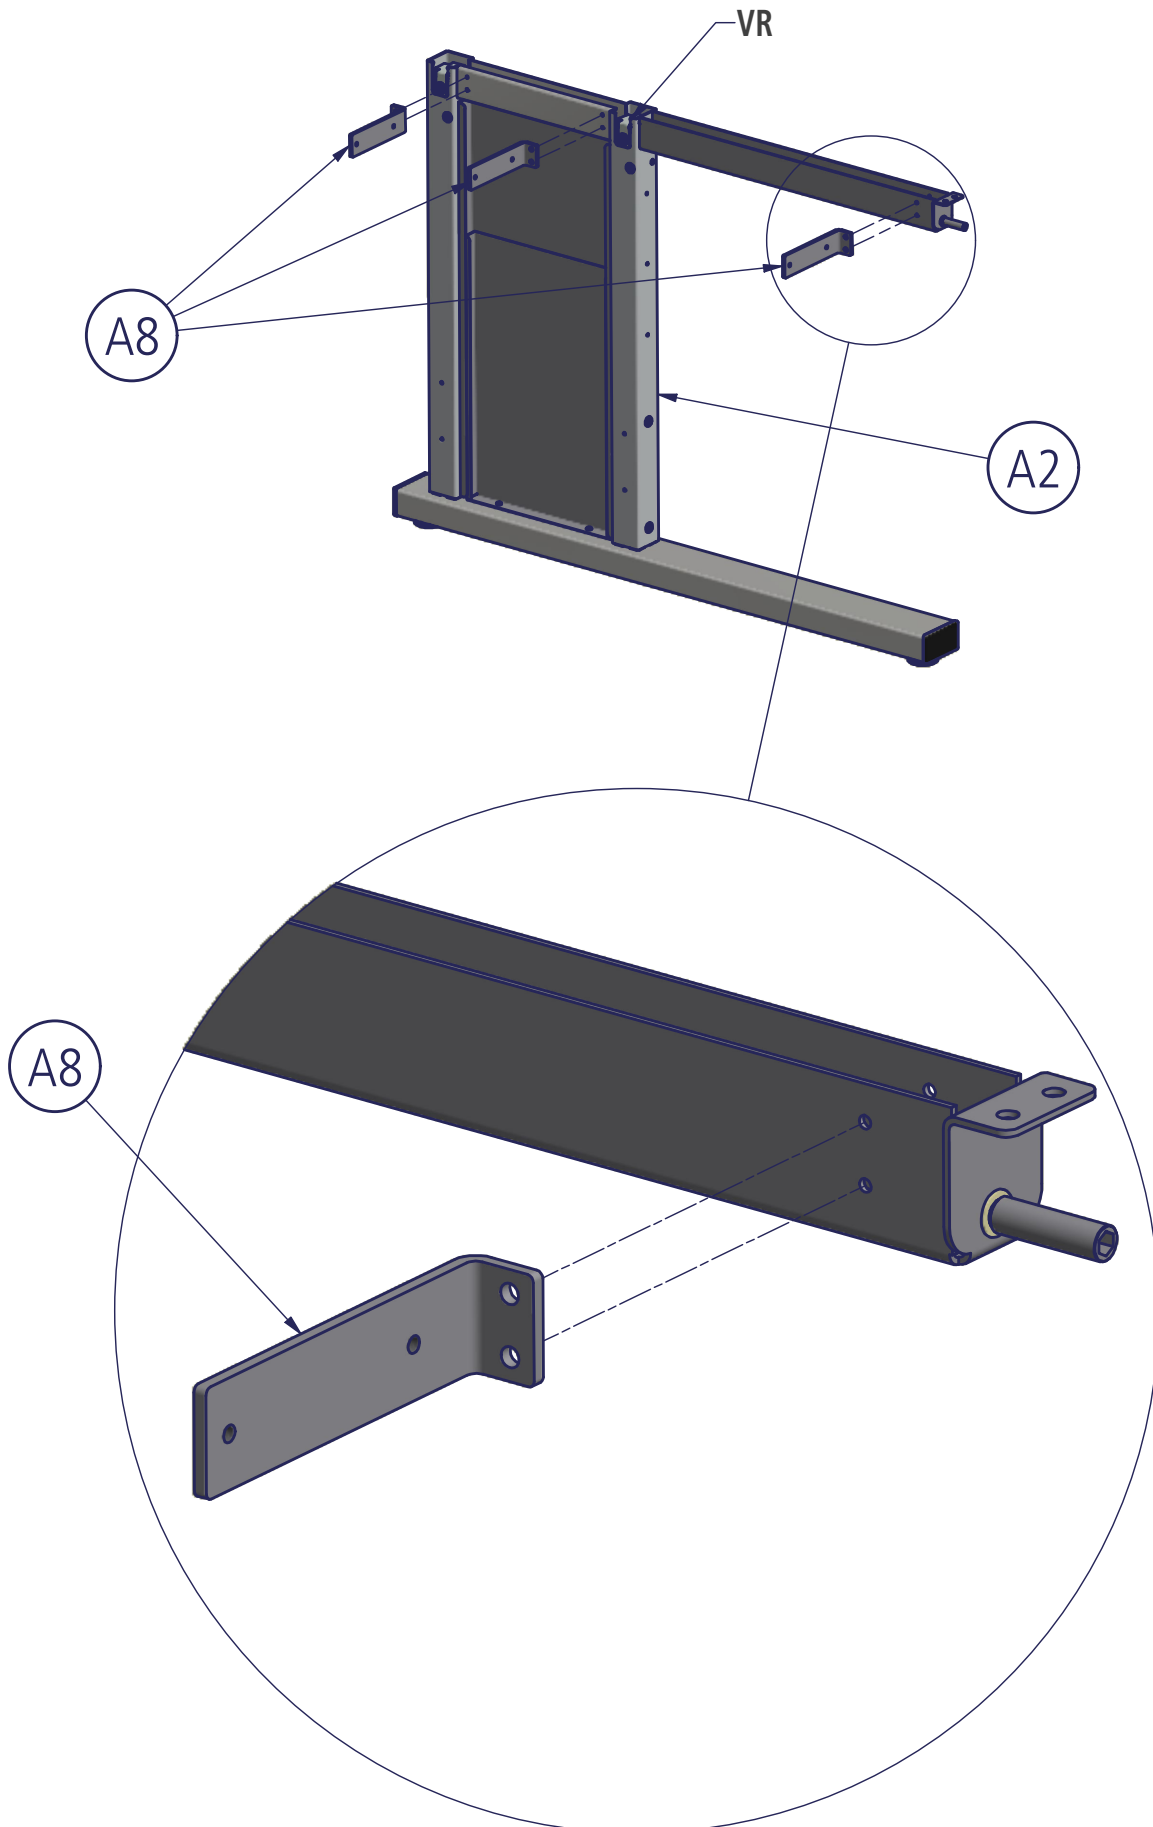


4.

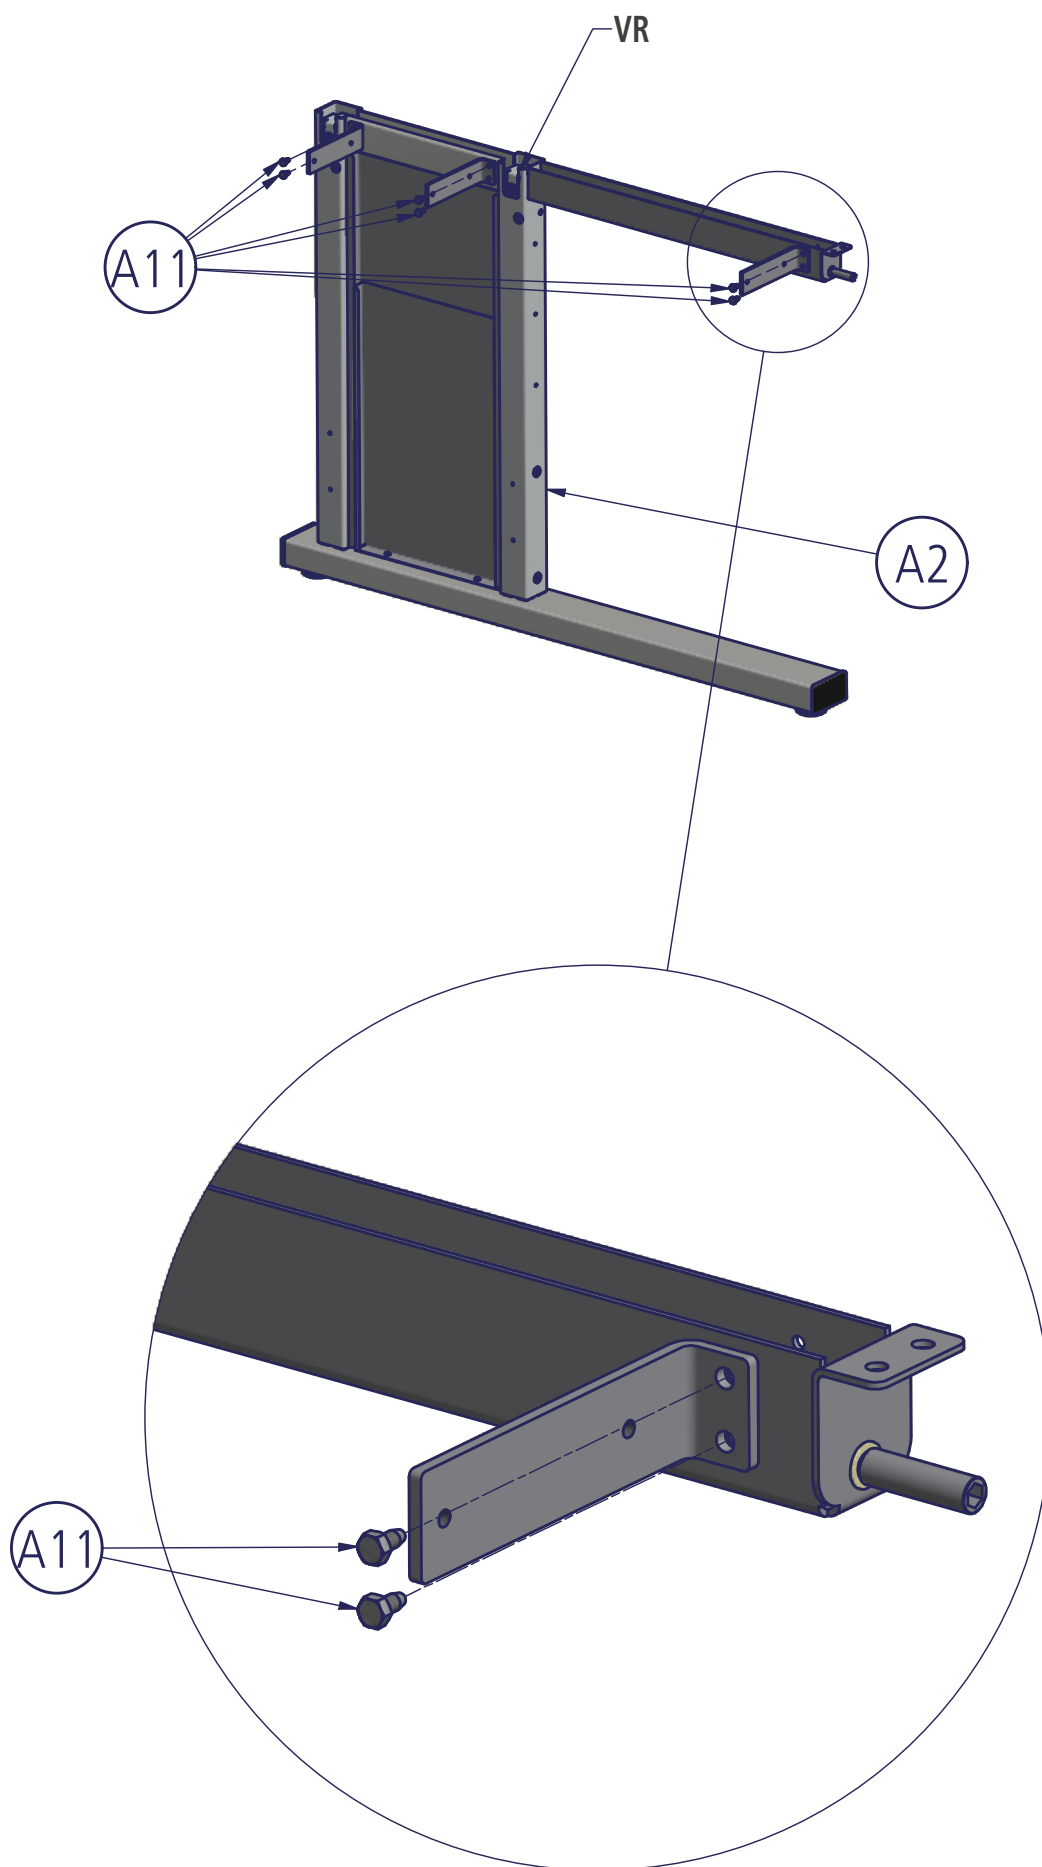


5.

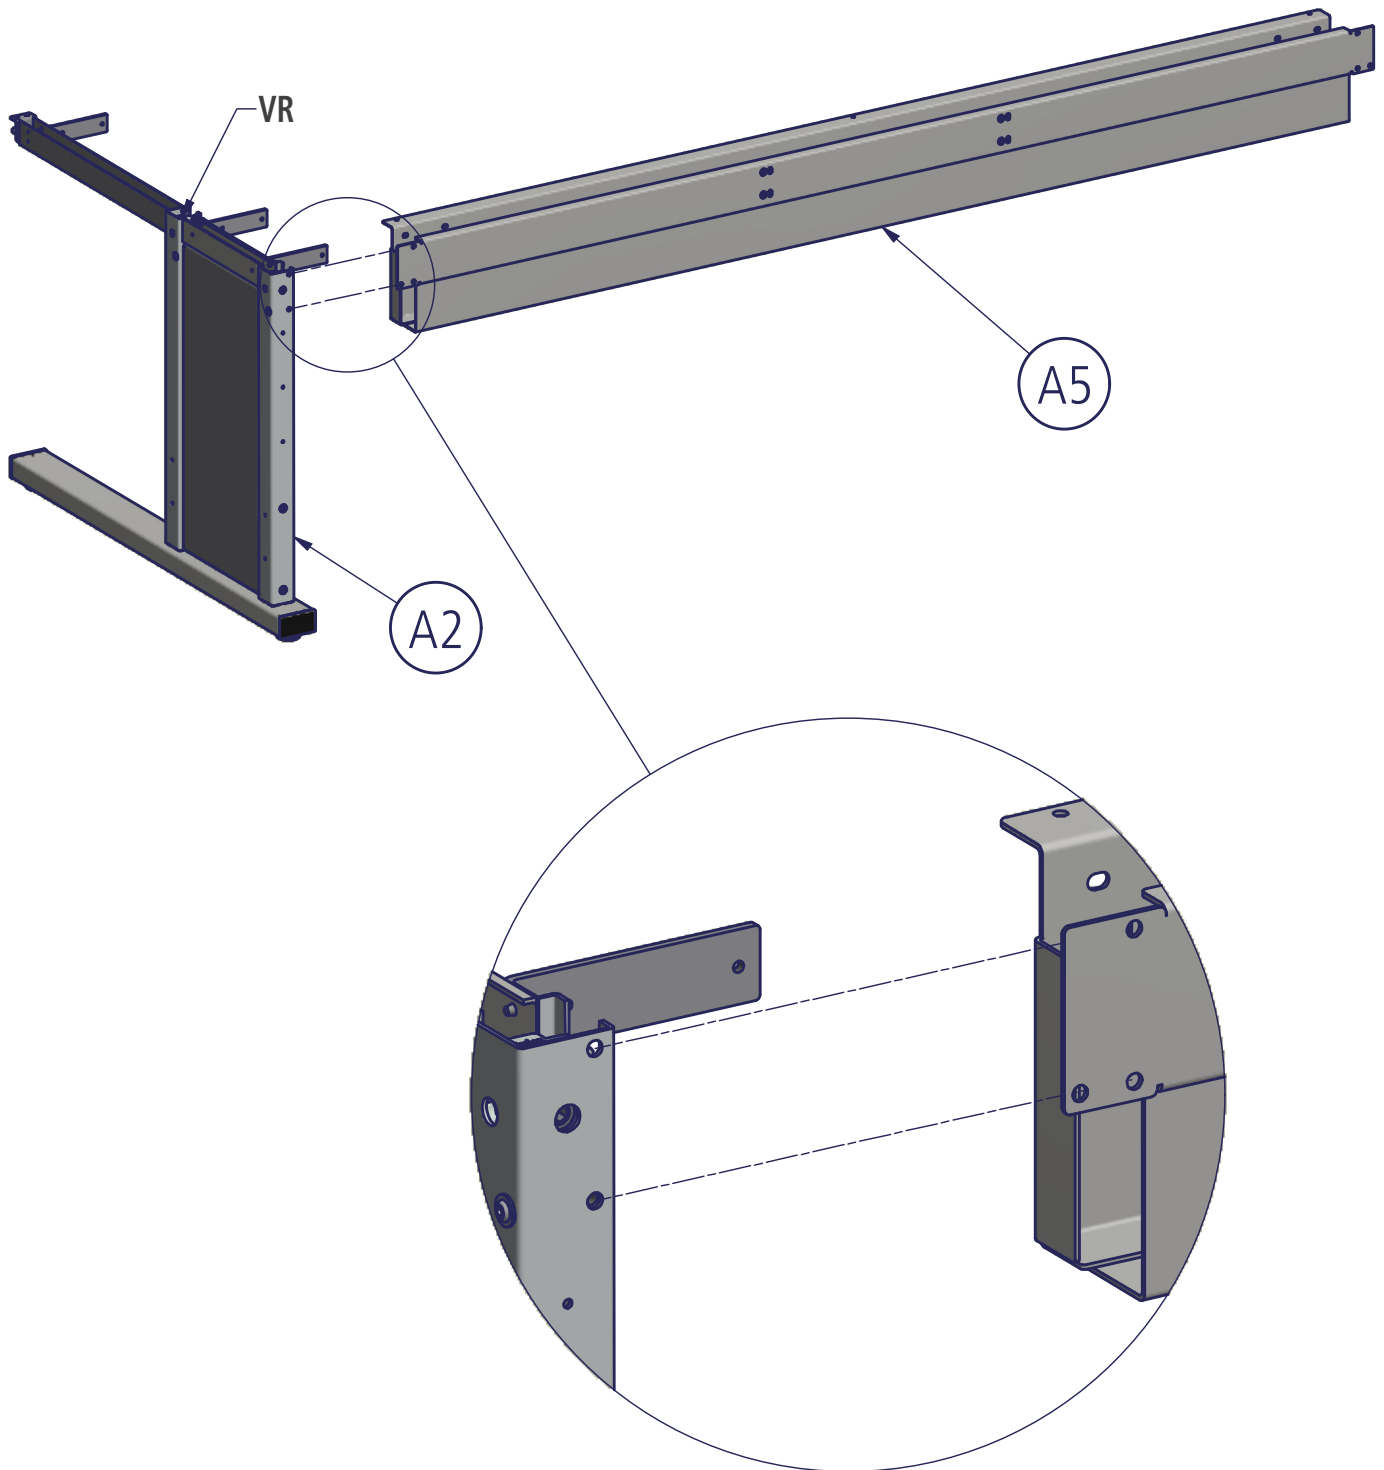


6.

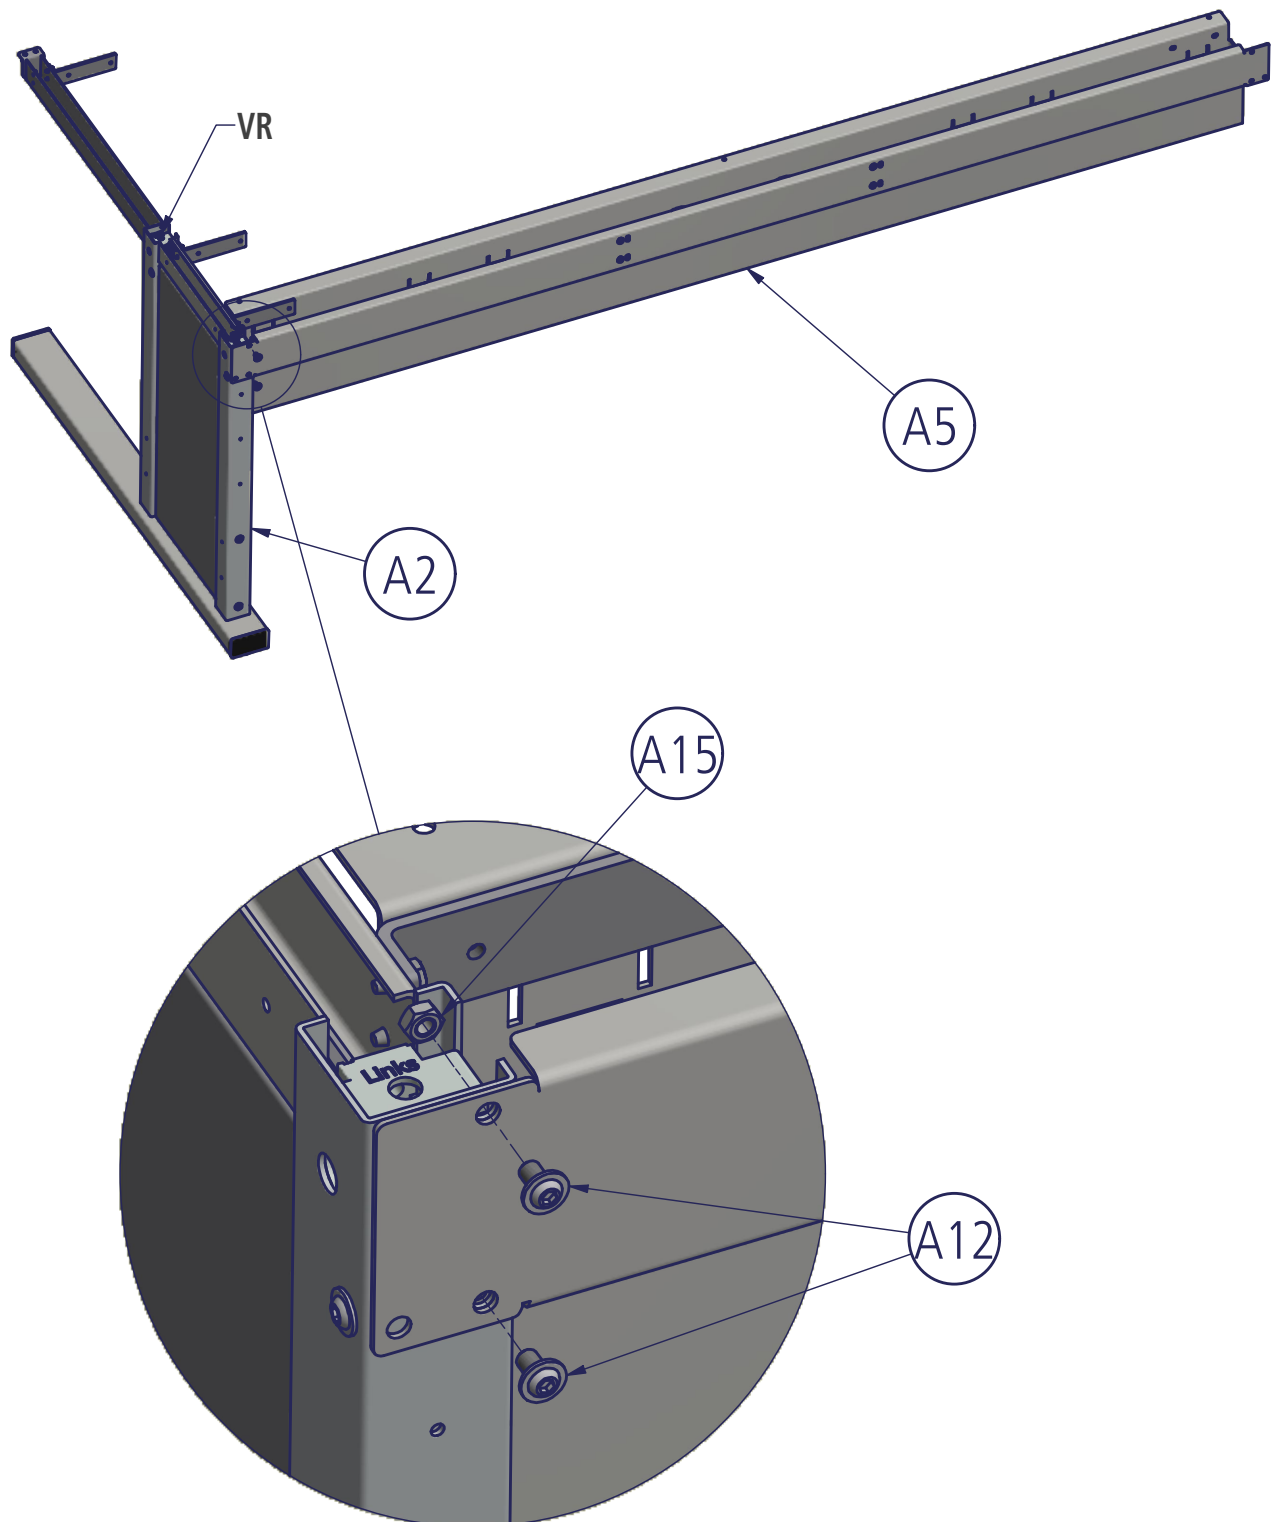


7.

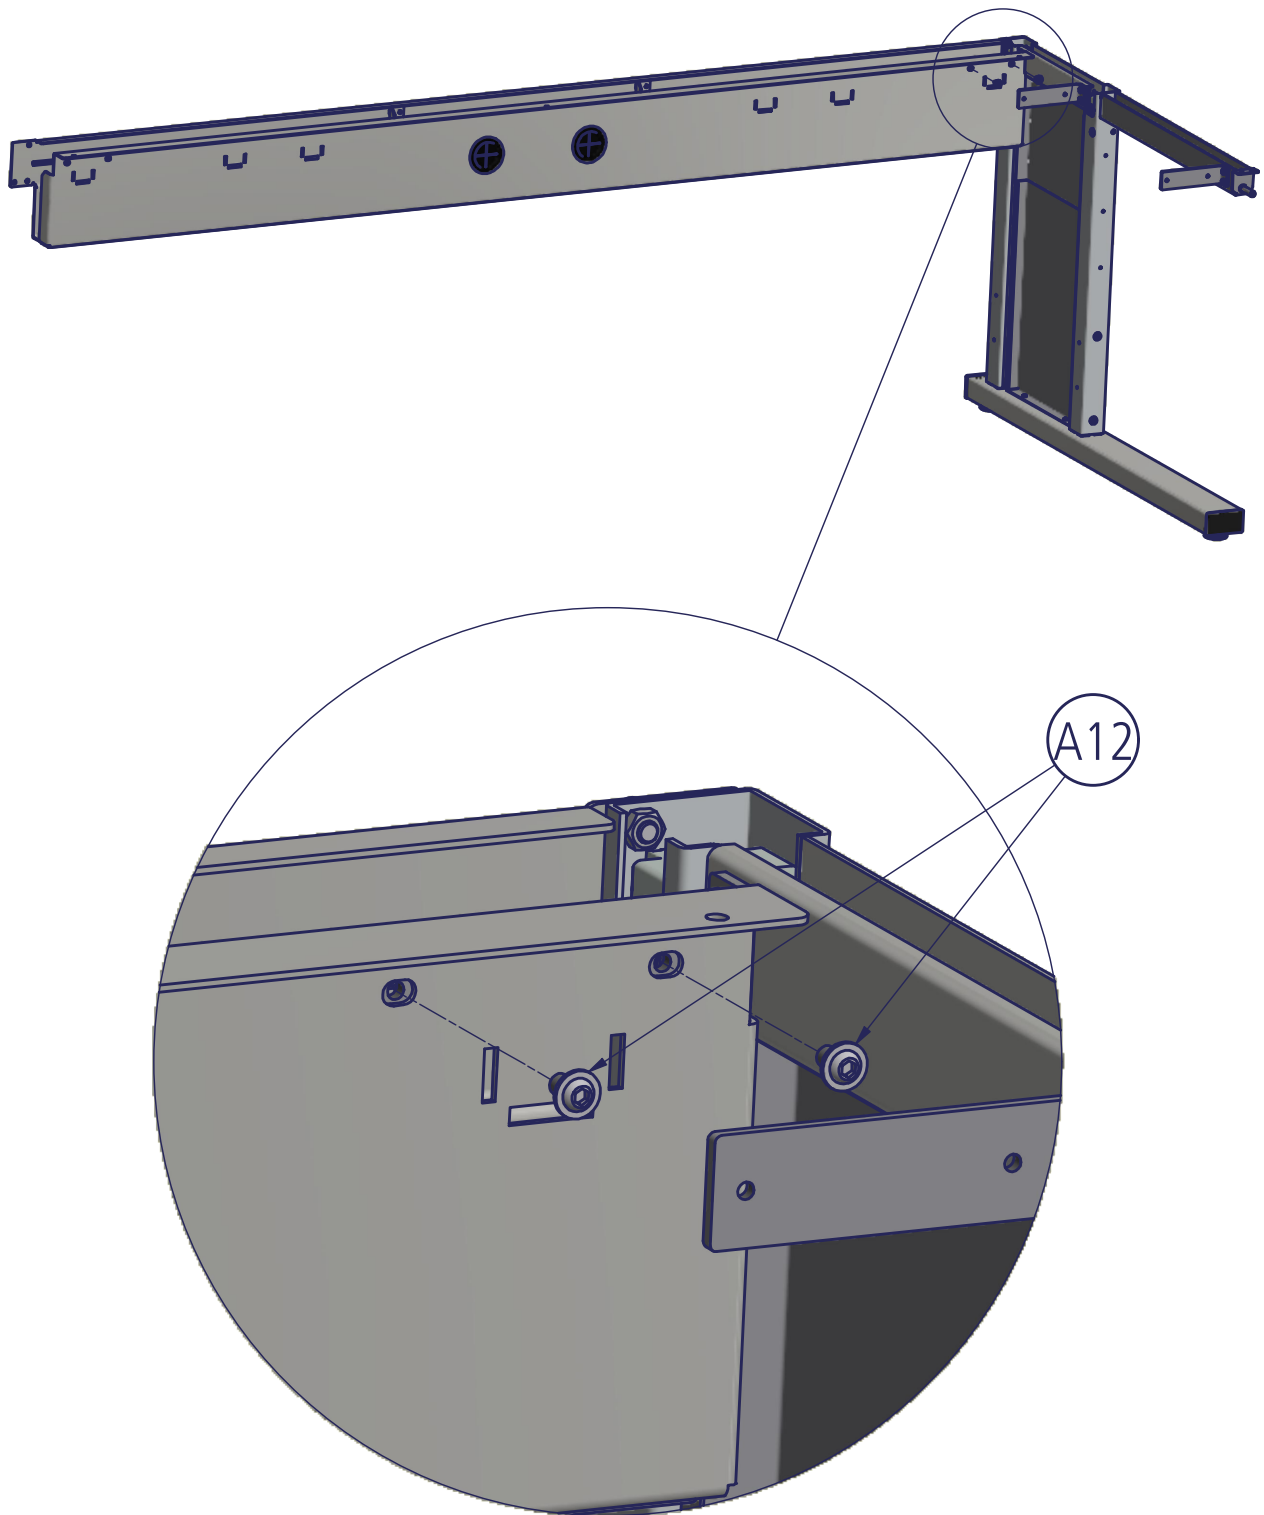


8.

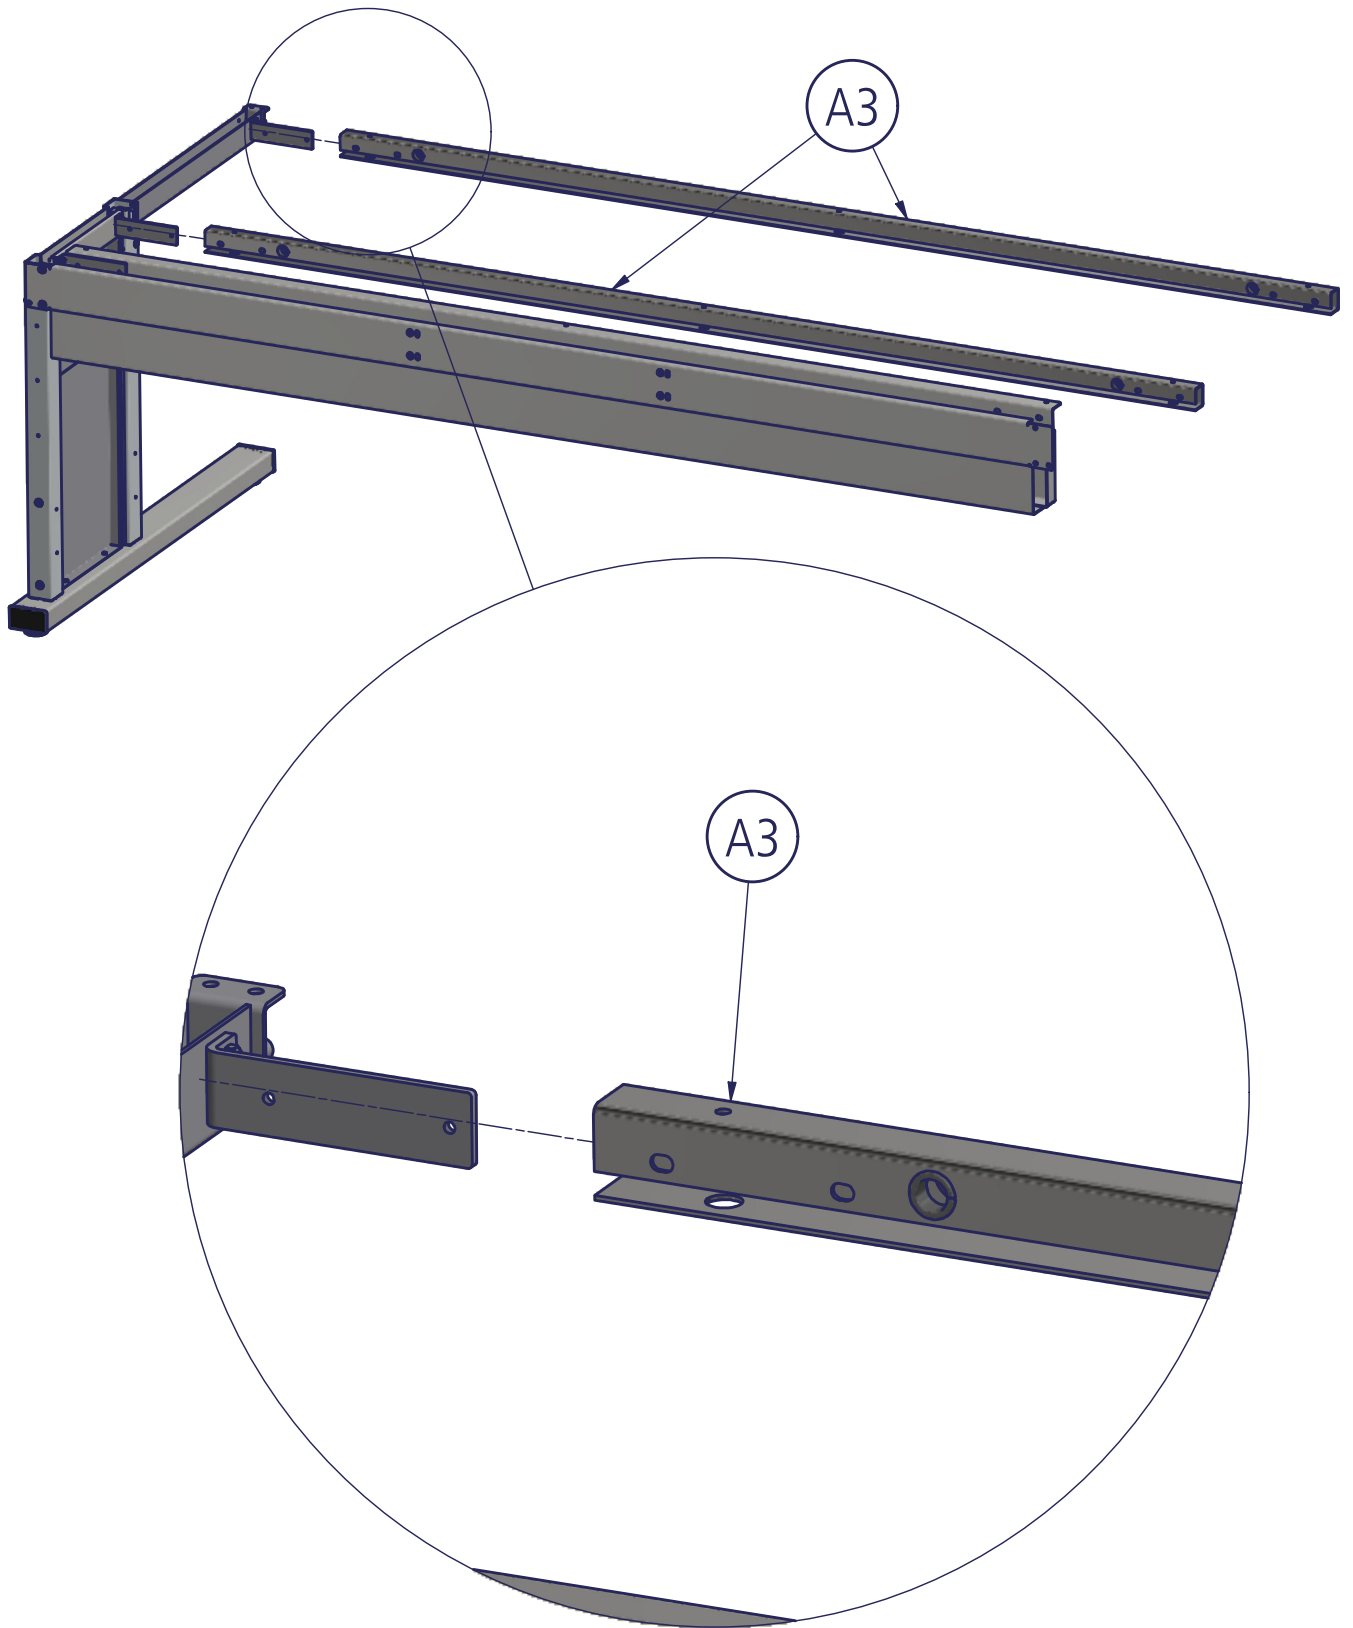


9.

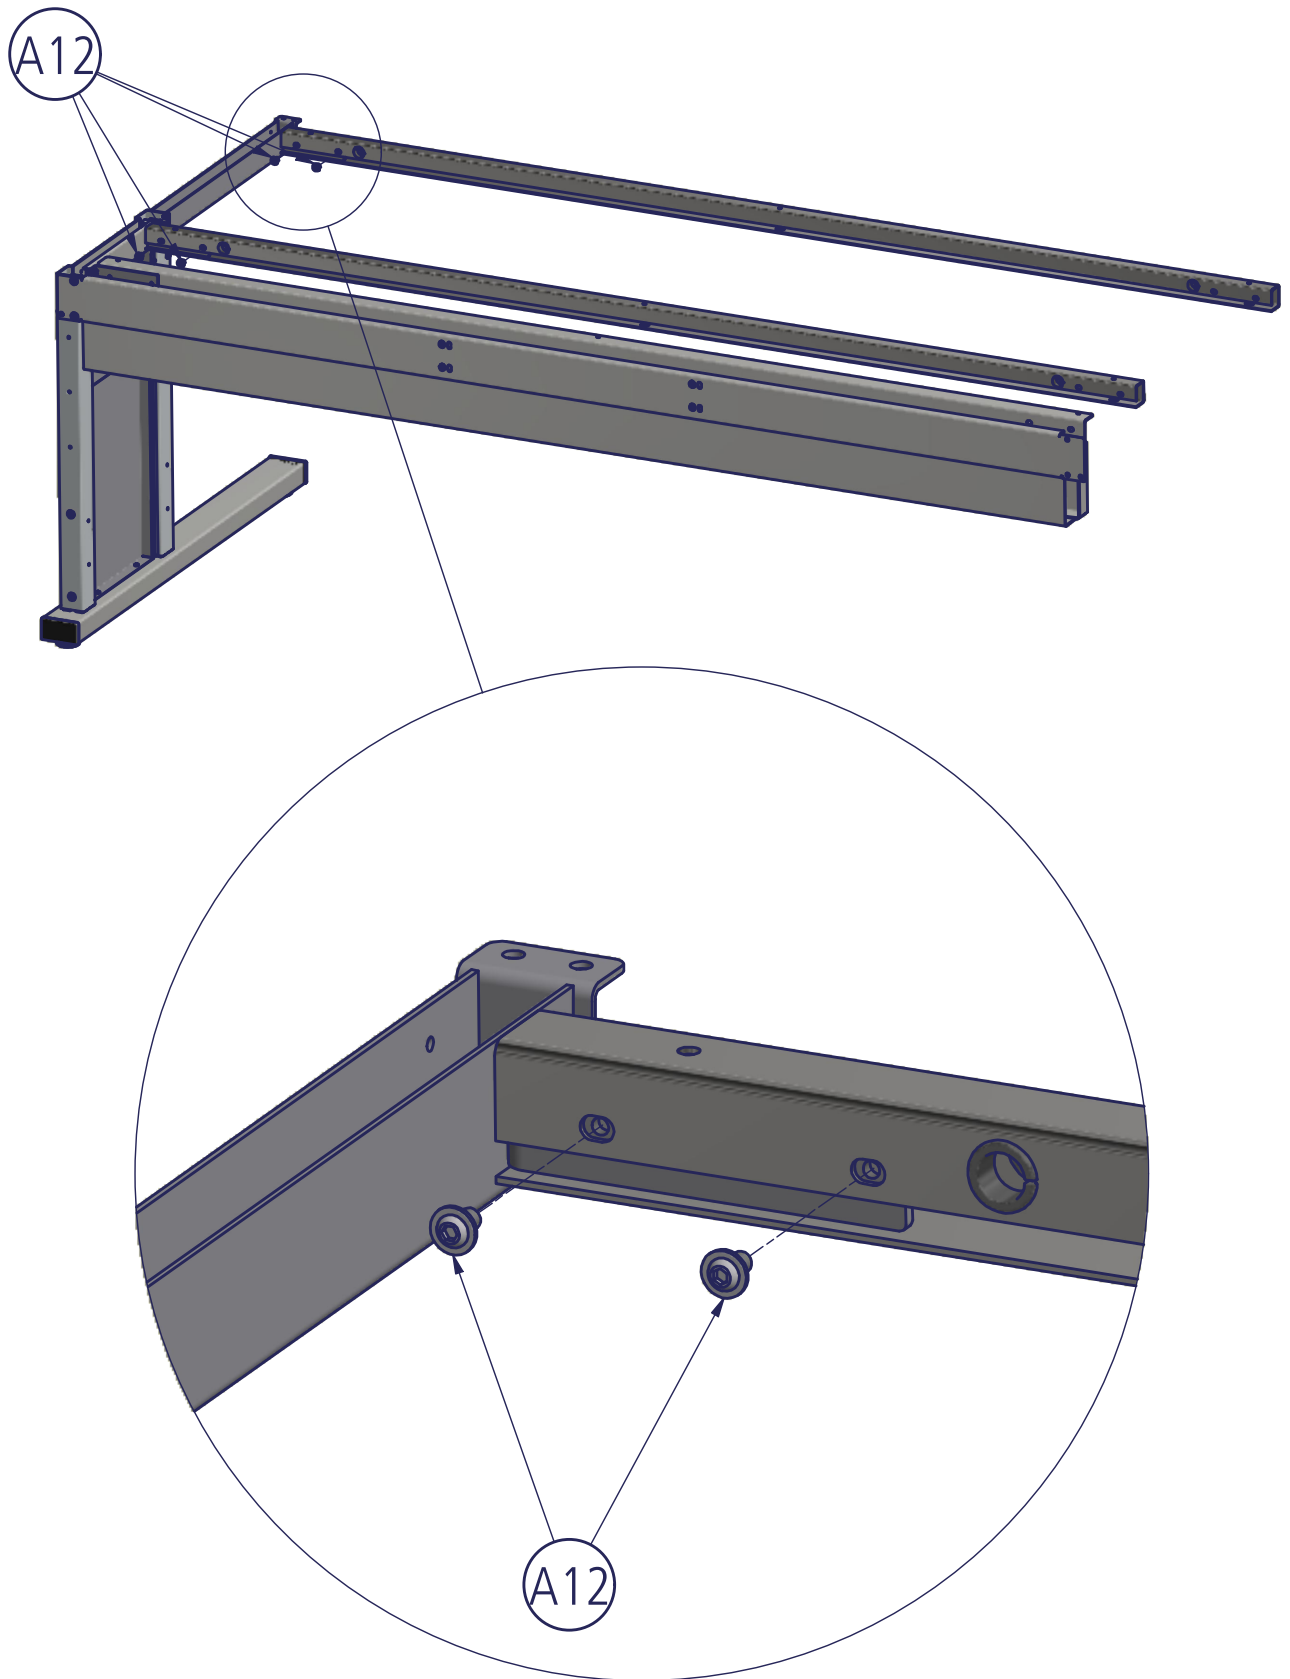


10.

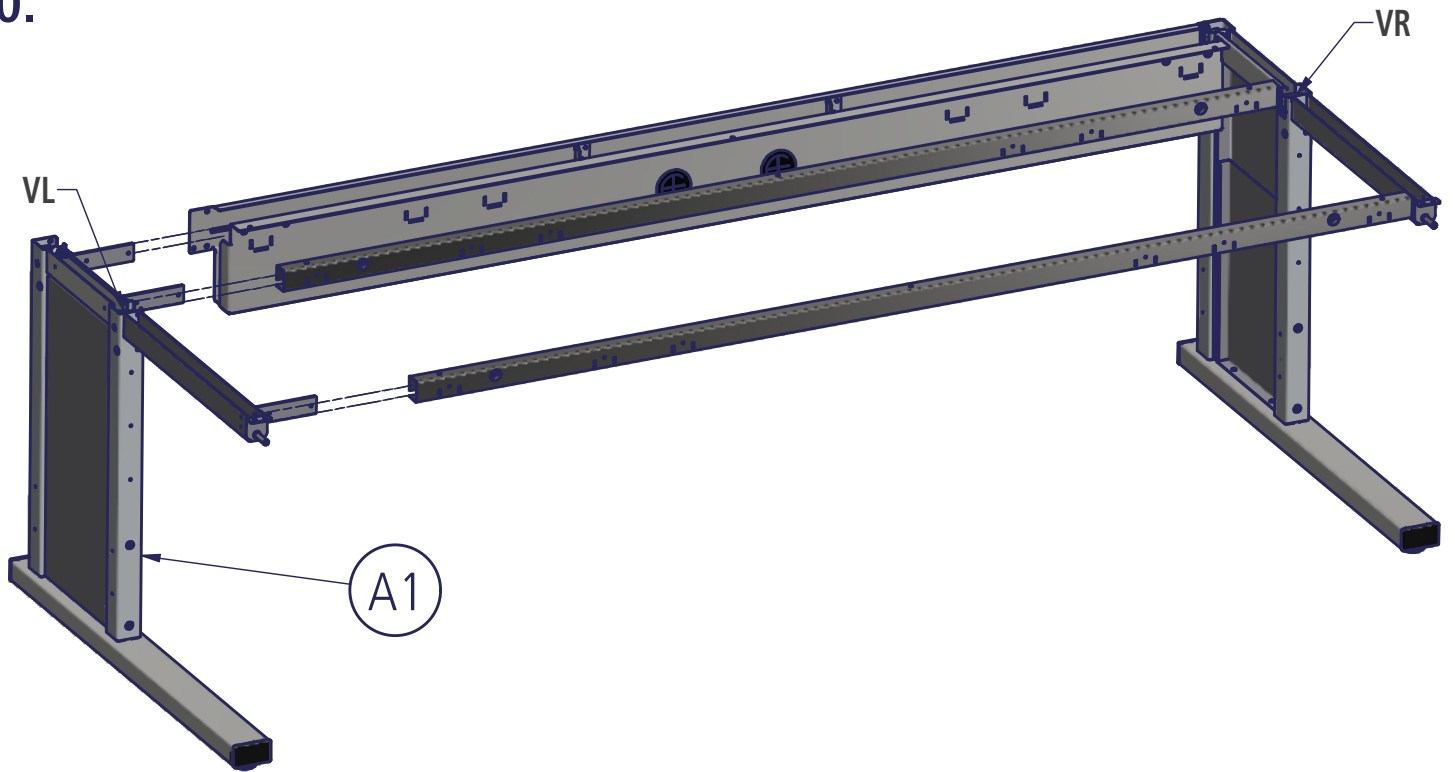


11.

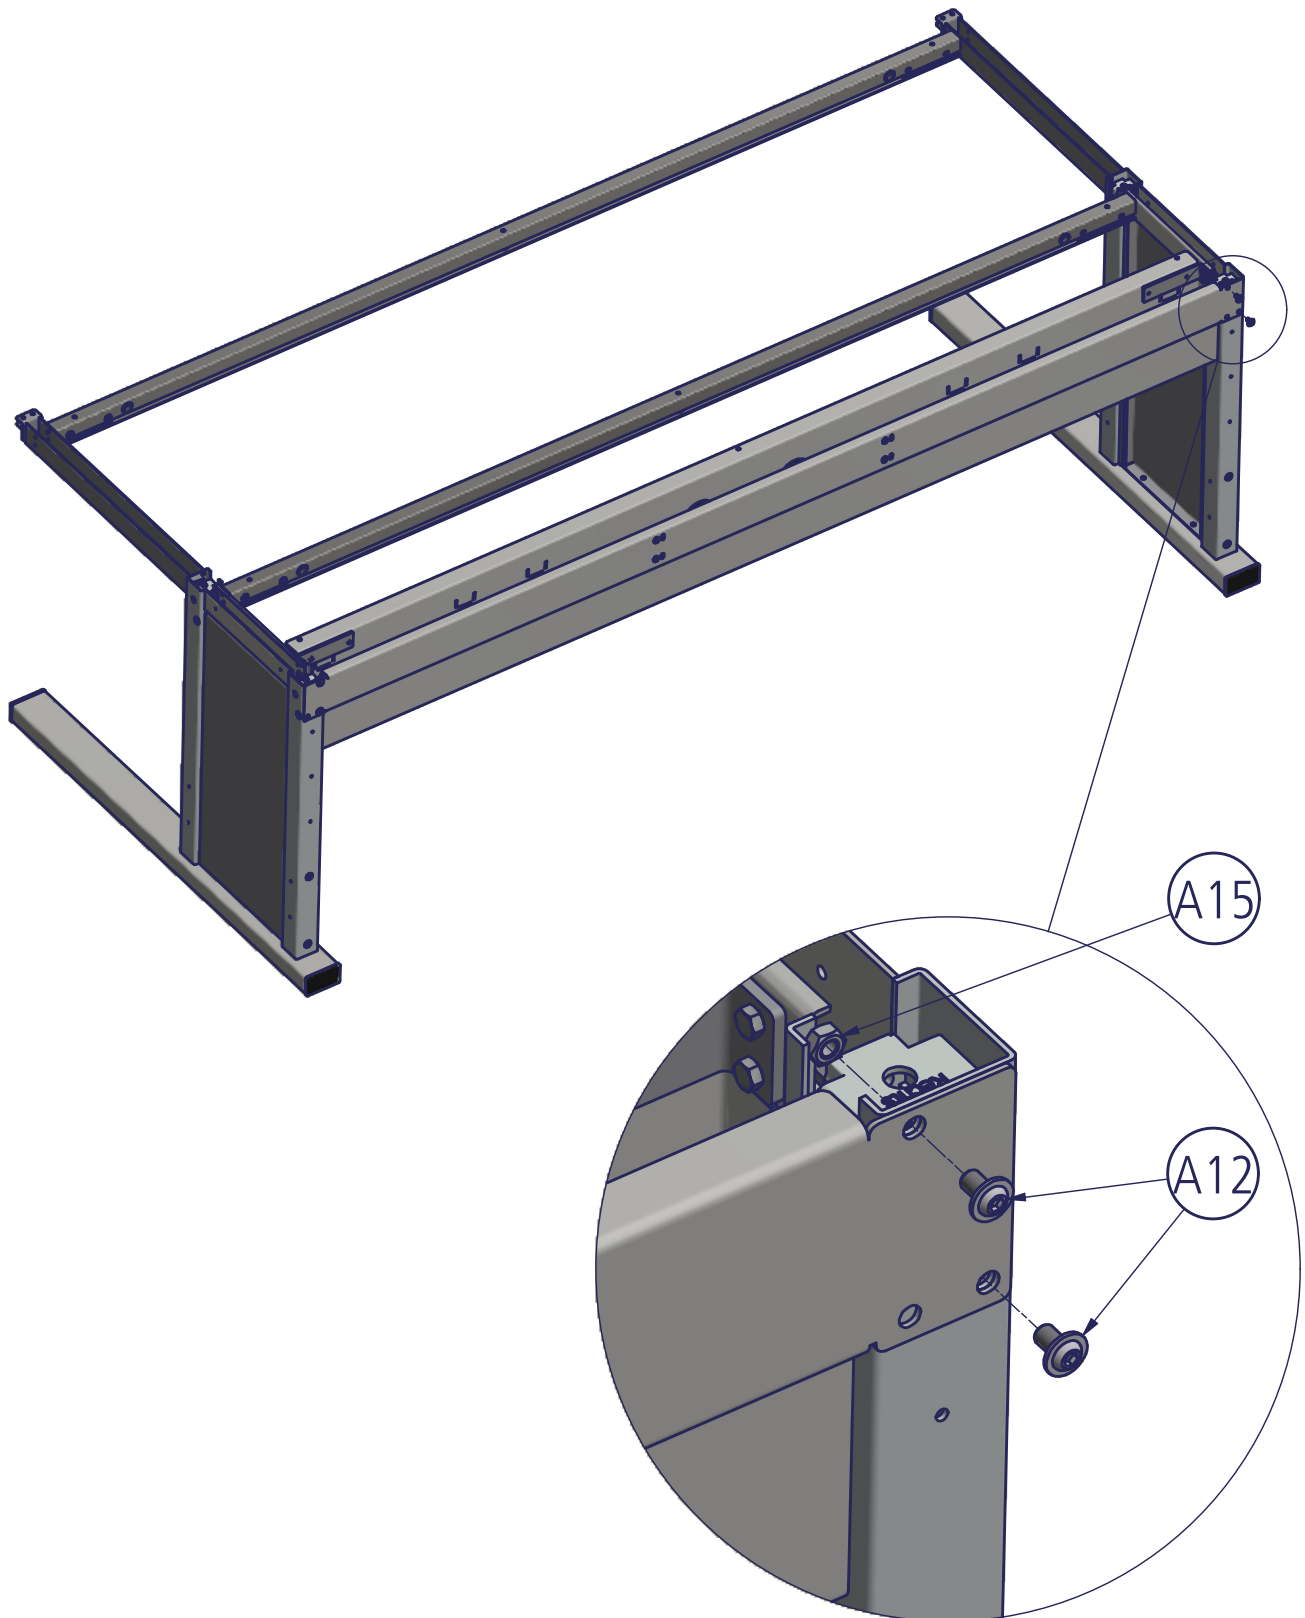


12.

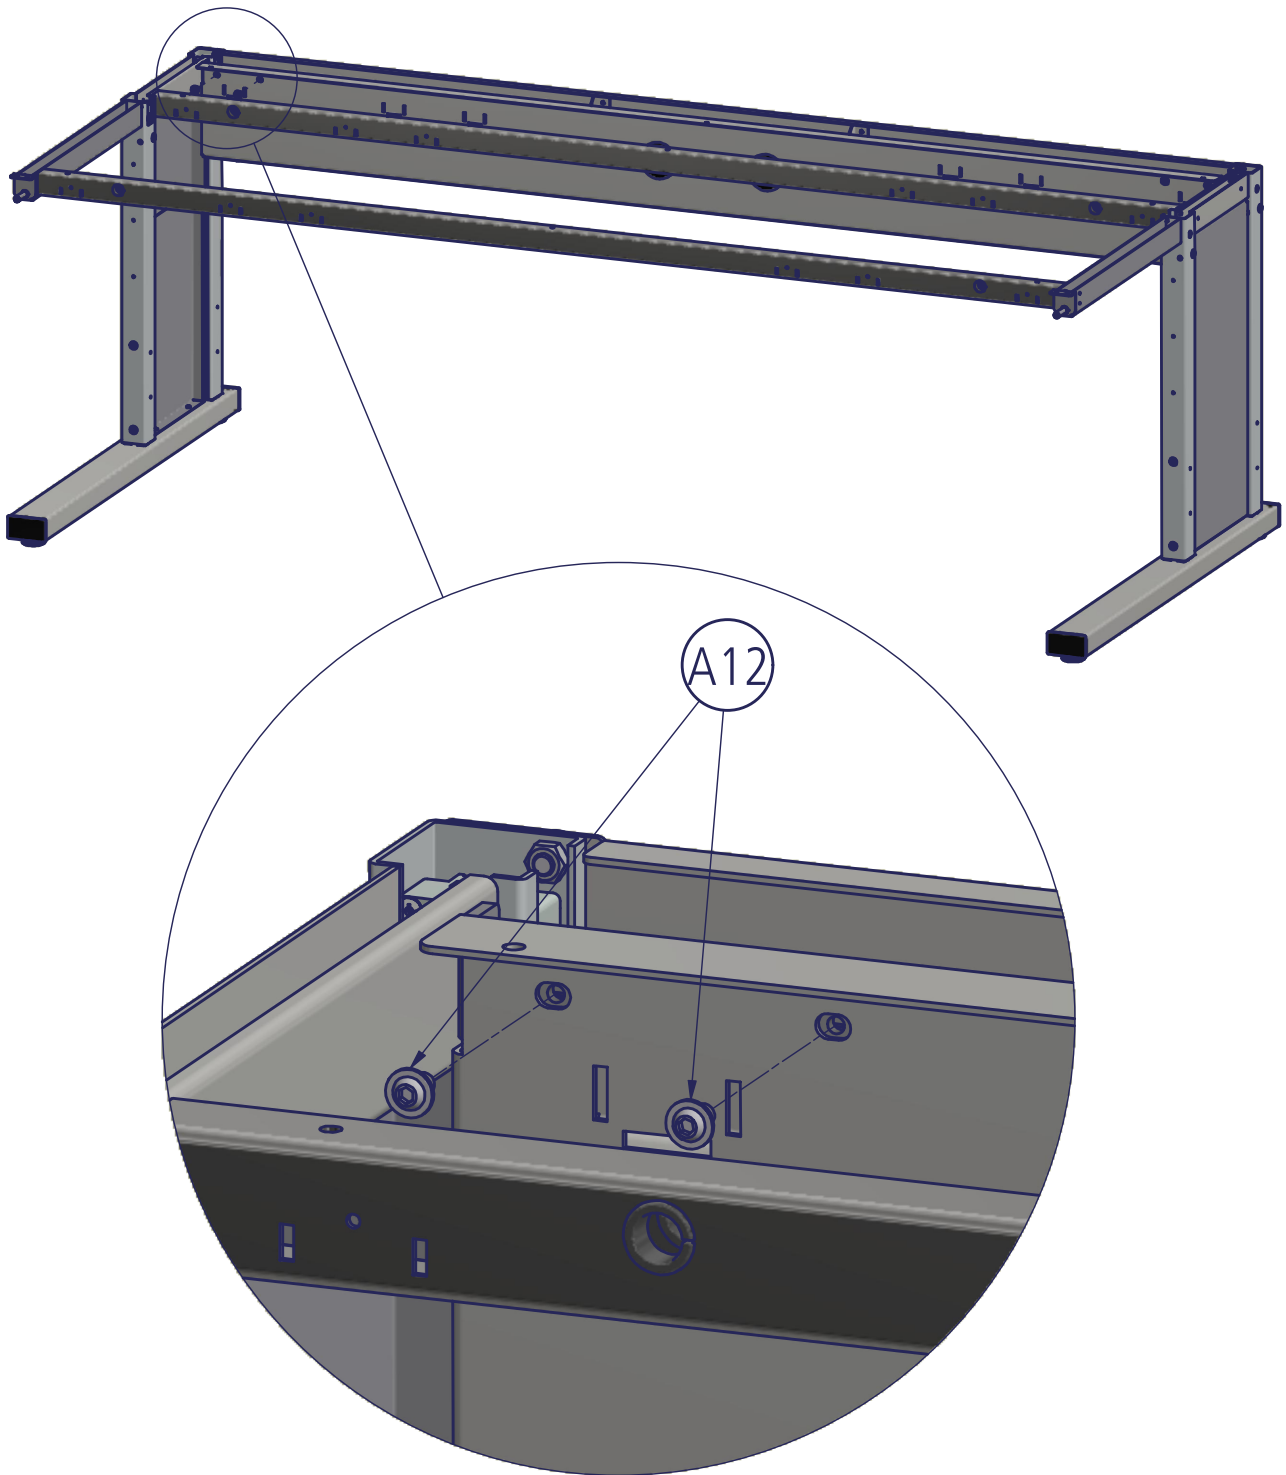


13.

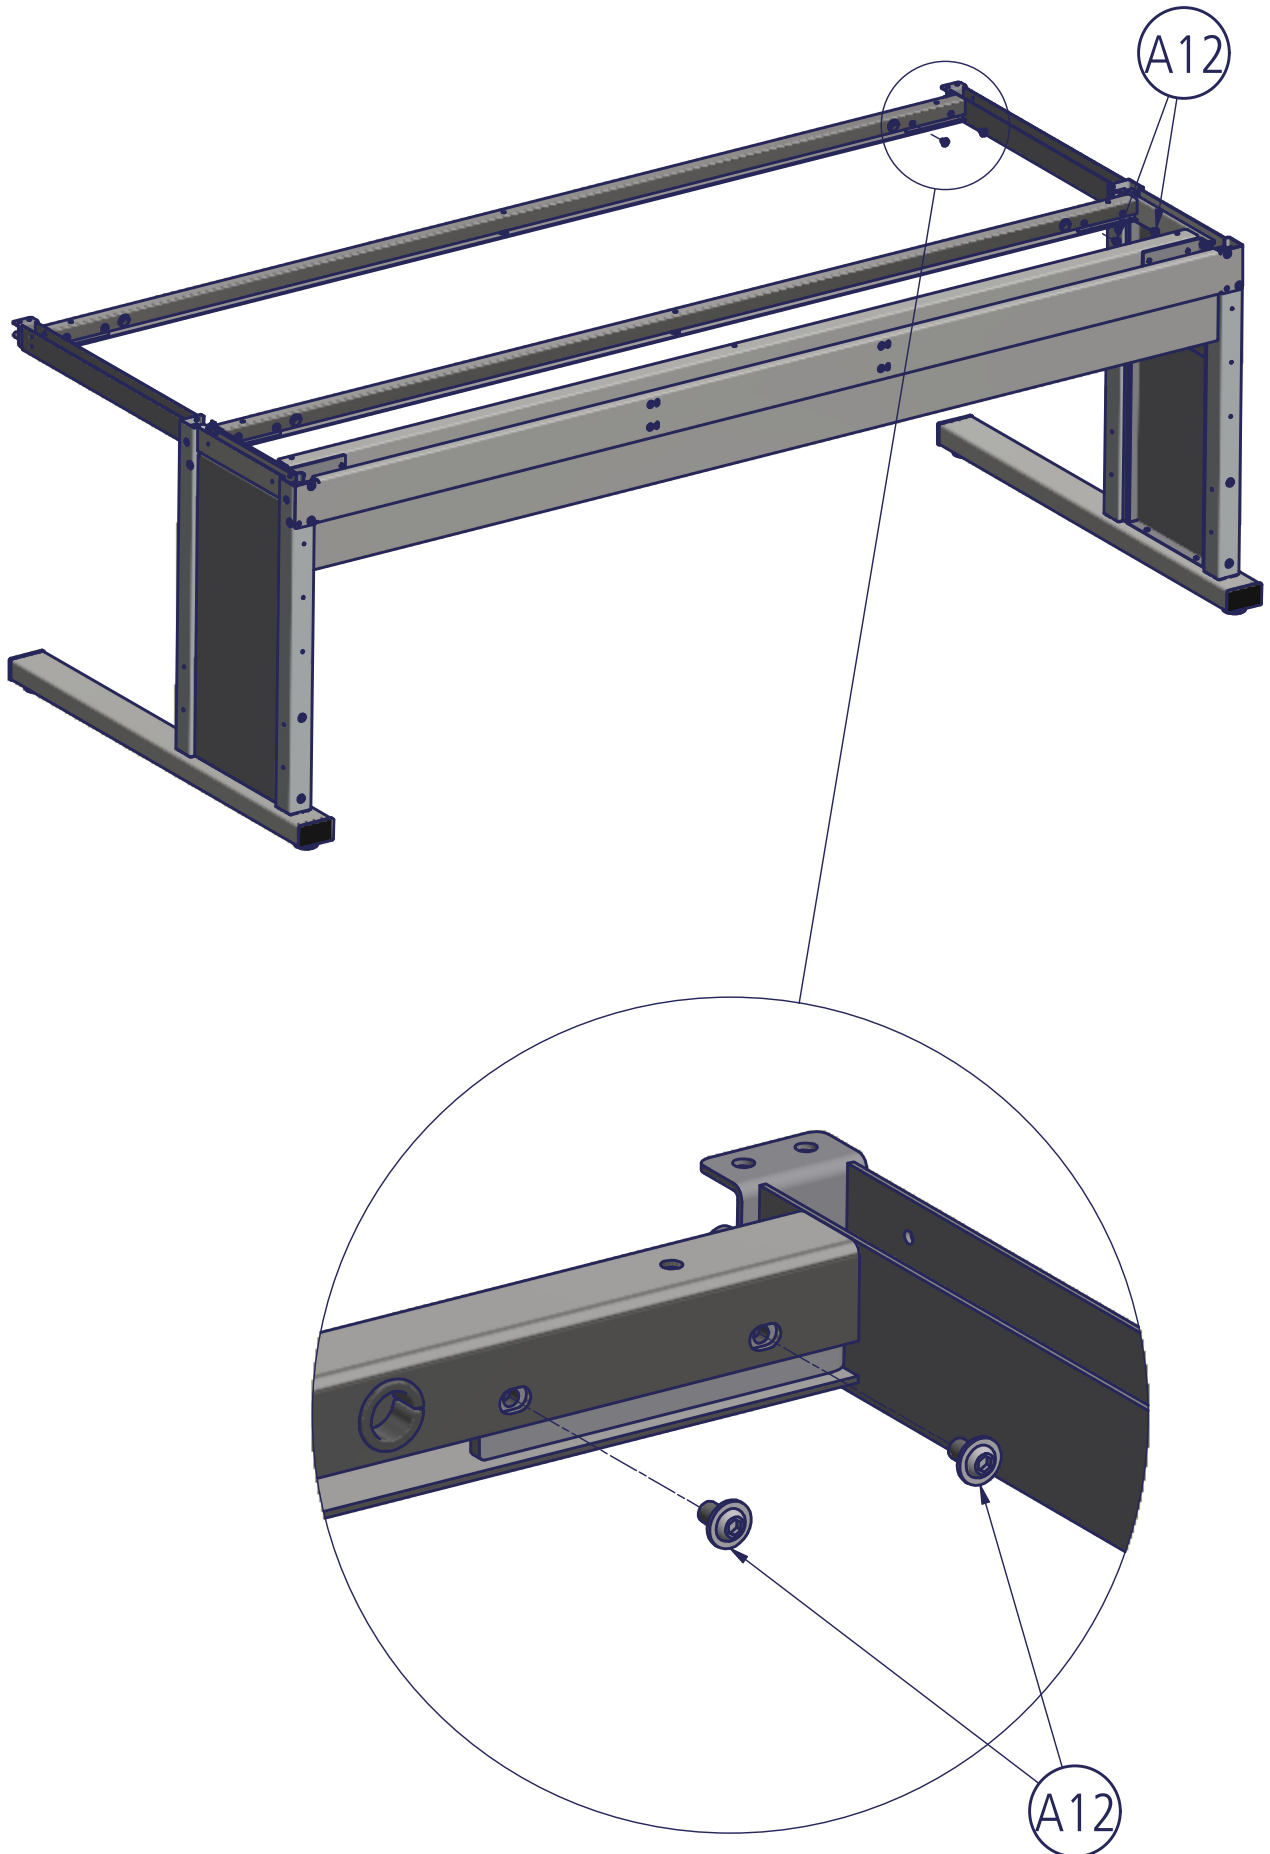



14.

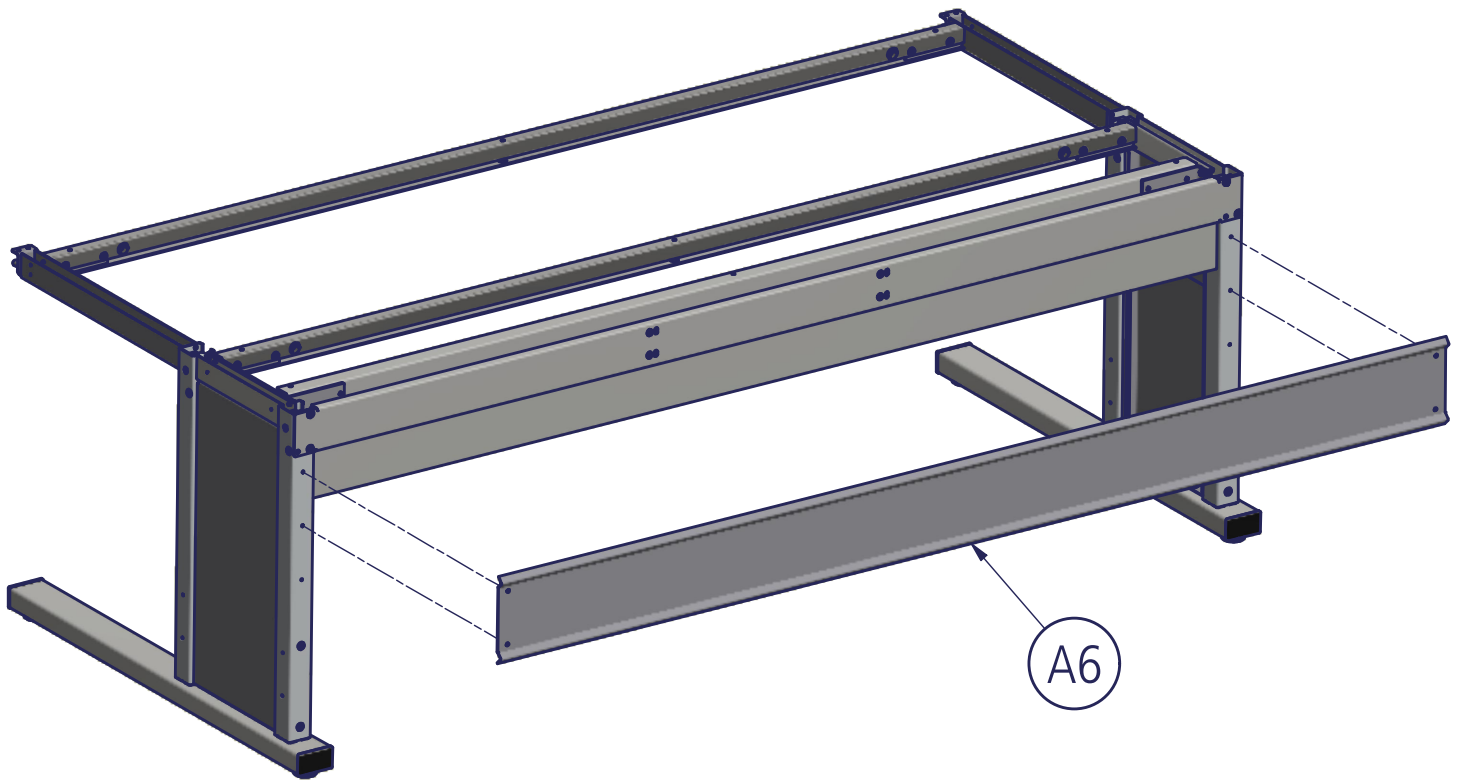



15.

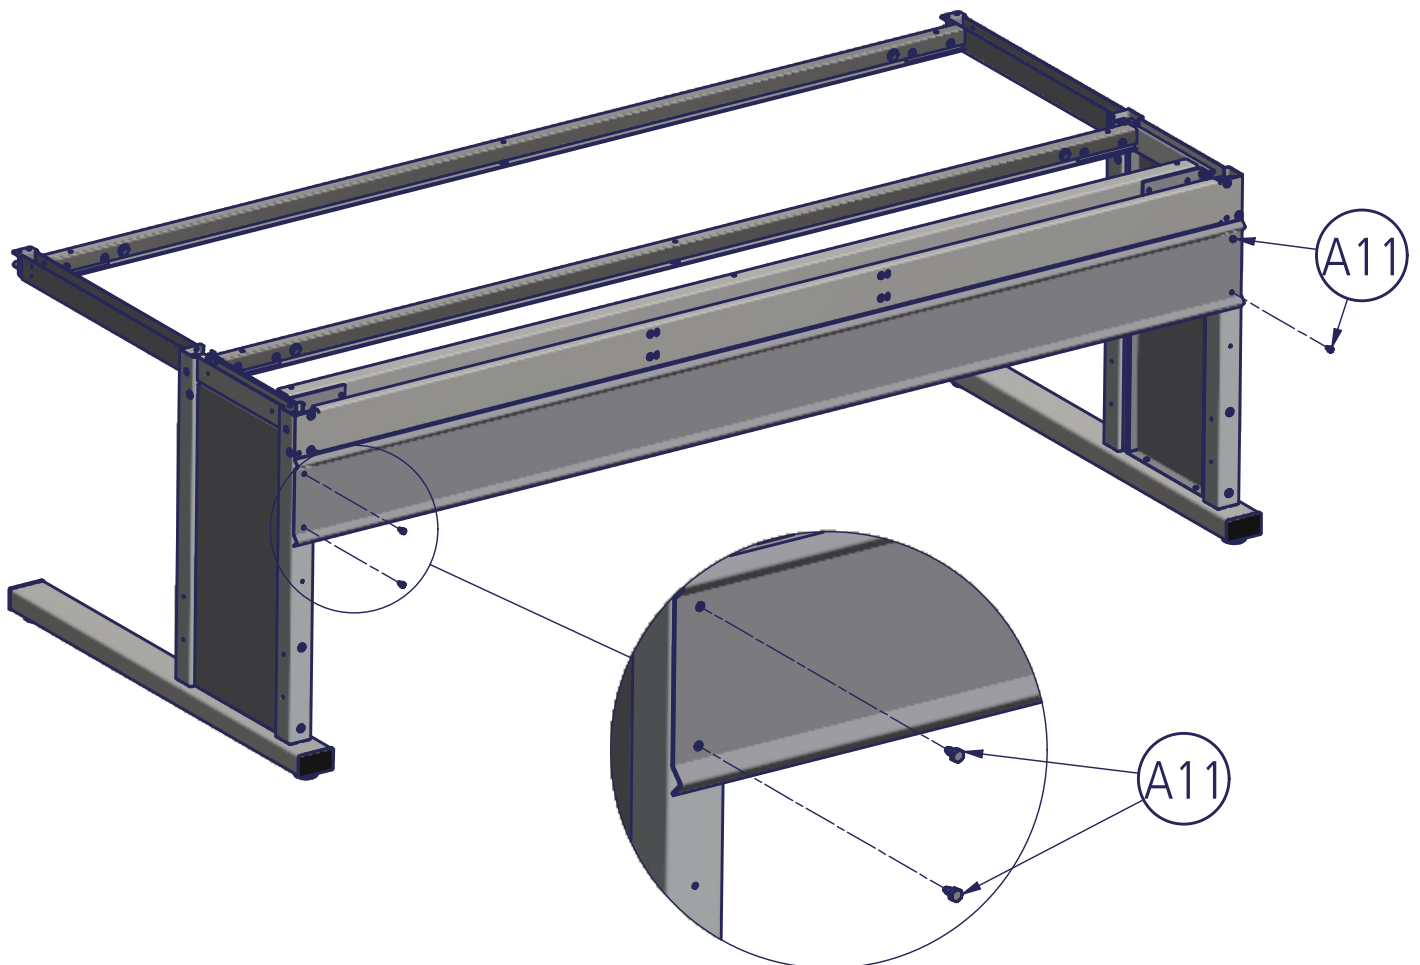



15.

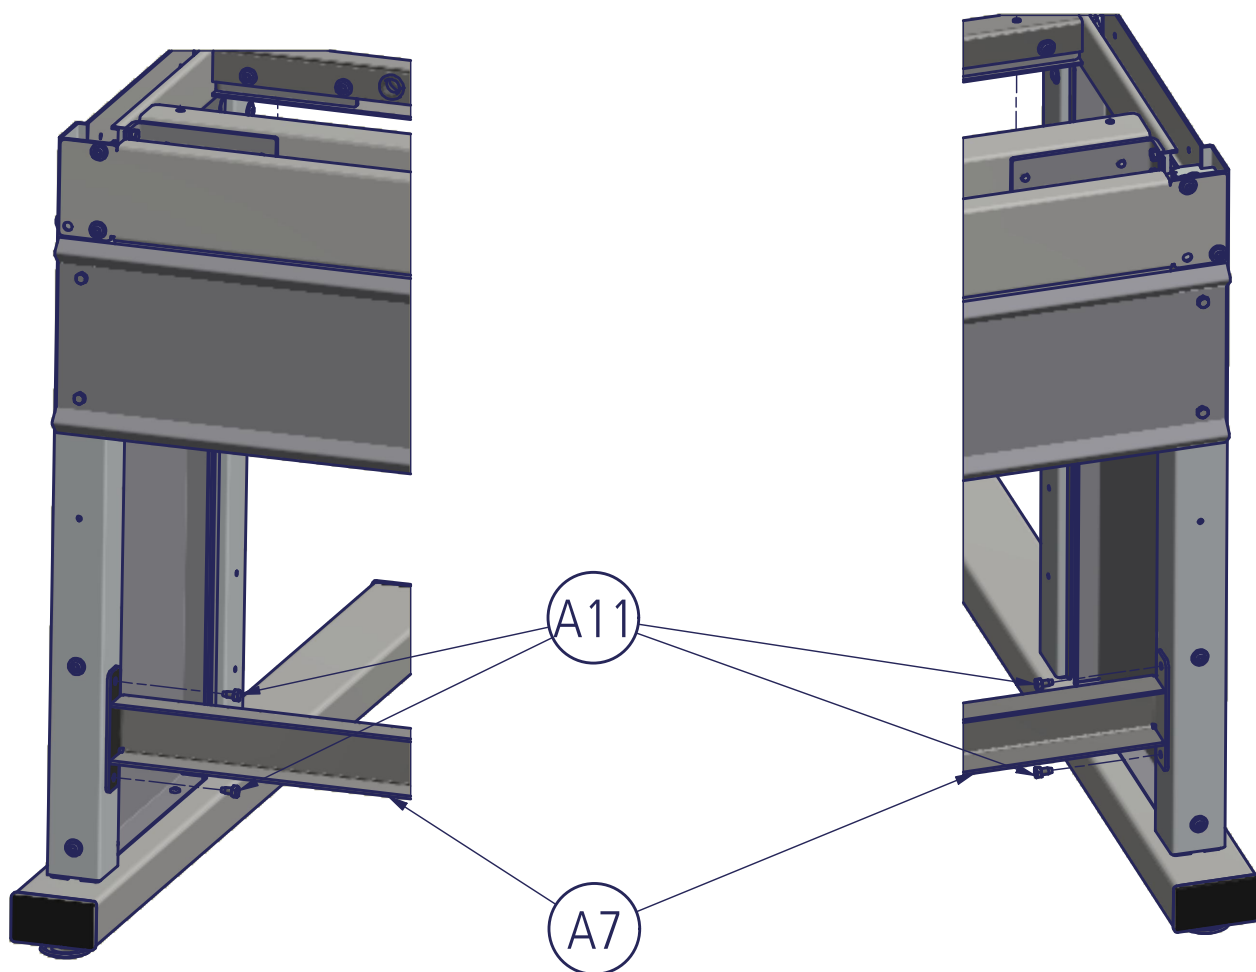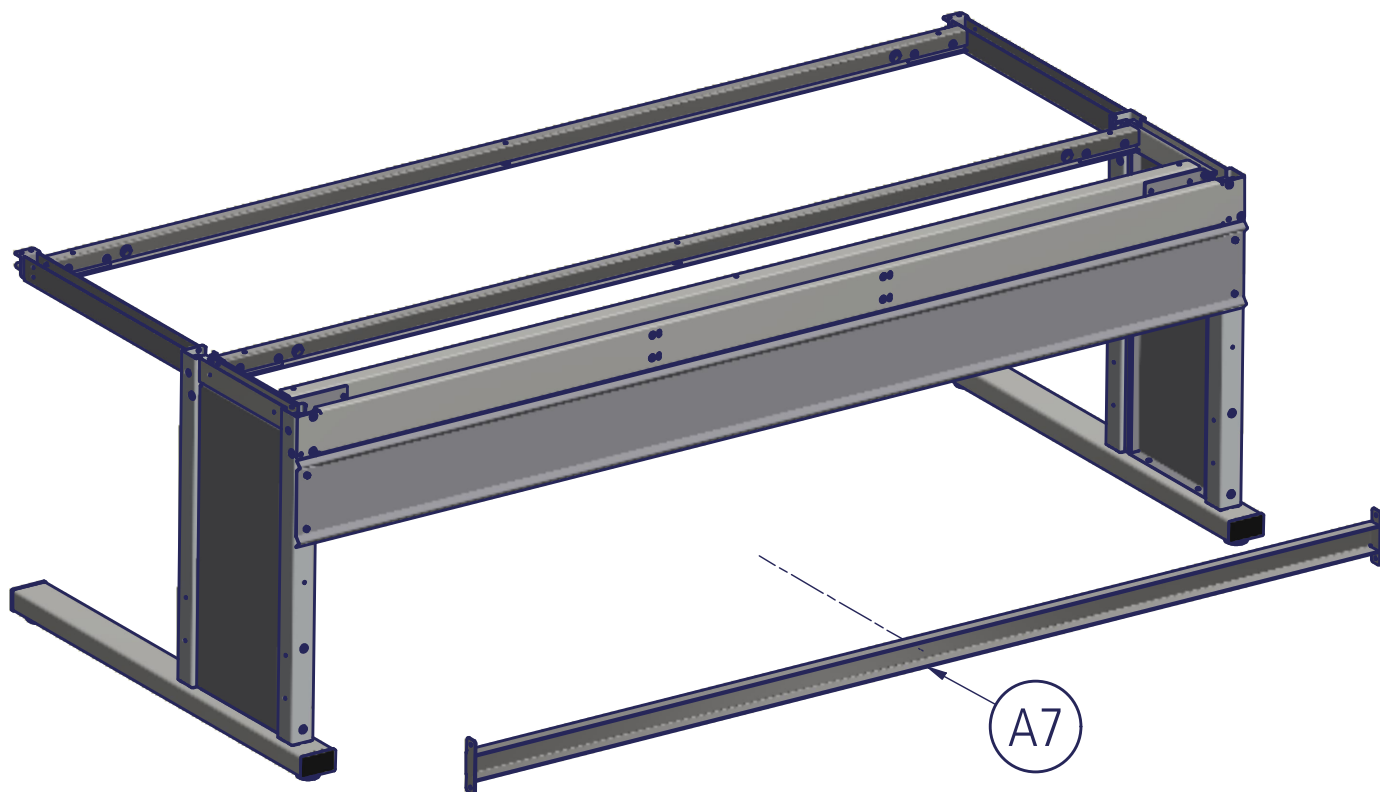

16.

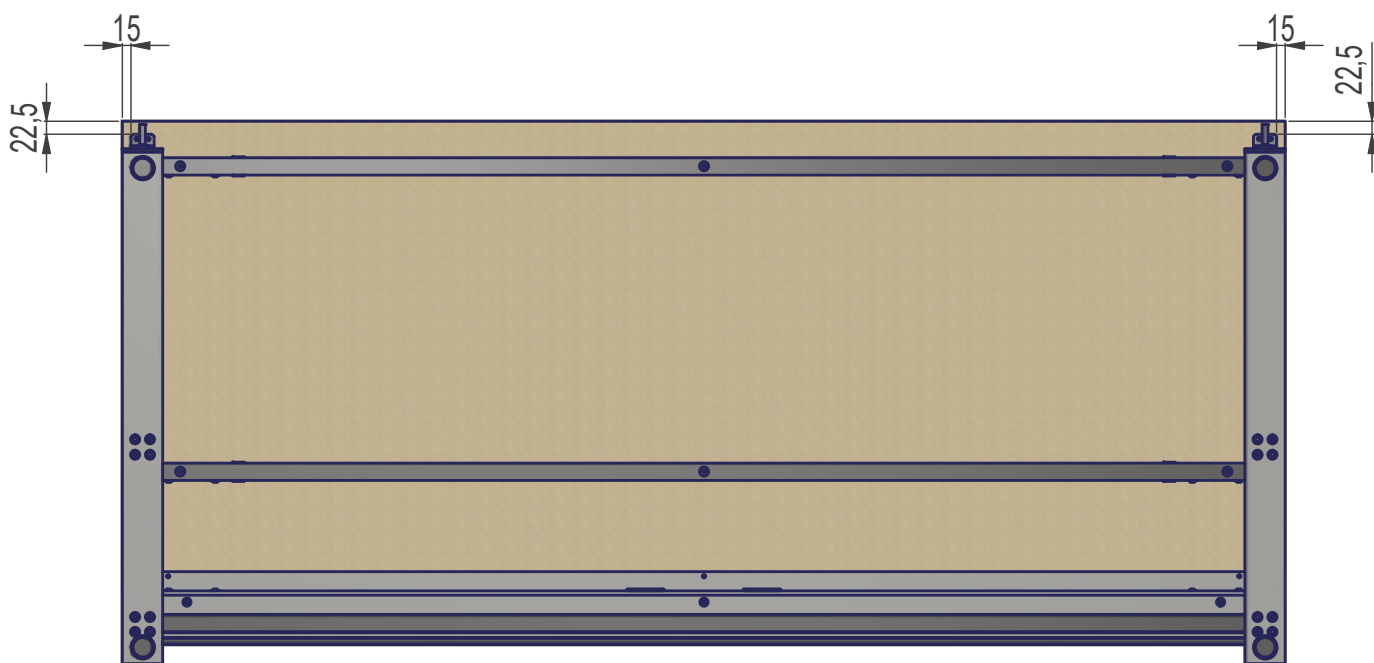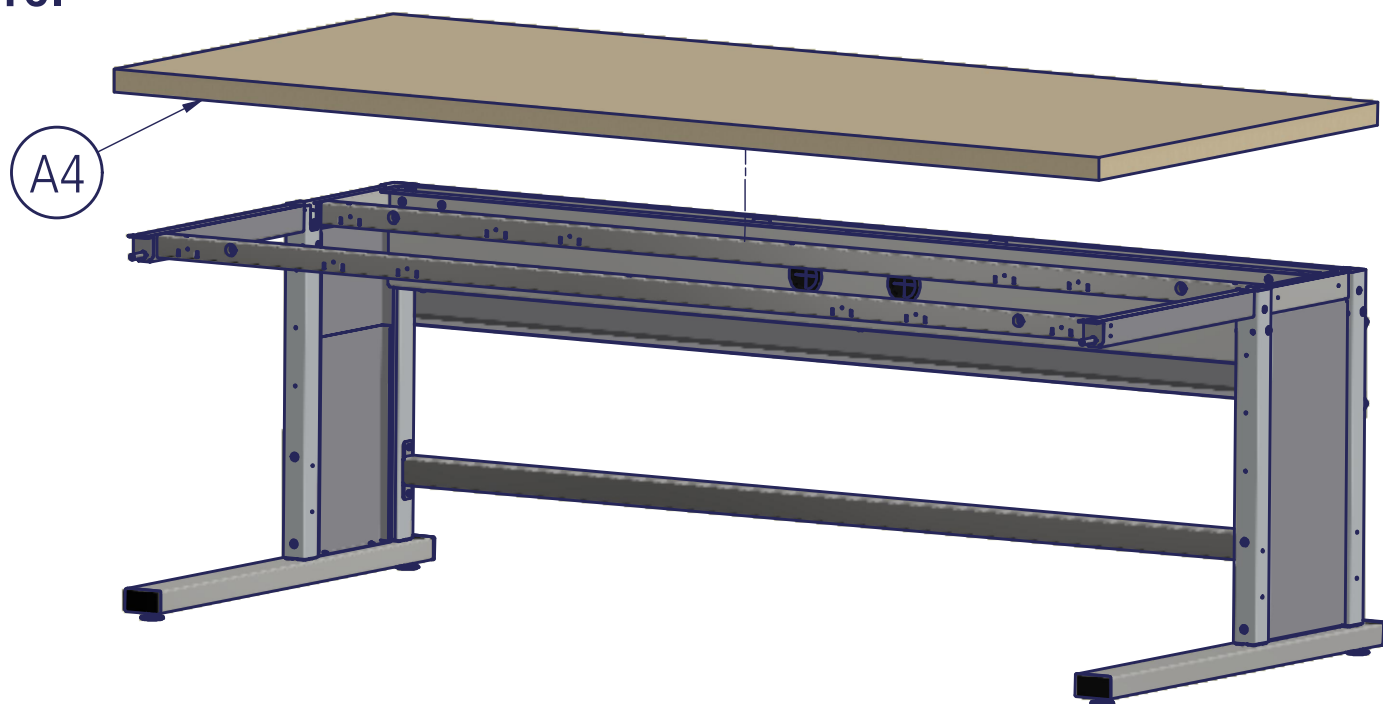


17.

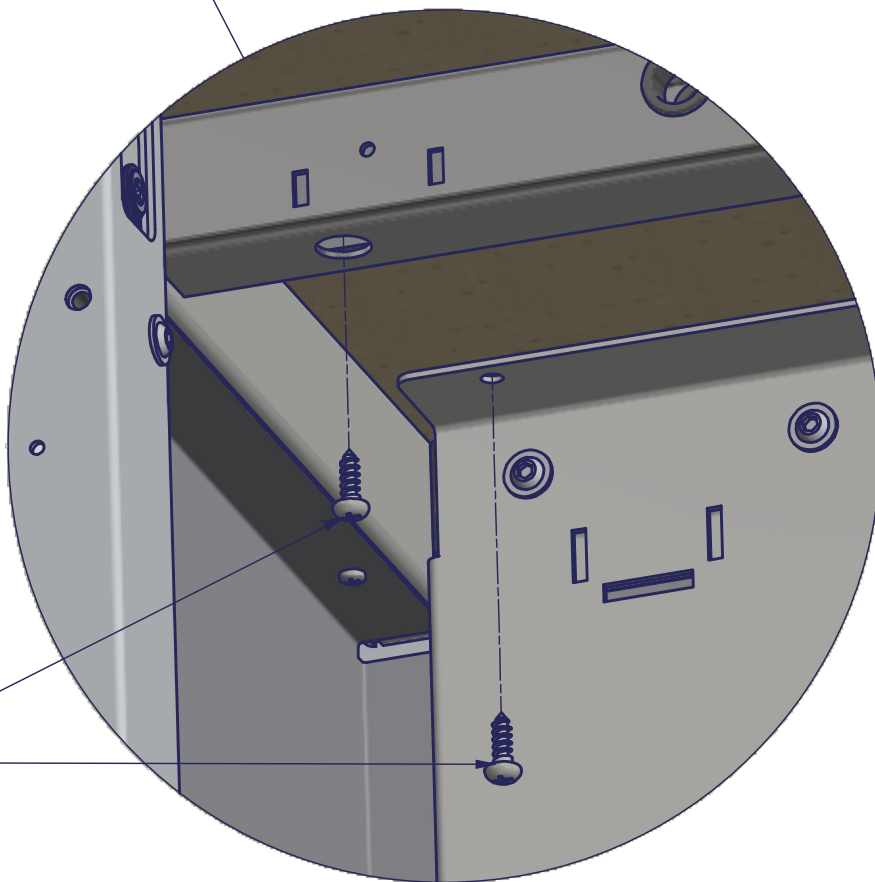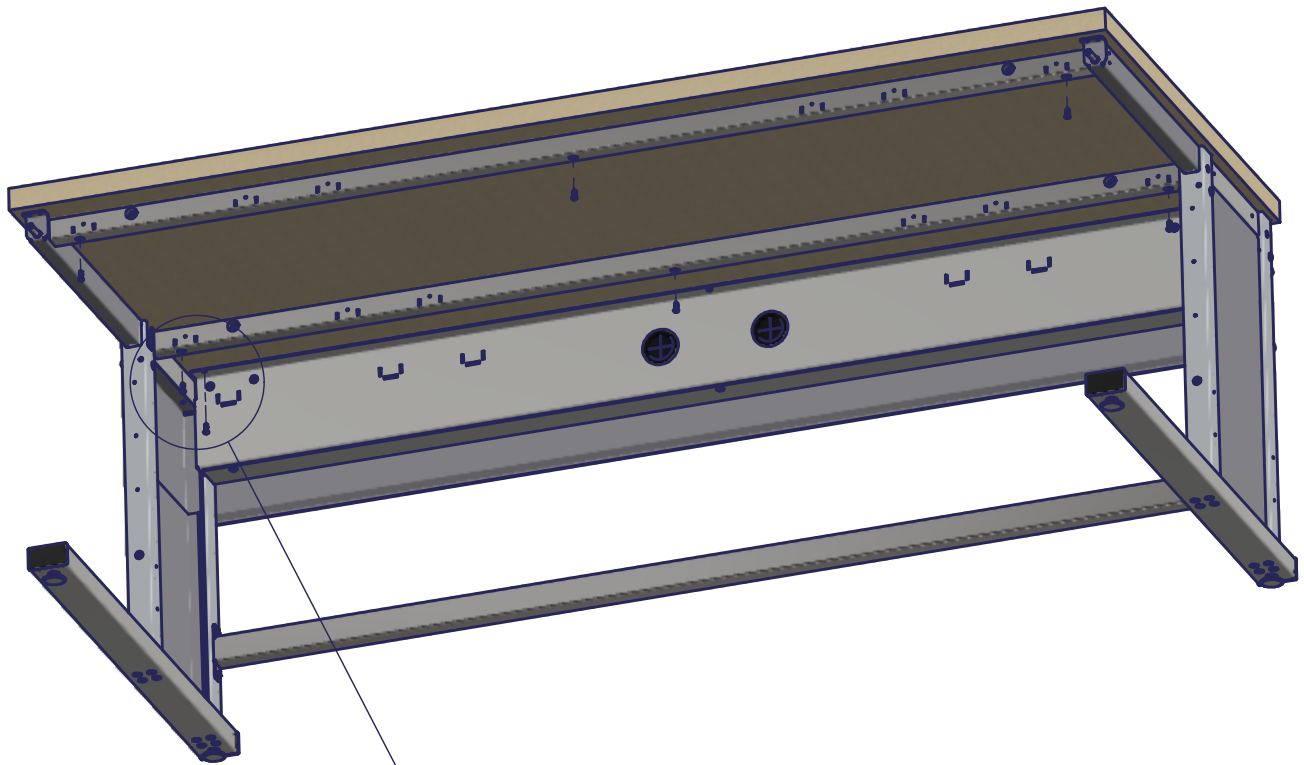


9x A13

18.

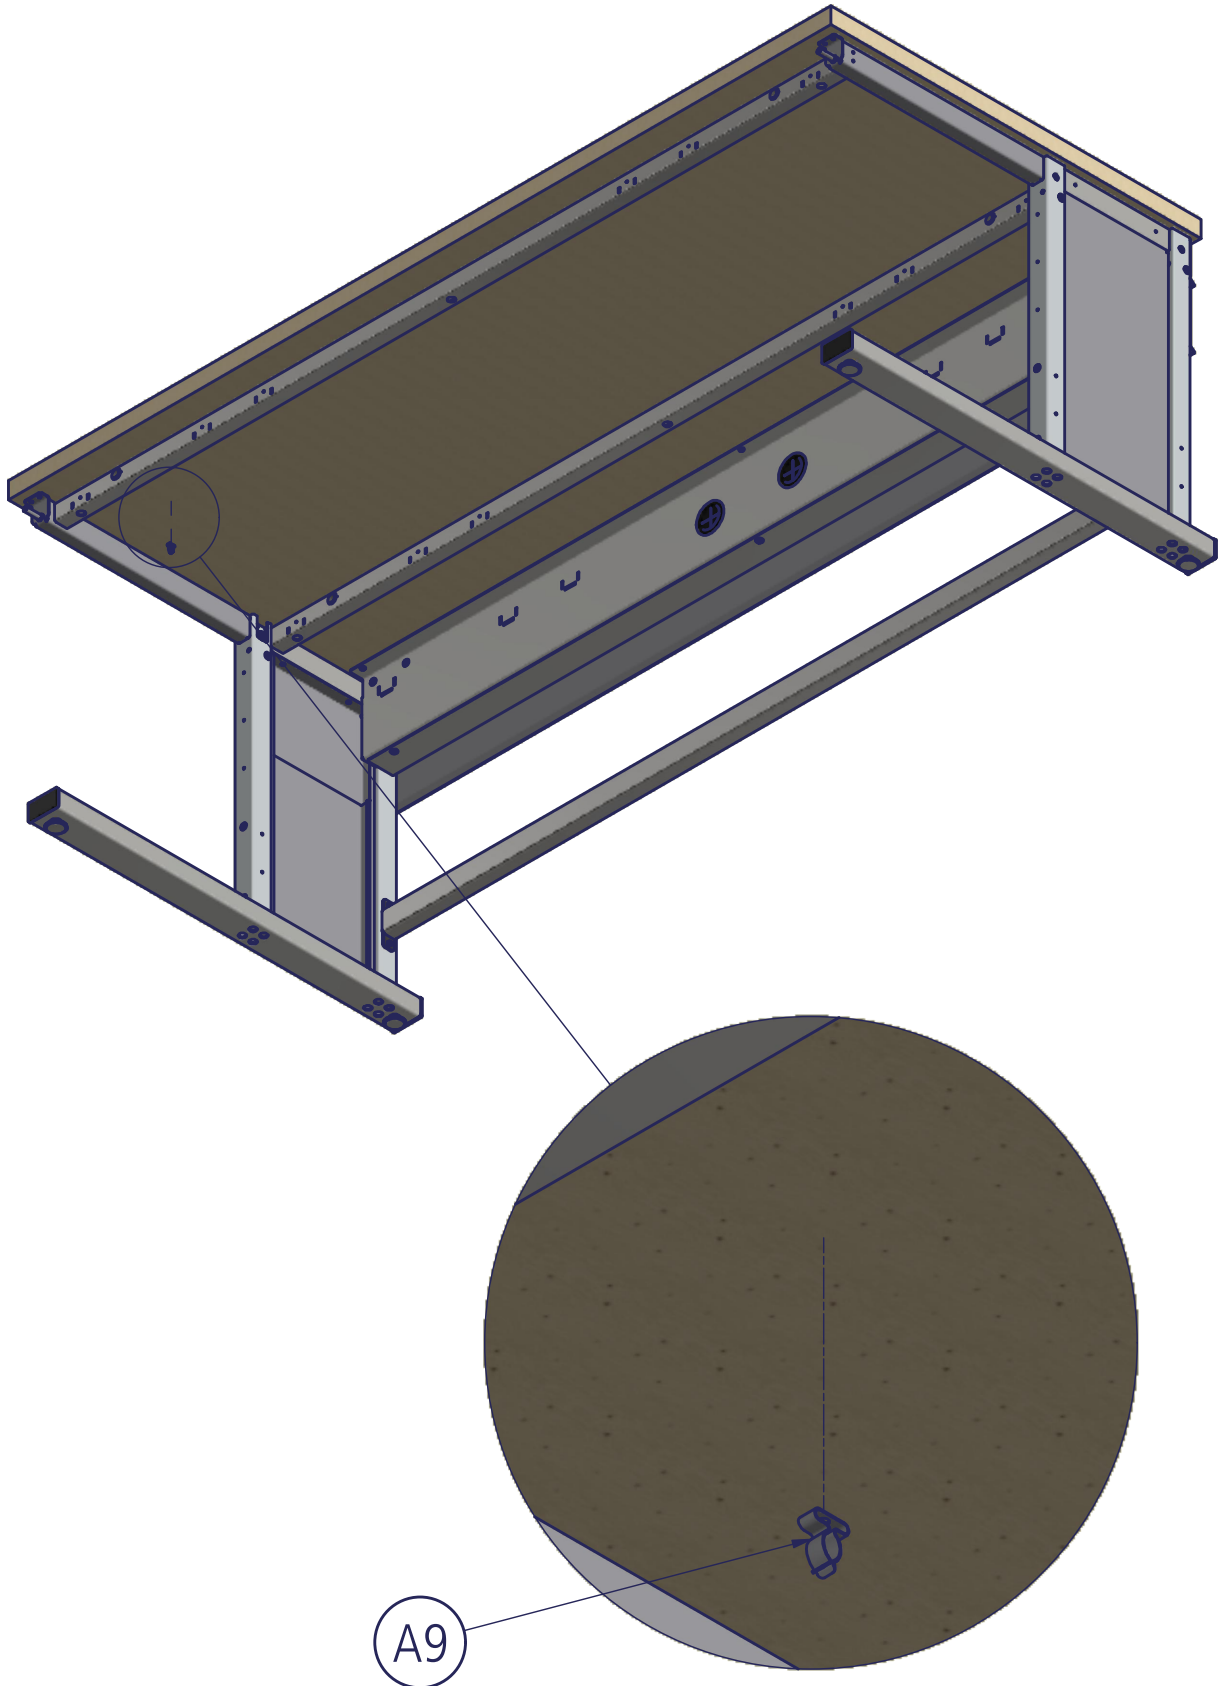

19.

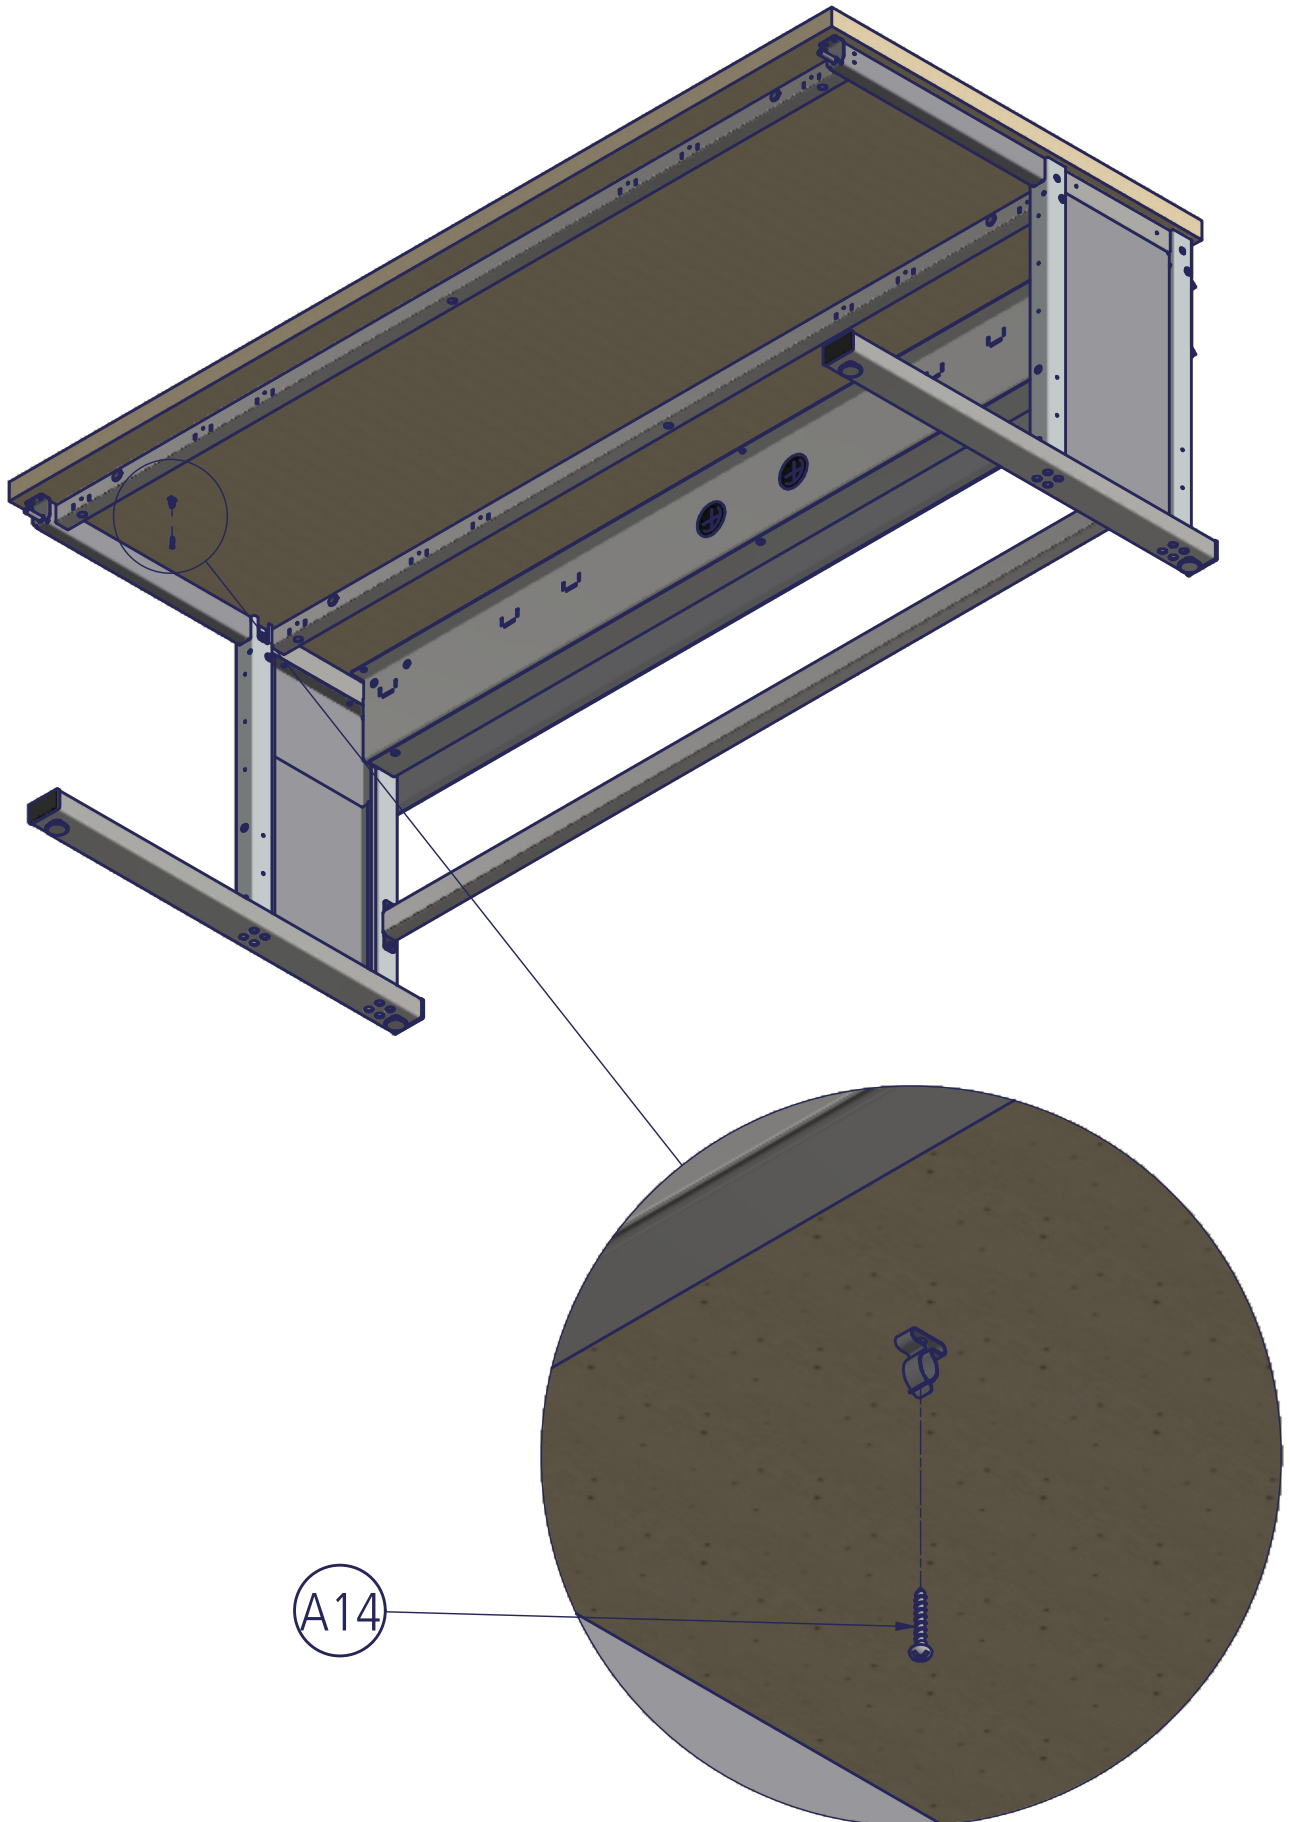

20.

